

HANDBOOK



EXPERT Tepee





PEUGEOT

WELCOME

Please note the following point: the fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. It is advisable to contact a PEUGEOT dealer to be shown the recommended equipment and accessories.

Your vehicle is fitted with only some of the equipment described in this document, depending on its trim level, version and the specification for the country in which it was sold.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

The new Expert Tepee has been designed to satisfy all your requirements in terms of practicality, comfort, safety and aesthetics. In order to get the most out of your vehicle, we suggest that you take a tour, from the cab to the seating area, with the "Handbook" in front of you.

The handbook presents the operation of the equipment available on board in detail.

PEUGEOT thanks you for your confidence and wishes you very happy motoring.






PRESENTATION


This handbook has been designed to familiarise you with your new vehicle from the moment you get behind the wheel and to describe the operating features.


Reading the handbook is made easy with the content consisting of 10 identified chapters, which can be located by means of a colour code specific to each one. Its sections cover, by subject, all of the functions of the vehicle in its most complete specification.

Chapter 8 gives all of the technical data relating to your vehicle. At the end of the document, diagrams of the outside and inside of the vehicle will assist you in locating equipment or functions and page numbers refer you to the relevant section of the handbook.

Within the chapters, symbols draw your attention to specific information:


-  directs you to the chapter and section which contains detailed information concerning a function,
-  indicates important information relating to use of the equipment,
-  alerts you to the safety of individuals and equipment on board.

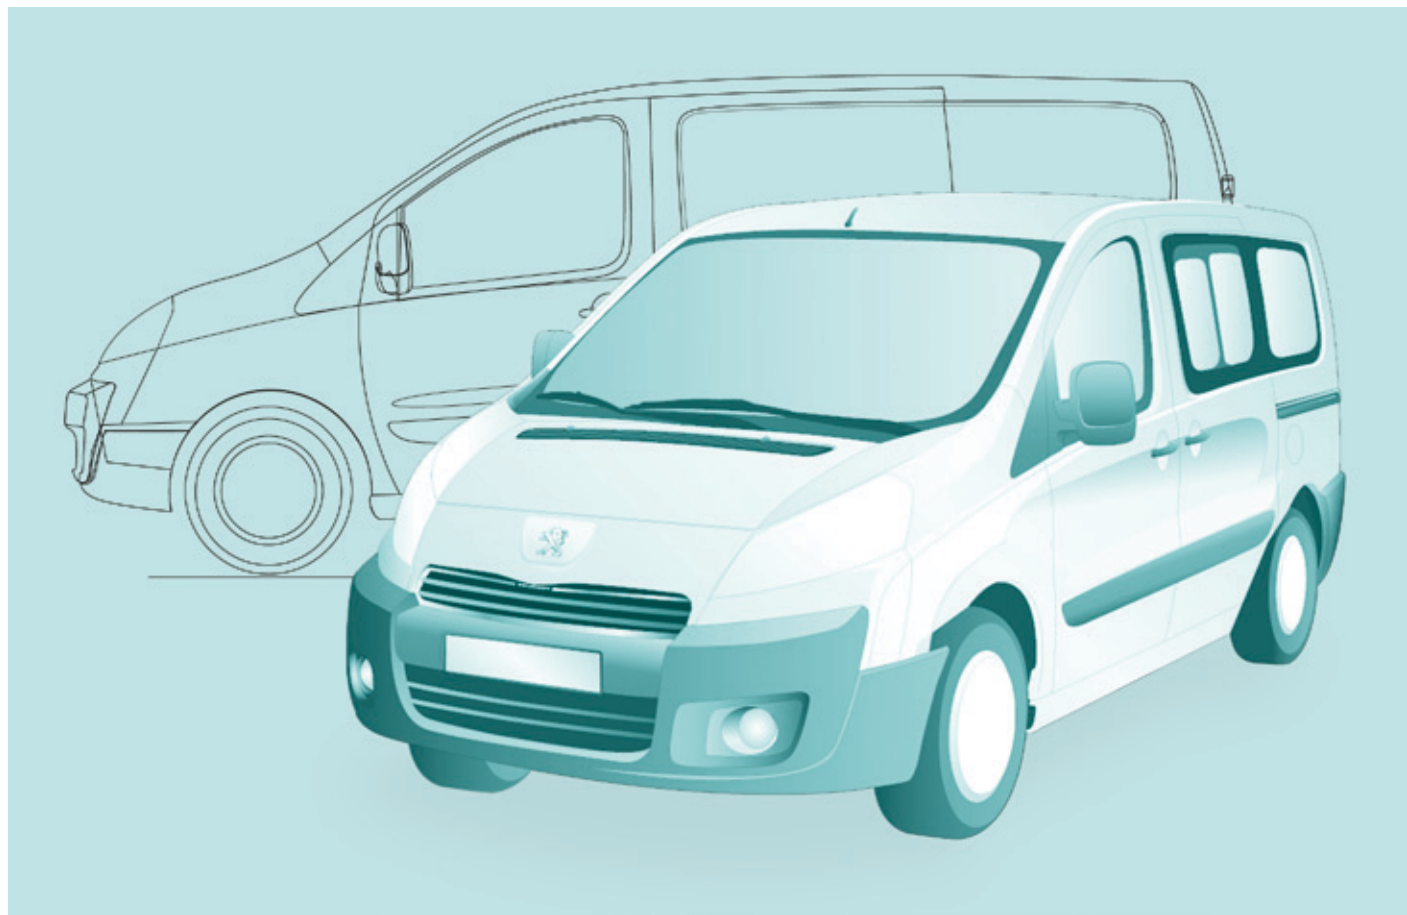

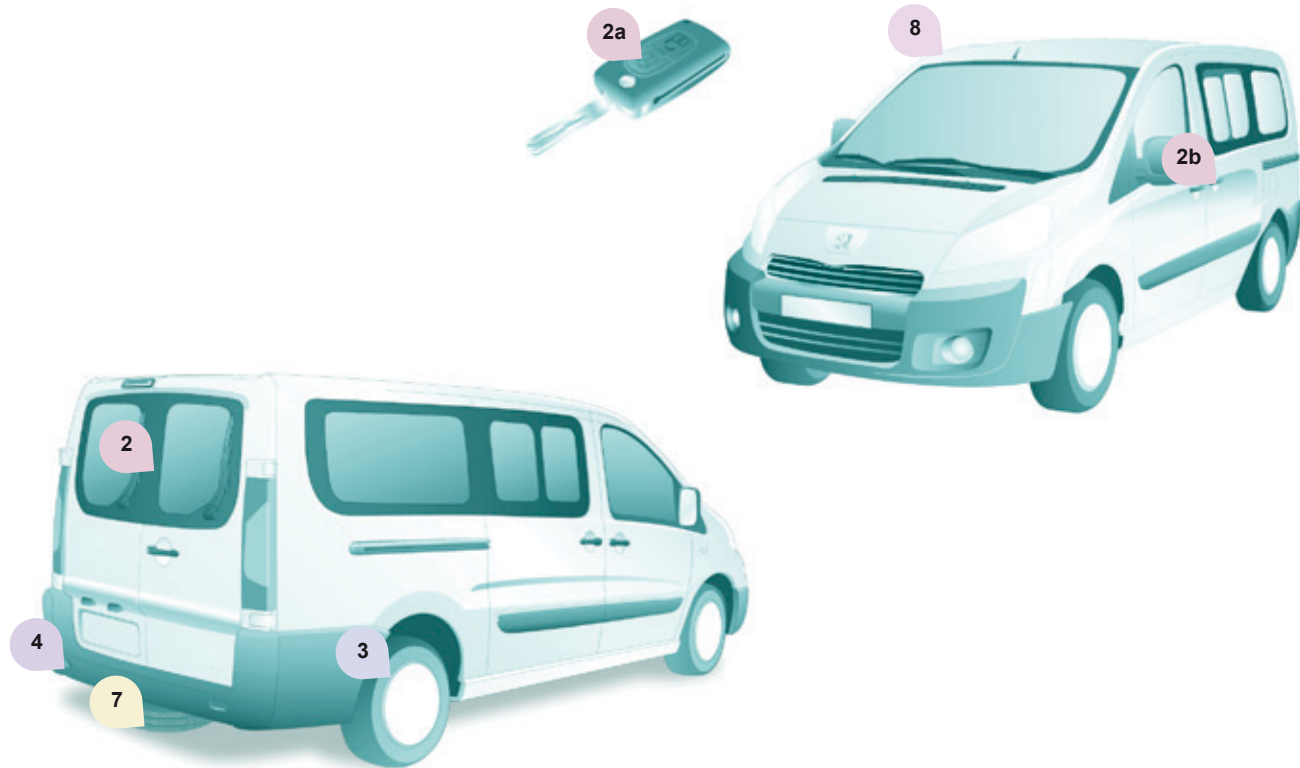

Exterior

8

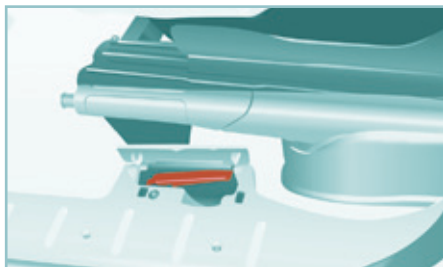

Opening the bonnet

Lift the cover at the foot of the left-hand seat and pull the release lever upwards.



Partially open the bonnet, lift the safety catch and raise the bonnet.



Secure the stay in one of the two notches, according to the height required, to hold the bonnet open.

6 ▶ 122




Towing eye

At the front, unclip the cover by pressing it at the bottom.

At the rear, unclip the cover using a coin or the flat part of the towing eye.


7 ▶ 153

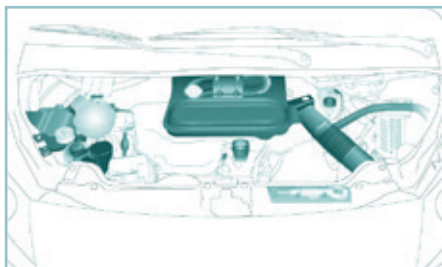

Diesel engines

Take care when working under the bonnet.

Refer to "Levels" in section 6 for advice on use of the fluids.

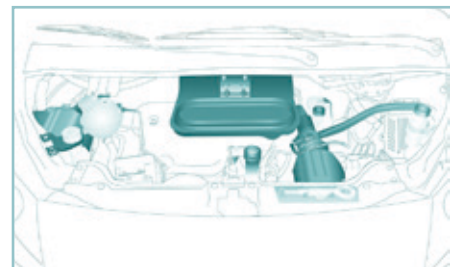

Petrol engine


6 ▶ 123

6 ▶ 124



INSTRUMENTS AND CONTROLS

1. Lighting and direction indicator control stalk.
2. Instrument panel with screen.
3. Wipers, screenwash, trip computer control stalk.
4. Gear lever.
5. Ignition.
6. Audio system controls.
7. Driver's airbag, horn.
8. Steering wheel height and reach adjustment.
9. Headlamp beam adjustment.
10. Cruise control, speed limiter switches.
11. 12 volt accessory socket (120 W max) of the cigarette lighter type.
12. Ashtray.
13. Glove box, auxiliary socket, passenger's airbag deactivation switch.
14. "Grip control".

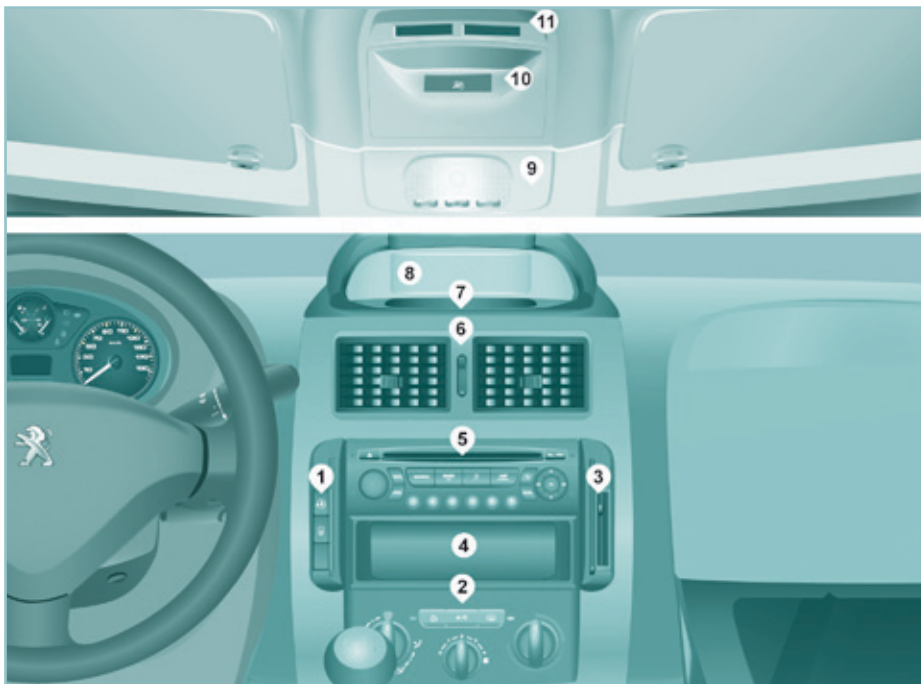

ADJUSTING THE TIME


Depending on the configuration of your vehicle, you have either:

- a centre console with screen: refer to "Adjusting the date and time" in section 9,
- a centre console without screen: refer to "Instruments and controls" in section 2.

CENTRE CONSOLE AND OVERHEAD STORAGE UNIT

1. Location of controls:
 - electric child lock,
 - central locking/unlocking.
2. Heating and/or air conditioning controls.
3. Location of the ticket/card storage or controls:
 - deactivation of the DSC,
 - deactivation of the interior protection alarm, alarm LED,
 - deactivation of the parking sensors.
4. Storage compartment.
5. Audio equipment or storage compartment.
6. Central adjustable vents.
7. Hazard warning lamps switch.
8. Screen or storage compartment.
9. Courtesy lamp.
10. Passenger's airbag deactivated warning lamp.
11. Location of the ticket/card storage, rear ventilation deactivation switch, heated seat controls.

SITTING COMFORTABLY

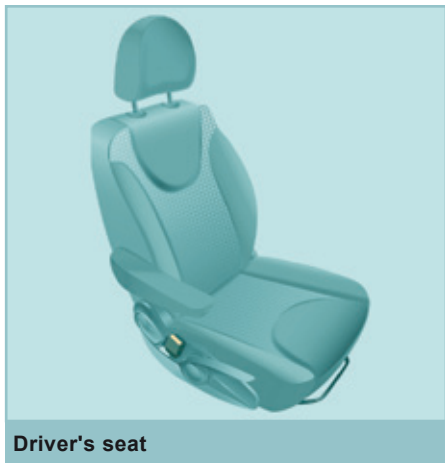

1. Forwards-backwards adjustment.



2. Backrest angle.



3. Cushion height.



4. Lumbar.



5. Head restraint height.



Steering wheel

Adjust the steering wheel for height and reach.

2 ▶ 44



Mirrors

Manual adjustments.



Electric windows

3 ▶ 93



Seat belts

Height adjustment.
Fastening.


4 ▶ 100



Electric adjustments, electric folding / unfolding.

3 ▶ 91

SEEING CLEARLY

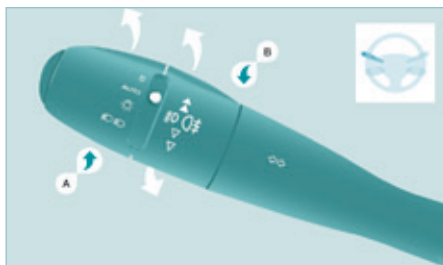

Lighting control stalk



Lighting off.



Sidelamps.



Main beam headlamps (blue).




Dipped beam headlamps (green).

AUTO

AUTO, automatic illumination of headlamps.

3 ▶ 46

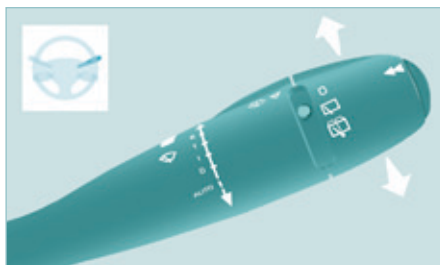

Wiper control stalk

- 2 fast.
- 1 normal.
- I intermittent.
- 0 off.
- ↓ single wipe.



AUTO, press the stalk down.

3 ▶ 49



Changing bulbs

In bad weather or in winter, check that the lamps are not covered with mud or snow.

7 ▶ 143

DRIVING SAFELY

14

Emergency or assistance call

This system allows an emergency or assistance call to be sent to the dedicated PEUGEOT centre.

For more information on the use of this system, refer to section 9, "Technology on board".



PEUGEOT Connect Sound (RD5)

9



PEUGEOT Connect Navigation (RT6)

This easy to use audio system offers a map of Europe on SD Card, a Bluetooth telephone connection and the playing of MP3 / WMA files.

9



Cruise control / Speed limiter

For the cruise control, the vehicle speed must be higher than 25 mph (40 km/h) with at least 4th gear engaged

For the speed limiter, the minimum vehicle speed that can be programmed is 20 mph (30 km/h).

3 ▶ 51, 54

Fixed speed limiter

3 ▶ 53



Grip control

This allows the vehicle to make progress in most conditions of low grip.

4 ▶ 98

CAB FITTINGS



Overhead storage unit

3 ▶ 83



Glove box

3 ▶ 81



Storage compartment


3 ▶ 81

REAR FITTINGS



Rear seats

3 ▶ 73

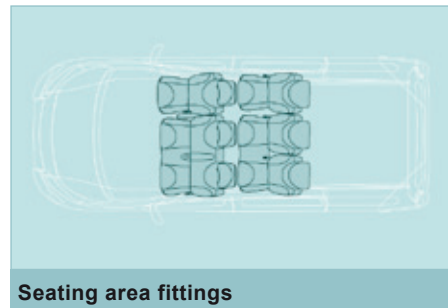

Seating area fittings

3 ▶ 85

CHILD SAFETY



Seat and bench configurations

3 ▶ 80



Electric child lock

2 ▶ 25



Child surveillance mirror

3 ▶ 92




Rear windows

3 ▶ 92



Safety anti-pinch

3 ▶ 93

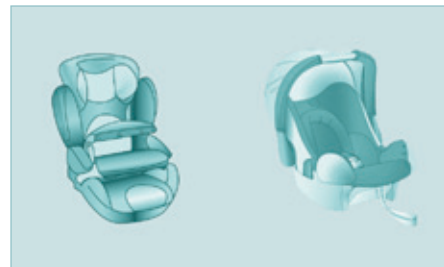


Child seats

4 ▶ 107

VENTILATION




3 ▶ 57

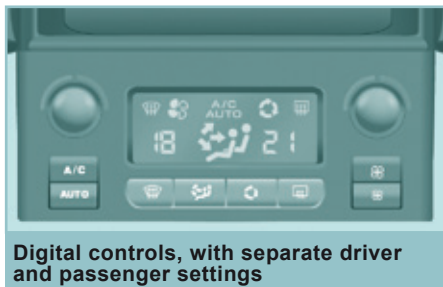

3 ▶ 59

Recommended settings					
For optimum use of the system, we recommend:					
If I require...	Air distribution	Temperature	Air flow	Air recirculation	AC
Heating					-
Cooling					A/C
Demisting Defrosting					

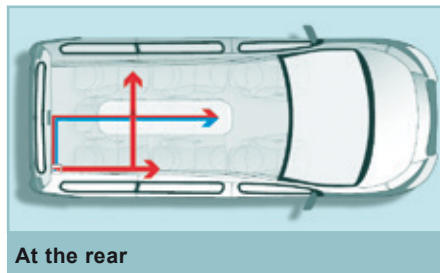

3 ▶ 65

ECO-DRIVING

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO₂ emissions.

Optimise the use of your gearbox

With a manual gearbox, move off gently and change up without waiting. During acceleration change up early.

With an automatic or electronic gearbox, give preference to automatic mode and avoid pressing the accelerator pedal heavily or suddenly.

The gear shift indicator invites you engage the most suitable gear: as soon as the indication is displayed in the instrument panel, follow it straight away.

For vehicles fitted with an electronic or automatic gearbox, this indicator appears only in manual mode.

Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO₂ emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.

Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter, passenger compartment filter...) and observe the schedule of operations recommended in the warranty and maintenance record.

When refuelling, do not continue after the third cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.



ACCESS

REMOTE CONTROL

Central unlocking



Press this button to unlock your vehicle, cab and rear doors.

The direction indicators flash twice and the door mirrors unfold

(unless folding was selected using the interior control, refer to the "Mirrors and windows" section of chapter 3).

Central locking



Press this button to lock your vehicle, cab and rear doors.

The direction indicators flash once and the door mirrors fold.

If one of the doors is open or is not closed correctly, the central locking will not work.

Deadlocking

If your vehicle is fitted with deadlocking, a **second press** on the closed padlock on the remote control within five seconds after locking changes the locking to deadlocking. This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Deadlocking renders the exterior and interior door opening handles inoperative: do not leave anyone inside the vehicle when it is deadlocked.

If deadlocking is activated from inside the vehicle, it will change to normal locking when the vehicle is started.

Folding / unfolding the key



Press this button to release the key from its housing.

To fold the key, press the chromed button then fold the key

into the housing. If you do not press the button, the mechanism may be damaged.

Good practice

Take care not to allow the remote control to come into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (key ring, ...) weighing on the shaft of the key in the switch, may cause a malfunction.



KEY

This locks and unlocks the doors on the vehicle, opens and closes the fuel filler cap, as well as starting and stopping the engine.

REMOTE CONTROL

Changing the battery

Battery ref.: CR1620 / 3 volts.

The "battery flat" information is given by an audible signal, accompanied by a message in the screen.

To replace the battery, unclip the casing using a coin at the ring.

If the remote control does not work after the battery has been changed, reinitialise the remote control.



There is a risk of damage if the replacement battery is not the correct type.

Use only identical batteries or batteries of an equivalent type to those recommended by PEUGEOT dealers.

Do not discard the remote control batteries, they contain metals which are harmful to the environment.

Deposit them at a PEUGEOT dealership, or at an authorised collection point.

Reinitialising the remote control

Following changing of the remote control battery or disconnection of the vehicle battery, the remote control may have to be reinitialised.

Wait at least one minute before using the remote control.

Insert the key in the ignition switch with the buttons (padlocks) of the remote control facing you.

Switch on the ignition.

Press the locking padlock for at least five seconds within the next ten seconds.

Switch off the ignition.

Wait at least one minute before using the remote control.

The remote control is now working again.

ELECTRONIC IMMOBILISER


All of the keys contain an electronic immobiliser device.

This device locks the engine supply system. It is activated automatically when the key is removed from the ignition.

After the ignition is switched on, a dialogue is established between the key and the electronic immobiliser system.

The metal part of the key must be unfolded correctly for correct dialogue to take place.

If you lose your keys

 Visit a PEUGEOT dealer with the vehicle's V5 registration document and your identification document.

A PEUGEOT dealer will be able to retrieve the key code and the transponder code so that a replacement key can be ordered.

Good practice

Do not make any modifications to the electronic immobiliser system.

Operating the remote control, even when it is in your pocket, may result in involuntary unlocking of the doors.

The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...), may interfere with the operation of the remote control temporarily. The remote control does not operate while the key is in the ignition, even if the ignition is off.

When purchasing a second-hand vehicle:

- have the keys memorised by a PEUGEOT dealer to ensure that the keys in your possession are the only ones which can start the vehicle.



When leaving the vehicle, check that the lamps are off and nothing of value is visible.

As a safety precaution (with children on board), remove the key from the ignition when leaving the vehicle, even for a short time.



ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a front/rear door or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

Locking the vehicle with complete alarm

Setting the alarm

- Switch off the ignition and get out of the vehicle.
- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control. The red LED, located on the centre console, flashes once per second.

Disarming

- Unlock the vehicle with the remote control or switch on the ignition, the red LED goes off.

Locking the vehicle with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Switch off the ignition.



- In the next ten seconds, press this button, located on the centre console, until the red LED is on continuously.

- Get out of the vehicle.
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red LED flashes once a second).

Triggering

The siren sounds, the direction indicators flash for approximately 30 seconds and the red LED flashes rapidly.

- To switch it off, insert the key and switch on the ignition.

When the alarm has been triggered ten times in succession (when triggered for the eleventh time) it is deactivated. Repeat the procedure for setting the alarm.

Locking the vehicle without alarm

- Insert the key in the lock on the driver's door and lock it.

Do not set the alarm when washing your vehicle.

Failure of the remote control

When the alarm is set but the remote control does not operate:

- Unlock the doors with the key and open the door. The alarm is triggered.
- Switch on the ignition in the next ten seconds. The alarm is disarmed.

Malfunction

When the ignition is switched on, if the red LED remains on for ten seconds, this indicates a fault with the siren connection. Have the system checked by a PEUGEOT dealer or a qualified workshop.

Automatic setting of the alarm

Depending on the country in which the vehicle is sold, the alarm is set automatically approximately 2 minutes after the last door is closed.

To prevent triggering of the alarm when a door is opened, it is imperative to press the remote control unlocking button again.



Do not make any modifications to the alarm system as this could cause faults.



DOORS

From the outside

Use the remote control to lock/unlock the vehicle.

Insert the metal part of the key in the lock on the driver's side if the remote control does not work.

From the inside



The first press permits central locking of the vehicle.

A second press permits central unlocking of the vehicle.

The control does not work if the vehicle has been locked using the remote control or the key, from the outside.



The doors can still be opened from the inside.


The indicator lamp in the control:



- flashes if the doors are locked when stationary with the engine off,



- comes on if the doors are locked and from the time the ignition is switched on.

 Driving with the doors locked may make access to the passenger compartment more difficult in an emergency.



Anti-intrusion protection



The system automatically locks all of the doors when you reach approximately 6 mph (10 km/h).

Activation / deactivation of the function



With the ignition on, a long press on this button activates or deactivates the function.

Opening warning lamp



If this warning lamp comes on, check that the cab doors and the rear or side doors are closed correctly.



SLIDING SIDE DOOR

If fitted on your vehicle, do not open the **left-hand** side door while filling with fuel as you risk damaging the fuel filler flap.

You can lock this door using the child lock.

Take care not to block the guide space on the floor to allow the door to slide correctly.



From the outside

Pull the handle towards you then towards the rear.

From the inside

To unlock and open, push the handle towards the rear. Ensure that the door opens fully to lock the device at the base of the door.

Locking / electric child lock

This prevents opening of the side doors from the inside.




With the ignition on, press this button, the LED is on accompanied by a message in the screen.

This system is independent of the central locking control.

Good practice

Do not drive with the sliding side door open. Always remove the key from the ignition when leaving the vehicle, even for a short time.

Each time you switch on the ignition, check whether the child lock is active (LED on). In the event of a serious impact, the electric child lock is deactivated automatically.

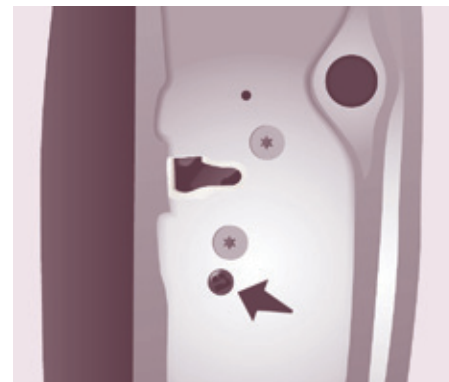

Operation in the event of a battery failure

Front and side passenger doors

In the event of a battery or of the central locking fault, use the lock to lock the doors mechanically.

- To open the door and get out of the vehicle, pull the interior control.
- To lock the door, insert the key in the lock, located on the edge of the door, then turn it **one eighth of a turn**.

Driver's door

- Insert the key in the lock, then turn it to the right to lock or to the left to unlock.



HINGED REAR DOORS

From the outside

The two hinged doors open to 90°.

To open, pull the handle towards you then pull the lever to open the left-hand door.



To close, start with the left-hand door then close the right-hand door.

Opening to 180°

A retractable check strap system permits extension of the opening from 90° to 180°.

Disengage the check strap towards you when the door is partially open.

The check strap will re-attach automatically on closing.

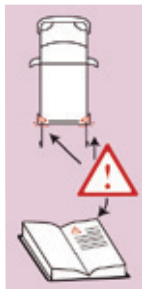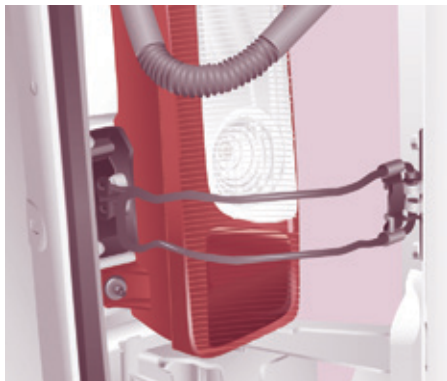

When parked with the rear doors open to 90°, the doors mask the rear lamps.

To signal your position to road users travelling in the same direction who may not have noticed that you have stopped, use a warning triangle or any other device stipulated by the legislation and regulations of your country.



TAILGATE

From the outside

If fitted on your vehicle, locking/unlocking is via the remote control.

To open, press the control then raise the tailgate.

A strap is provided to secure the tailgate in the upper position.

From inside

Emergency control


In the event of a central unlocking operating fault, this permits unlocking of the tailgate from the inside.

Fold the rear seats to gain access to the lock. Insert a small screwdriver in this opening to unlock the tailgate.



INSTRUMENTS AND CONTROLS INSTRUMENT PANEL

1. Distance recorder in miles / kilometres.
2. Screen.
3. Fuel level, coolant temperature.
4. Rev counter.
5. Instrument panel lighting dimmer.
6. Trip distance recorder / service indicator zero reset.

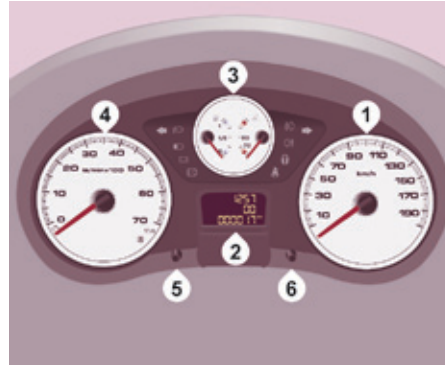

Instrument panel screen

- Speed limiter / cruise control.
- Miles / kilometres travelled.
- Service indicator, engine oil level indicator, total miles / kilometres.
- Presence of water in the Diesel filter.
- Diesel pre-heating.
- Gear shift indicator.



Warning lamp and controls in the overhead storage unit

- Passenger airbag deactivated warning lamp.
- Driver / passenger heated seat controls (version with 2 front seats).
- Rear ventilation activation / deactivation control.



Instrument panel without screen

ADJUSTING THE TIME

Centre console without screen



To adjust the time of the clock on the instrument panel, use the left-hand button on the instrument panel then carry out the operations in the following order:

- turn to the left: the minutes flash,
- turn to the right to increase the minutes (hold the button to the right for rapid scrolling),
- turn to the left: the hours flash,

- turn to the right to increase the hours (hold the button to the right for rapid scrolling),
- turn to the left: 24H or 12H is displayed,
- turn to the right to select 24H or 12H,
- turn to the left to complete the time adjustment.

After approximately 30 seconds without any action, the screen returns to the normal display.



Centre console with screen



The display - time sequence is linked according to model (version). The access to the Date is only active when the model version offers a date in words.






To adjust the time indicated in the screen, refer to the "Adjusting the date and time" section of chapter 9.





WARNING LAMPS






Each time the engine is started: a series of warning lamps comes on applying a check auto-test. They go off again almost immediately. When the engine is running: the warning lamp becomes a warning if it remains on continuously or flashes. This initial warning may be accompanied by an audible signal and a message in the screen.

Do not ignore these warnings






Warning lamp		is	indicates	Solution - action
	STOP	on, associated with another warning lamp and accompanied by a message in the screen.	major faults linked with the "Brake fluid level", "Engine oil pressure and temperature", "Coolant temperature", "Electronic brake force distribution" or "Power steering" warning lamps.	You must stop as soon as it is safe to do so. Park, switch off the ignition and call a PEUGEOT dealer or a qualified workshop.
	Parking brake / Brake fluid level / EBFDF	on.	parking brake applied or not released correctly.	Releasing the parking brake switches off the warning lamp.
		on.	low brake fluid level.	Top up using a fluid recommended by PEUGEOT.
		remains on, even though the level is correct and associated with the ABS warning lamp.	failure of the electronic brake force distribution.	You must stop as soon as it is safe to do so. Park, switch off the ignition and call a PEUGEOT dealer or a qualified workshop.
	Engine oil pressure and temperature	on while driving.	insufficient pressure or temperature too high.	Park, switch off the ignition and allow to cool. Visually check the level. Chapter 6, "Levels" section.
		remains on, even though the level is correct.	major fault.	Call a PEUGEOT dealer or a qualified workshop.








Instruments and controls

Warning lamp		is	indicates	Solution-action
	Coolant temperature and level	on with needle in the red zone.	abnormal increase in temperature.	Park, switch off the ignition then allow to cool. Visually check the level.
		flashing.	drop in coolant level.	Chapter 6, "Levels" section. Contact a PEUGEOT dealer or a qualified workshop.
	Service	on temporarily.	minor faults or warnings.	Consult the warnings log in the display or on the screen. See chapter 9, "Trip computer" section then "Warnings log".
		remains on.	major faults.	Depending on the seriousness of the fault, contact a PEUGEOT dealer or a qualified workshop.
	Row 1 seat belt not fastened	lit then flashing.	the driver or a front passenger has not fastened his seat belt.	Pull the strap then insert the tongue in the buckle.
		accompanied by an audible signal then remains on.	the vehicle is moving with the driver or front passenger seat belt not fastened.	Check that the seat belt is fastened by pulling the strap. Chapter 4, "Seat belts" section. The driver must ensure that all passengers have fastened their seat belt and use it correctly.
	Under-inflation detection	on.	a deflated or punctured tyre.	Park and switch off the ignition. Change or repair the wheel.
		on, accompanied by the service warning lamp.	a faulty sensor.	Have it checked by a PEUGEOT dealer or a qualified workshop.

Warning lamp	is	indicates	Solution-action
 Front / lateral / curtain airbag	flashing or remains on.	failure of an airbag.	Have the system checked by a PEUGEOT dealer or a qualified workshop without delay. Chapter 4, "Airbags" section.
 Front passenger airbag deactivated	on.	intentional deactivation of this airbag in the presence of a rearwards facing child seat.	Chapter 4, "Airbags-children on board" section.
 Low fuel level	on with gauge needle in the red zone.	that when it first comes on approximately 8 litres of fuel remain.	It is essential to fill the tank to avoid running out of fuel. Never continue to drive until you run out of fuel, this could damage the emissions control and injection systems. Tank capacity: approximately 80 litres.
	remains on each time the ignition is switched on.	not enough fuel added.	
	flashing.	fuel supply cut off following a serious impact.	Restore the supply. Chapter 6, "Fuel" section.
 EOBD emission control system	flashing or remains on.	malfunction of the system.	Have the system checked by a PEUGEOT dealer or a qualified workshop as soon as possible.
 Battery charge	on.	fault in the charging circuit.	Check the battery terminals, ... Chapter 7, "Battery" section.
	flashing.	placing of the active functions on standby (economy mode).	Chapter 7, "Battery" section.
	remaining on, in spite of the checks.	faulty circuit, injection or ignition malfunction.	Contact a PEUGEOT dealer or a qualified workshop.

Instruments and controls

Warning lamp		is	indicates	Solution-action
	Power steering	on.	system malfunction.	The vehicle retains conventional steering without assistance. Have the system checked by a PEUGEOT dealer or a qualified workshop.
	Opening detection	on and accompanied by a message in the screen.	door not closed correctly.	Check that the cab doors, the rear and side doors and the bonnet are closed (if your vehicle is fitted with an alarm).
	Rear suspension with pneumatic height correction	flashing.	abnormal difference between the detected sill height and the optimum sill height.	In automatic correction mode: drive slowly (approximately 6 mph (10 km/h)) until the warning lamp goes off. In manual correction mode: return the sill which is still at the upper or lower limit to an optimum height. Chapter 3, "Rear suspension" section.
		on when starting or while driving.	malfunction of the pneumatic height correction.	You must stop as soon as it is safe to do so. Contact a PEUGEOT dealer or a qualified workshop.
	ABS	remains on.	malfunction of the anti-lock braking system.	The vehicle retains conventional braking without assistance but you are advised to stop. Contact a PEUGEOT dealer or a qualified workshop.
	DSC	flashing.	DSC regulation triggered.	The system optimises drive and permits improvement of the directional stability of the vehicle. Chapter 4, "Driving safety" section.
		remains on with the LED in the button (in the dashboard) on.	system malfunction. E.g.: under-inflation of the tyres.	E.g. Check the pressure of the tyres. Have them checked by a PEUGEOT dealer or a qualified workshop.

Warning lamp		is	indicates	Solution-action
	Brake pads	on.	brake pad wear.	Have the pads replaced by a PEUGEOT dealer or a qualified workshop.
	Dipped beam headlamps / Daytime running lamps	on.	manual selection or automatic lighting.	Turn the lighting stalk to the second position.
			lighting of the dipped beam headlamps from the time the ignition is switched on - daytime running lamps.	Depending on the country in which the vehicle is sold. Chapter 3, "Steering mounted controls" section.
	Main beam headlamps		pulling the stalk towards you.	Pull the stalk to return to dipped beam headlamps.
	Direction indicators	flashing with audible signal.	change of direction via the lighting stalk, to the left of the steering wheel.	To the Right: control to be pushed upwards. To the Left: control to be pushed downwards.
	Front foglamps	on.	manual selection.	The foglamps only operate if the sidelamps or dipped beam headlamps are on.
	Rear foglamps	on.	manual selection.	The lamps only operate if the sidelamps or dipped beam headlamps are on. In conditions of normal visibility, take care to switch them off to avoid any penalty. "This light is a dazzling red."
	Particle emission filter	on.	a malfunction of the particle emissions filter (Diesel additive level, risk of clogging, ...).	Have the filter checked by a PEUGEOT dealer or a qualified workshop. Chapter 6, "Checks" section.

Instruments and controls

34

Screen	is	indicates	Solution-action
 Cruise control	on.	cruise control selected.	Manual selection. Chapter 3, "Steering mounted controls" section.
 Speed limiter	on.	speed limiter selected.	Manual selection. Chapter 3, "Steering mounted controls" section.
 Gear shift indicat or	on.	a recommendation that is independent of the traffic configuration and density.	To reduce fuel consumption, engage the gear recommended with a manual gearbox. The driver retains responsibility for following this indication or not.
 Diesel pre-heating	on.	climatic conditions requiring pre-heating.	Wait until the warning lamp goes off before operating the starter.
 Particle emissions filter	on.	a malfunction of the particle emissions filter (Diesel additive level, risk of clogging, ...).	Have the filter checked by a PEUGEOT dealer or a qualified workshop. Chapter 6, "Checks" section.
 Presence of water in the Diesel filter	on and accompanied by a message in the screen.	water in the Diesel filter.	Have the filter bled by a PEUGEOT dealer or a qualified workshop without delay. Chapter 6, "Checks" section.
 Service spanner	on.	service due shortly.	Refer to the list of checks in warranty and maintenance record. Have the service carried out by a PEUGEOT dealer or a qualified workshop.
 Time	on.	adjustment of the time.	Use the left-hand button on the instrument panel. Chapter 2, at the beginning of the "Instruments and controls" section.




FUEL GAUGE

The fuel level is tested each time the key is turned to the "running" position.

The gauge is positioned on:

- **1**: the fuel tank is full, approximately 80 litres.
- **0**: the reserve is now being used, the warning lamp comes on continuously.

The reserve when the warning first comes on is approximately 8 litres.

 Refer to the "Fuel" section of chapter 6.



COOLANT TEMPERATURE

The needle is positioned before the red zone: normal operation.

In arduous conditions of use or hot climatic conditions, the needle may move close to the red graduations.

What you should do if the needle enters the red zone:


Reduce your speed or let the engine run at idle.

What you should do if the warning lamp comes on:

- stop immediately, switch off the ignition. The fan may continue to operate for a certain time, up to approximately 10 minutes,
- wait for the engine to cool down in order to check the coolant level and top it up if necessary.

As the cooling system is pressurised, follow this advice in order to avoid any risk of scalding:

- wait at least one hour after switching off the engine before carrying out any work,
 - unscrew the cap by 1/4 turn to allow the pressure to drop,
 - when the pressure has dropped, check the level on the expansion bottle,
 - if necessary, remove the cap to top up.
- If the needle remains in the red zone, have the system checked by a PEUGEOT dealer or a qualified workshop.

 Refer to the "Levels" section of chapter 6.

EMISSIONS CONTROLS

36



EOBD (European On Board Diagnosis) is a diagnostics system which complies with, among others, the standards concerning

authorised emissions of:

- CO (carbon monoxide),
- HC (unburnt hydrocarbons),
- NOx (nitrous oxides) or particles, detected by oxygen sensors placed upstream and downstream of the catalytic converters.

The driver is warned of any malfunction of this emission control system by the illumination of this specific warning lamp in the instrument panel.

There is a risk of damage to the catalytic converter. Have it checked by a PEUGEOT dealer or a qualified workshop.




TYRE UNDER-INFLATION DETECTION


System which automatically checks the pressures of the tyres while driving.

The system continuously monitors the pressures of the four tyres, as soon as the vehicle is moving.


A pressure sensor is located in the valve of each tyre (except the spare wheel).


The system triggers an alert if a drop in pressure is detected in one or more tyres.

 The tyre under-inflation detection system is an aid to driving which does not replace the need for the driver to be vigilant or to drive responsibly.

 This system does not avoid the need to check the tyre pressures regularly (including the spare wheel) and before a long journey.

Driving with under-inflated tyres adversely affects road holding, extends braking distances and causes premature tyre wear, particularly under arduous conditions (vehicle loaded, high speed, long journey).

 Driving with under-inflated tyres increases fuel consumption.

 The tyre pressures for your vehicle can be found on the tyre pressure label (see the "Identification markings" section). The tyre pressures must be checked when the tyres cold (vehicle stopped for 1 hour or after driving for less than 6 miles (10 km) at moderate speed). Otherwise, add 0.3 bar to the values indicated on the label.

Under-inflation alert



The alert is given by the fixed illumination of this warning lamp, accompanied by an audible signal, and depending on equipment, the display of a message.

In the event of a problem on one of the tyres, the symbol or the message appears, according to equipment, to identify it.

- Reduce speed, avoid sudden steering movements or harsh brake applications.
- Stop as soon as it is safe to do so.
- In the event of a puncture, use the temporary puncture repair kit or the spare wheel (according to equipment), or
- if you have a compressor, the one in the temporary puncture repair kit for example, check the four tyre pressures when cold, or
- if it is not possible to check the tyre pressures at the time, drive carefully at reduced speed.



The loss of pressure detected does not always lead to visible deformation of the tyre. Do not rely on just a visual check.



The alert is maintained until the tyre or tyres concerned is reinflated, repaired or replaced.

The spare wheel (space-saver type or a steel rim) does not have a sensor.

Operating fault



The flashing and then fixed illumination of the under-inflation warning lamp accompanied by the illumination of the "service" warning lamp, and depending on equipment, the display of a message indicates a fault with the system.

In this case, monitoring of the tyre pressures is not assured.



This alert is also displayed when one or more wheels is not fitted with a sensor (for example, a space-saver or steel spare wheel).

Go to a PEUGEOT dealer or a qualified workshop to have the system checked or, following the repair of a puncture, to have the original wheel, equipped with a sensor, refitted.

SERVICE INDICATOR

38

This programme services intervals according to the use of the vehicle.


Operation

A few moments after the ignition has been switched on, the spanner indicating a service operation comes on; the display for the total distance recorder gives (in round figures) the distance remaining before the next service.

The points at which a service is due are calculated from the last indicator zero reset.

The point at which a service is due is determined by two parameters:

- the distance travelled,
- the time which has elapsed since the last service.

 The distance remaining before the next service may be weighted by the time factor, depending on the type of driving.

More than 1 000 miles/km before the next service is due

Example: 4 800 miles/km remain before the next service is due. When the ignition is switched on and for a few seconds, the screen shows:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation showing the total and trip distances.

Less than 1 000 miles/km before the next service is due

Each time the ignition is switched on and for a few seconds, the spanner flashes and the number of miles/kilometres remaining is displayed:




A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation and the spanner remains on. This indicates that a service should be carried out shortly.

Service overdue



Each time the ignition is switched on and for a few seconds, the spanner flashes and the excess distance is displayed.

 With the engine running the spanner remains on until the service has been carried out.


Zero re-set

Your PEUGEOT dealer or a qualified workshop carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- switch off the ignition,
- press and hold the trip recorder reset button,
- switch on the ignition.

The display begins a countdown.

 When the display shows "**0**", release the button; the spanner disappears.

After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

Engine oil level indicator

Depending on your vehicle's engine, when the ignition is switched on, the engine oil level is indicated for a few seconds, after the service information.



Oil level correct



Low oil level


Flashing of "OIL", linked with the service warning lamp, accompanied by an audible signal and a message in the screen, indicates a low oil level which could damage the engine.

If the low oil level is confirmed by a check using the dipstick, it is essential that the level is topped up.



Oil level gauge fault

Flashing of "OIL--" indicates a malfunction of the engine oil level indicator. Contact a PEUGEOT dealer or a qualified workshop.

 The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.



Dipstick

A = maximum, never exceed this level as a surplus of oil may damage the engine.

Contact a PEUGEOT dealer or a qualified workshop without delay.

B = minimum, top up the level via the oil filler cap, using the grade of oil suited to your engine.



Trip recorder zero reset button

With the ignition on, press the button until the zeros appear.



Lighting dimmer

With the lighting on, press the button to vary the brightness of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness.

As soon as the lighting is of the required brightness, release the button.



5-SPEED MANUAL GEARBOX


Engaging reverse gear

- ☞ With clutch pedal fully down, place the gear lever in neutral.
- ☞ Push the gear lever to the right then backwards.

Only engage reverse gear when the vehicle is stationary with the engine at idle.

As a safety precaution and to facilitate starting of the engine:

- always select neutral,
- press the clutch pedal.

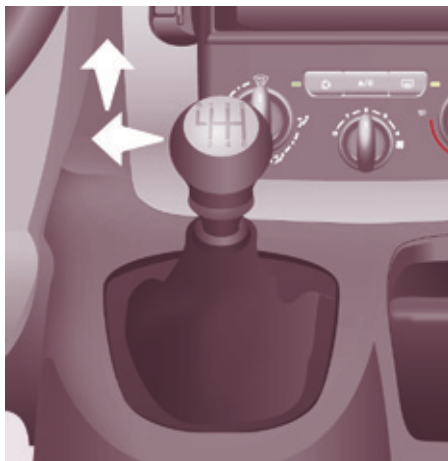

6-SPEED MANUAL GEARBOX

Engaging 5th or 6th gear

- ☞ Move the lever fully to the right to engage 5th or 6th gear.

Failure to follow this advice may cause permanent damage to the gearbox (engagement of 3rd or 4th gear by mistake).

Engaging reverse gear

- ☞ Raise the ring under the knob and move the gear lever to the left then forwards.

Only engage reverse gear when the vehicle is stationary with the engine at idle.

👁️ As a safety precaution and to facilitate starting of the engine:

- always select neutral,
- press the clutch pedal.

👁️ When traversing a flooded road or a ford, drive at walking pace.



AUTOMATIC GEARBOX

Selecting positions

- Move the lever select a position.
Once the position is selected, the corresponding indicator lamp appears in the instrument panel screen.

P

Park: position of the lever for parking.
To immobilise the vehicle or start the engine.




R

Reverse: position of the lever for reverse gear.
To reverse the vehicle.

N

Neutral: position of the lever for neutral.
To park the vehicle (parking brake on) and start the engine.

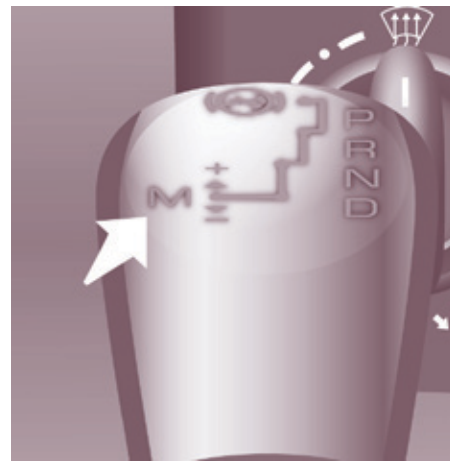

D

Drive: position of the lever for driving.
To move the vehicle forwards in automatic mode.

M

Manual: selection of the gears by pushing or pulling the gear lever (+ or -).
To move the vehicle forwards in manual mode.

Gearboxes and steering wheel

Moving off

42

With the engine running, to move off from position **P**.



- Press the brake pedal to come out of position **P**,



- select position **R** or **D**,



- gradually release the pressure on the brake pedal; the vehicle then moves off.

You can also move off from position **N**.



- With your foot on the brake, release the parking brake,



- select position **R**, **D** or **M**,



- gradually release the pressure on the brake pedal; the vehicle then moves off.




- Select position **D**.

The gearbox always selects the most suitable gear taking account of the following:

- the style of driving,
- the road profile,
- the vehicle load.

The gearbox is then operating in auto-adaptive mode, without any action on your part.

 For immediate maximum acceleration without touching the gear lever, depress the accelerator pedal to the extent of its travel, passing the point of resistance (kickdown). The gearbox will automatically change down or maintain the gear selected until maximum engine speed is reached.

On a descent, the gearbox will automatically change down in order to provide efficient engine braking and good pickup.

If you take your foot off the accelerator suddenly, the gearbox will not change to a higher gear for reasons of safety.

When stationary with the gear lever in position **D** (drive), a vibration limiting device is activated by pressing the brake pedal.

Reverse gear




- Select position **R**, with the vehicle stationary and the engine at idle.

Stopping the vehicle, starting the engine




- Select position **P** to **immobilise the vehicle** or to **start the engine**, with the parking brake on or off.

 If the battery is flat and the gear lever is in position **P**, it will be impossible to change to another position.



- You can also select position **N** to **park** or to **start the engine**, with the parking brake on.

 If position **N** is engaged inadvertently while driving, allow the engine to return to idle before engaging position **D** to restore drive.

Operating fault

Any operating fault is indicated by an audible signal, accompanied by the message "**Automatic gear fault**" in the screen.

In this situation the gearbox operates in downgrade mode (locked in 3rd gear). You may feel a substantial knock when changing from **P** to **R** and from **N** to **R** (this will not cause any damage to the gearbox).


Do not exceed 60 mph (100 km/h), keeping within the limit of local speed restrictions.

Contact a PEUGEOT dealer or a qualified workshop as soon as possible.

Manual mode

Manual sequential gear changing.

- Select gear lever position **M**,
- push the gear lever towards the + sign to change up, from 1 through to 6,
- conversely, push the gear lever towards the - sign to change down.

 You can change from position **D** (automatic mode) to position **M** (manual mode) at any time.

In manual mode, it is only possible to change from one gear to another if the vehicle speed and engine speed permit. If they do not, the vehicle will operate temporarily in automatic mode.

When the vehicle is stationary or moving very slowly, the gearbox automatically selects first gear.

Good practice

Never select position **N** when the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is stationary.


Never change between positions to optimise braking on a slippery surface.

There is a risk of damage to the gearbox:

- if you press the accelerator and brake pedals at the same time,
- if you force the gear lever from position **P** to another position in the event of a battery failure.

When the engine is at idle, brakes not applied, if position **R**, **D** or **M** is selected the vehicle moves even without the accelerator being pressed.

For this reason, **do not leave children unsupervised inside the vehicle, with the engine running.**

 When traversing a flooded road or a ford, drive at walking pace.



GEAR SHIFT INDICATOR

This system allows fuel consumption to be reduced by suggesting when to change up.

With an automatic gearbox, the system is only active in manual mode.

Operation

Depending on the driving conditions and the equipment of your vehicle, the system may recommend skipping one or more gears. You can follow this indication without going through the intermediate gears.

The gear engagement recommendations should not be considered to be compulsory. This because the configuration of the road, the traffic density and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system.

This system cannot be deactivated.



The information appears in the instrument panel in the form of an arrow.

The system adapts its gear change recommendations according to the driving conditions (slope, load, ...) and demands from the driver (for power, acceleration, braking, ...).


i The system never recommends engaging first gear or reverse, or changing down.



STEERING WHEEL HEIGHT AND REACH ADJUSTMENT

When the vehicle is stationary, release the steering wheel adjustment mechanism by lowering the lever.

Adjust the steering wheel for height and reach, then lock the adjustment mechanism by pushing the lever fully upwards.

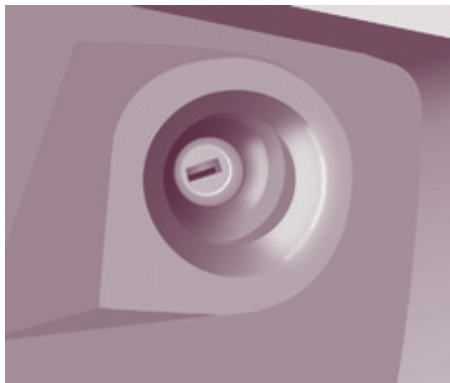

STARTING AND STOPPING

Running and accessories position.

To unlock the steering, turn the steering wheel gently while turning the key, without forcing. In this position, certain accessories can be used.

Starting position.

The starter is operated, the engine turns over, release the key.

STOP position: steering lock.

The ignition is off. Turn the steering wheel until the steering locks. Remove the key.

Good practice when starting

Minimise engine and gearbox wear

To ensure the correct operation and long life of your engine and gearbox, when the ambient temperature is below -23°C , it is necessary to leave the engine idling for four minutes.

Door or bonnet open warning lamp




If this warning lamp comes on, a door or the bonnet is not closed correctly, check it!

Diesel pre-heating warning lamp



If the temperature is high enough, this warning lamp comes on for less than one second, you can start without waiting.

In cold weather, wait for the warning lamp to go off, then operate the starter (Starting position) until the engine starts.

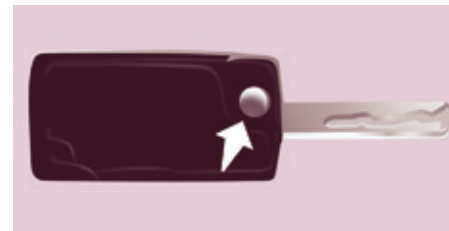

Key

Take care to prevent the key from coming into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (key ring, ...) weighing the key down in the ignition switch may cause a malfunction.


Good practice when stopping

Minimise engine and gearbox wear

When switching off the ignition, let the engine run for a few seconds to allow the turbocharger (Diesel engine) to return to idle.

Do not press the accelerator when switching off the ignition.

There is no need to engage a gear after parking the vehicle.

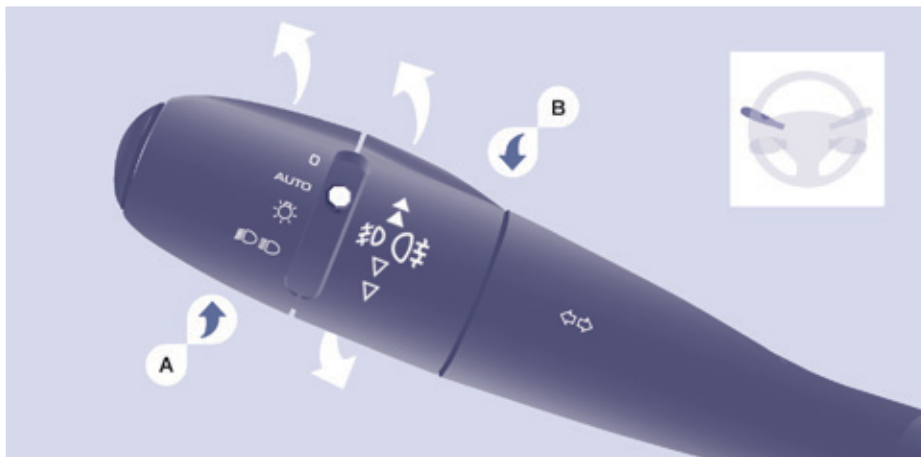

STEERING MOUNTED CONTROLS

DIRECTION INDICATORS (flashing indicators)



Left: downwards passing the point of resistance.

Right: upwards passing the point of resistance.

LIGHTING CONTROL

Front and rear lamps

Selection is by turning ring A.



Checking by means of the indicator lamps in the instrument panel is described in the "Instruments and controls" section of chapter 2.



Lighting off

AUTO

Automatic illumination of headlamps if your vehicle is fitted with a sunshine sensor.



Sidelamps



Dipped beam (green)
Main beam (blue)

Dipped beam/main beam change

Pull the stalk fully towards you.

Lighting-on audible warning

When the ignition is switched off, when the driver's door is opened, there is an audible warning if you have left the vehicle's lighting on.

Front and rear foglamps

Rotate ring **B** forwards to switch on and rearwards to switch off. The status is confirmed by the warning lamp in the instrument panel.

These operate with the sidelamps and the dipped beam headlamps.



Front foglamps (green, 1st rotation of the ring forwards).



Front foglamps (green) and rear foglamps (amber, 2nd rotation of the ring forwards).



To switch off the front and rear foglamps, turn the ring rearwards twice in succession.



In clear weather or in rain, both day and night, rear foglamps dazzle and their use is prohibited.

Do not forget to switch them off when they are no longer needed.

Automatic illumination of the headlamps switches off the rear foglamps, but the front foglamps remain on.

Daytime running lamps

Depending on the country in which the vehicle is sold, the vehicle may be equipped with daytime running lamps. The dipped headlamps come on when the vehicle is started.



This warning lamp comes on in the instrument panel.




The instruments and controls (instrument panel, screen, air conditioning control panel, ...) are only illuminated on switching to the automatic illumination of headlamps mode or when the lamps are switched on manually.


Automatic illumination of headlamps

AUTO

The sidelamps and dipped beam headlamps switch on automatically if the light is poor, or during operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop.

This function is not compatible with the daytime running lamps.

 In foggy weather or in snow, the sunshine sensor may detect sufficient light. As a consequence, the lighting will not come on automatically. If necessary, you must switch on the dipped beam headlamps manually.

 Do not cover the sunshine sensor located on the windscreen, behind the mirror. It is used for the automatic illumination of headlamps and for the automatic rain sensitive wipers.

Activation

Turn the ring to the **AUTO** position. The activation of this function is accompanied by a message in the screen.

Deactivation

Turn the ring forwards or rearwards. The deactivation of this function is accompanied by a message in the screen.

The function is deactivated temporarily when you use the manual lighting control stalk.

If the sunshine sensor does not function correctly, the lighting comes on accompanied by the service warning lamp, an audible signal and a message in the screen.

Contact a PEUGEOT dealer or a qualified workshop.



HEADLAMP BEAM

Depending on the load in your vehicle, the beam setting must be adjusted.

0 - 1 or 2 people in the front seats.

1 - 5 people.

2 - 6 to 9 people.


3 - Driver + maximum authorised loads.

Initial setting is position 0.

Travelling abroad

If using your vehicle in a country that drives on the other side of the road, the headlamps must be adjusted to avoid dazzling on-coming drivers.

Contact a PEUGEOT dealer or a qualified workshop.

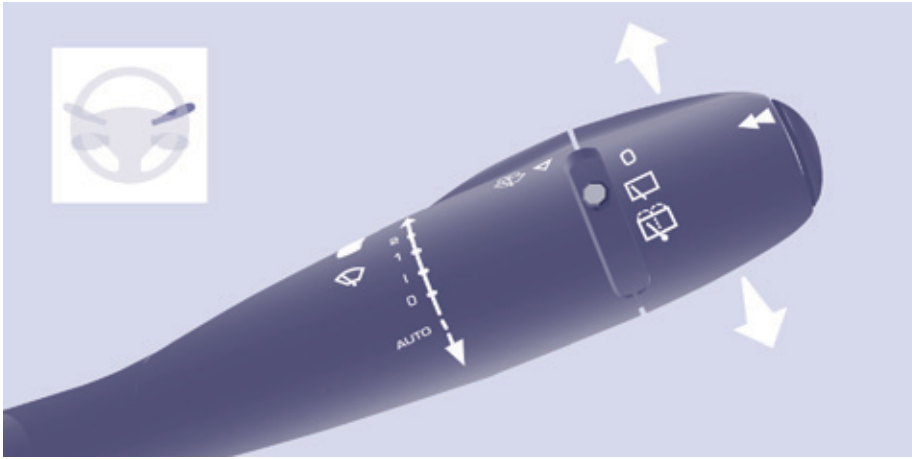

WINDSCREEN WIPER STALK

Manual windscreen wipers

- 2 Fast wipe (heavy rain).
- 1 Normal wipe (moderate rain).
- I Intermittent wipe.
- 0 Off.
- ↓ Single wipe
(press downwards).

In the Intermittent position, the wiping speed is in proportion to the vehicle speed.


Whenever the ignition has been switched off for more than one minute, with the windscreen wiper stalk in position 2, 1 or I, the stalk must be reactivated:

- move the stalk to any position,
- then move it back to the required position.


Wash-wipe and headlamp wash

Pull the stalk towards you, the wash-wipe is accompanied by a timed sweep of the wipers.

The headlamp wash is linked with the wash-wipe, it is triggered if the dipped headlamps are on.

 To top up the levels, refer to the "Levels" section of chapter 6.

Automatic rain sensitive windscreen wipers

 Do not cover the rain sensor, located in the centre of the windscreen, behind the mirror.

In the **AUTO** position, the windscreen wipers operate automatically and adapt their speed to the intensity of the rainfall.

When not in **AUTO** mode, for the other positions, refer to the manual windscreen wipers section.

Steering mounted controls

Activation

Press the control downwards. Activation of the function is accompanied by a message in the screen.


The automatic rain sensitive windscreen wipers function must be reactivated by pressing the stalk downwards, if the ignition has been switched off for more than one minute.

Deactivation / Switching off

Place the windscreen wipers stalk in position **I**, **1** or **2**. Deactivation of the function is accompanied by a message in the screen.

In the event of malfunction of the automatic windscreen wipers, the windscreen wipers will operate in intermittent mode.


Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

 When using an automatic car wash, switch off the ignition to avoid triggering the automatic wiping.


In winter, it is advisable to wait for the windscreen to completely clear of ice before operating automatic wipe.

Special position of the windscreen wipers

In the minute following switching off of the ignition, any action on the stalk positions the wipers against the windscreen uprights.

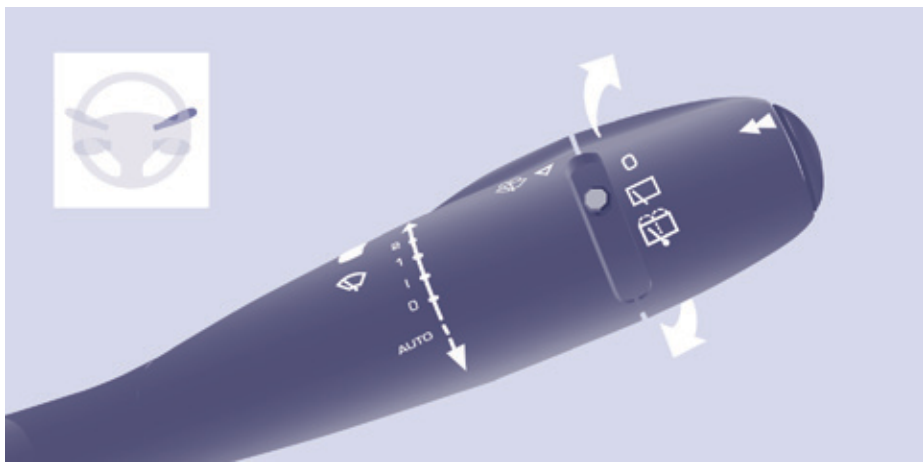

This action enables you to position the wiper blades for winter parking, cleaning or replacement.

 Refer to the "Changing a windscreen wiper blade" section of chapter 7.

To park the wipers in their normal position after this has been done, switch on the ignition and move the stalk.




Rear wiper

Turn the ring to the first position.



Rear screenwash

Turn the ring past the first position: the rear screenwash then the rear wiper operates for a fixed time.

 In winter, in the event of a considerable amount of snow or ice, switch on the heated rear screen. Once the screen is clear, remove the snow or ice which has accumulated on the rear wiper blade. You can then operate the rear windscreen wiper.



CRUISE CONTROL "CRUISE"

"This is the speed at which the driver wishes to drive".

This aid to driving in free-flowing traffic enables the vehicle to maintain the speed programmed by the driver, unless a steep gradient makes this impossible.

In order for it to be programmed or activated, the vehicle speed must be greater than 25 mph (40 km/h) with at least 4th gear engaged.

This cruise control shows the function selection status in the instrument panel and displays the programmed speed:



Function selected, display of the "Cruise Control" symbol.



Function deactivated, **OFF**.



Function activated.



Vehicle speed above the programmed speed, which is displayed flashing.



Operating fault detected, **OFF** - the dashes flash.



Selecting the function

- Place the switch in the **CRUISE** position. The cruise control is selected but is not yet active and no speed has been programmed.



First activation/ programming a speed



- Reach the chosen speed by pressing the accelerator.
- Press the **SET** - or **SET +** button. This programmes/activates the reference speed and the vehicle will maintain this speed.



Temporarily exceeding the speed

It is possible to **accelerate** and drive momentarily at a speed greater than the programmed speed. The value programmed flashes.

When the accelerator pedal is released, the vehicle will return to the programmed speed.

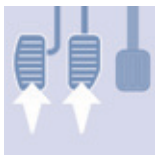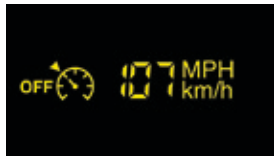

Deactivation (off)

- Press this button or the brake or clutch pedal.



Reactivation

- Following deactivation of the cruise control, press this button. Your vehicle will return to the last programmed speed. Alternatively, you can repeat the "first activation" procedure.



Changing the programmed speed

There are two methods of memorising a speed higher than the previous one:

Without using the accelerator:

- press the **Set +** button. A brief press increases the speed by 1 mph (km/h). A maintained press increases the speed in steps of 5 mph (km/h).

Using the accelerator:

- exceed the memorised speed until the speed required is reached,
- press the **Set +** or **Set -** button.

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).



Switching the function off

- Place the dial in position **0** or switch off the ignition to switch everything off.

Cancelling the programmed reference speed

When the vehicle becomes stationary, after switching off the ignition, the system no longer memorises a speed.



Operating fault

The programmed speed is cleared then replaced by three dashes. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

Good practice

When changing the programmed reference speed by means of a maintained press, pay attention as the speed can increase or decrease rapidly.

Do not use the cruise control on slippery roads or in heavy traffic.

In the event of a steep slope, the cruise control cannot prevent the vehicle from exceeding the programmed speed.

In any event, the cruise control cannot replace the need to observe the speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

It is advisable to leave your feet near the pedals.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.



FIXED SPEED LIMITER

If your vehicle is fitted with this function, the speed of your vehicle can be limited to a fixed speed of approximately 56, 60, 70 or 80 mph (90, 100, 110 or 130 km/h). The fixed maximum speed cannot be changed.

i The fixed speed limiter is not a function of the cruise control type. It cannot be activated or deactivated by the driver while driving.



SPEED LIMITER "LIMIT"

"This is the selected speed which the driver does not wish to exceed".

This selection is made with the engine running while stationary or with the vehicle moving. The minimum speed which can be programmed is 20 mph (30 km/h).

The speed of the vehicle responds to the pressure of the driver's foot as far as the accelerator pedal point of resistance which indicates that the programmed speed has been reached.

However, pressing the pedal beyond this point of resistance to the floor allows the programmed speed to be exceeded. To resume use of the limiter, simply reduce the pressure on the accelerator pedal gradually and return to a speed below that programmed.

The operating actions may be carried out when stationary, with the engine running, or with the vehicle moving.

This speed limiter shows the function selection status in the instrument panel and displays the programmed speed:



Function selected, displaying of the "Speed Limiter" symbol.



Function deactivated, last programmed speed - OFF.



Function activated.



Vehicle speed above, the programmed speed, which is displayed flashing.





Operating fault detected, OFF - the dashes flash.



Selecting the function

- Place the switch in the **LIMIT** position. The limiter is selected but is not yet active. The screen indicates the last programmed speed.

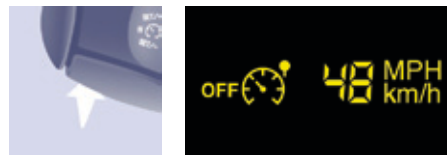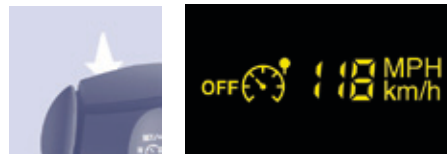

Programming a speed

A speed can be programmed without activating the limiter but with the engine running.

To memorise a speed higher than the previous one:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).



Activation/Deactivation (off)

Pressing this button once activates the limiter, pressing the button again deactivates it (OFF).



Exceeding the programmed speed

Pressing the accelerator pedal in order to exceed the programmed speed will have no effect unless you press the pedal **firmly** beyond the **point of resistance**.

The limiter is deactivated temporarily and the programmed speed flashes.

To return to the limiter function, reduce your speed to below the programmed speed.

Flashing of the speed

The speed flashes:

- following forcing of the accelerator point of resistance,
- when the limiter cannot prevent an increase in the vehicle speed due to the profile of the road or on a steep descent,
- in the event of sharp acceleration.



Switching the function off

- Place the switch in position **0** or switch off the ignition to switch the system off. The last programmed speed remains in the memory.



Operating fault

The programmed speed is cleared then replaced by three dashes.

Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

Good practice

In any event, the speed limiter cannot replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Always pay attention to the profile of the road and sharp acceleration and stay in complete control of your vehicle.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.



VENTILATION

WITH MANUAL SETTINGS

If your vehicle is fitted with these controls, they are located on the control panel of the dashboard centre console.

Air conditioning A/C

If fitted on your vehicle, the air conditioning can only operate with the engine running.

A/C Pressing the button triggers the operation of the air conditioning, the LED is on. Pressing the button again switches the function off and the LED goes off.

The air conditioning does not operate if the air flow is set to 0.

Temperature adjustment

Control positioned:



- in the blue zone, produces cool air,



- in the red zone, produces heating of the interior air.

Air flow



The fan speed varies from 1 to the fastest 4. Position 0 switches it off.

Remember to adjust this control in order to attain the desired comfort level.

Air distribution

Air distribution is directed by turning the control towards:



the side vents and the central vents,



the side vents, the central vents and the footwells,



the footwells,



the windscreen and the footwells,



the windscreen.



The air distribution can be modulated by placing the control in the intermediate positions, marked "•".

Ventilation

Intake of exterior air



The LED in the button is off.
This is the preferred operating position.

Recirculation of interior air



The LED in the button is on.
Recirculation temporarily prevents exterior odours and smoke from entering the passenger compartment.

Used with the air conditioning switched on and setting of the force of blown air (from 1 to 4), recirculation enables you to obtain the required ambient air comfort level more quickly with both hot or cold settings. This position should only be temporary.

When your ambient air comfort level has been reached, return to the intake of exterior air position to permit renewal of the air in the passenger compartment and avoid misting. This operating mode is preferable.

Recommended settings

For optimum operation of the manual system, the settings below are recommended:

If I require...	Air distribution	Temperature	Air flow	Air recirculation	Air conditioning A/C
Heating					-
Cooling					A/C
Demisting Defrosting					A/C



DIGITAL AIR CONDITIONING WITH SEPARATE SETTINGS

If your vehicle is fitted with this control panel, it is located on the centre console.

Good practice

For maximum cooling or heating of the passenger compartment, it is possible to exceed the value 15 by turning until LO is displayed or the value 27 by turning until HI is displayed.

For optimum comfort, the difference between the value displayed for the driver and for the passenger should not be greater than 3.

On entering the vehicle, the inside temperature may be much colder (or warmer) than is comfortable. There is no advantage in changing the value displayed in order to quickly reach the level of comfort required. The system will use its maximum performance to reach the comfort value set.

Automatic operation

AUTO comfort programme

This is the normal air conditioning system operating mode.

The image shows a blue square with the word "AUTO" in white, bold, sans-serif capital letters.

Press this button, the **AUTO** symbol is displayed.

Depending on the comfort value selected, the system controls the distribution, the flow and the intake of air to guarantee comfort and a sufficient circulation of air in the passenger compartment. No further action on your part is required.

When the engine is cold, to prevent an excessive diffusion of cold air, the ventilation will reach its optimum level gradually.

For your comfort, the settings are stored when the ignition is switched off and are reinstated the next time the vehicle is started, if the temperature in the passenger compartment has not changed significantly; otherwise, operation resumes in automatic mode.

Driver or passenger side comfort value

The value indicated on the display corresponds to a level of comfort and not a temperature in degrees Celsius or Fahrenheit.



Turn this control to the left or to the right to decrease or increase the value. A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is usual.



Do not cover the sunshine sensor, located on the windscreen behind the mirror, it is used for regulation of the air conditioning.

Manual operation

You can, according to your requirements, make a different selection from that offered by the system by changing a setting. The other functions will still be controlled automatically. Pressing the **AUTO** button restores fully automatic operation.



Air distribution

Pressing this button several times in succession directs the air flow towards:

- the windscreen,
- the windscreen and footwells,
- the footwells,
- the side vents, central vents and footwells,
- the side vents and central vents.



Air flow

Press the **small fan** button to reduce the flow or the **large fan** button to increase the flow.

On the display, the blades of the fan darken when the flow is increased.



Deactivating the system

Press the air flow **small fan** button until the fan symbol disappears.

This action deactivates all of the system's functions, with the exception of the air recirculation and rear screen demisting (if fitted on your vehicle). Your comfort setting is no longer maintained and is switched off.

For your comfort, do not deactivate the system for long periods.



Pressing the **large fan** button or the **AUTO** button reactivates the system with the values set before it was deactivated.



Intake of exterior air / Recirculation of interior air

Press this button to recirculate the interior air. The recirculation symbol is displayed.

Recirculation prevents exterior odours and smoke from entering the passenger compartment. Avoid prolonged operation in interior air recirculation mode (risk of condensation, odour and humidity).

Pressing this button again activates the intake of exterior air.



Switching the air conditioning On / Off

Press this button, the **A/C** symbol is displayed and the air conditioning is activated.

Pressing this button again switches off the air cooling.

CORRECT USE OF THE VENTILATION AND AIR CONDITIONING

Vents

"Leave them open"

For optimum distribution and diffusion of hot or cool air in the passenger compartment, there are adjustable central and side vents which can be directed sideways (right or left) towards the top of the body. For your comfort while driving, do not close them, direct the flow of air towards the windows instead.

The air vents directed towards the floor of the vehicle complete the equipment.

Passenger compartment filter, carbon filter

Ensure that this filter is in good condition and have all of the filter elements replaced regularly.



Refer to the "Checks" section of chapter 6.

Air conditioning



In all seasons, the air conditioning should only be used with the windows closed. However, if the interior temperature remains high after a prolonged period parked in the sun, first ventilate the passenger compartment for a few minutes.



Use the AUTO mode as much as possible as it permits optimised control of all of the functions: air flow, passenger compartment comfort temperature, air distribution, air intake mode or air recirculation in the passenger compartment. Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in perfect working order.

It is normal that the condensation created by the air conditioning system results in a flow of water which may form a puddle under the vehicle when parked.

If the system does not produce cold air, do not use it and contact a PEUGEOT dealer or a qualified workshop.

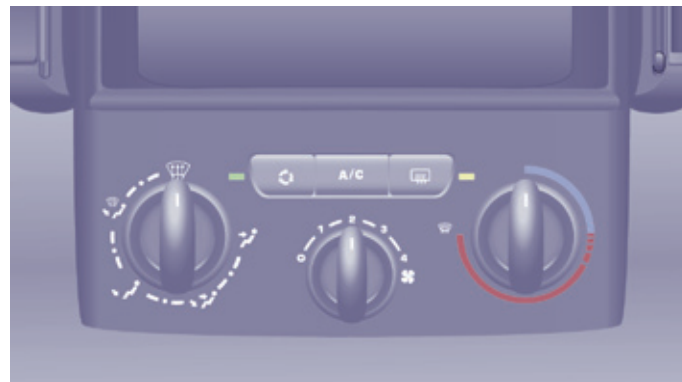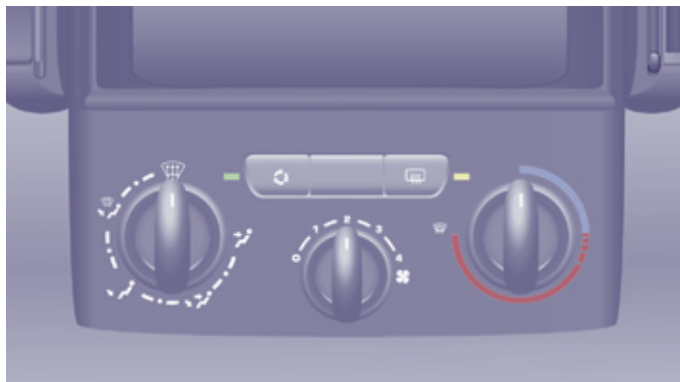

DEMISTING AND DEFROSTING

Manual mode



Turn the control to this air distribution setting.



Turn the control to this temperature setting.



Increase the air flow setting.



Press the air conditioning button.



Returning to exterior air intake open permits renewal of the air in the passenger compartment (LED off).



Demisting the rear screen and/or mirrors

Pressing this button, with the engine running, activates the rapid demisting - defrosting of the rear screen and/or electric mirrors.

This function switches off:

- when the button is pressed,
- when the engine is switched off,
- automatically to prevent excessive energy consumption.



Automatic air conditioning: visibility programme

The comfort programme (AUTO) may not be sufficient to quickly demist or defrost the windows (humidity, several passengers, ice). In this case, select the visibility programme. The visibility programme indicator lamp comes on.

It activates the air conditioning, the air flow, the defrosting of the rear screen and provides optimum distribution of the ventilation to the windscreen and side windows.

It deactivates the air recirculation.



REAR VENTILATION

If your vehicle is fitted with an additional air conditioning unit, located in the rear of the vehicle. The distribution duct located in the roof and the 6 individual vents provide a perfect air distribution.

The warm air diffused at the floor, from the front heating and air conditioning unit, is distributed at the feet of the rear passengers of the 2nd row.

A warm air diffusion vent, located on the specific unit, completes the installation for the feet of the rear passengers of the 3rd row.

Activation / Deactivation



This button, located on the overhead storage unit, enables you to activate or deactivate the operation of the rear controls from the driver's seat or the front passenger seat.

The first press activates (green LED on).

A second press deactivates (LED off).

Air flow



The fan speed for the air via the vents, varies from 1 to the fastest 4.

To obtain the desired comfort level, remember to adjust this control.


To stop the fan, place the control in position 0.



Temperature adjustment

Control positioned:

- on the blue, produces cool air,
- on the red, produces heating.

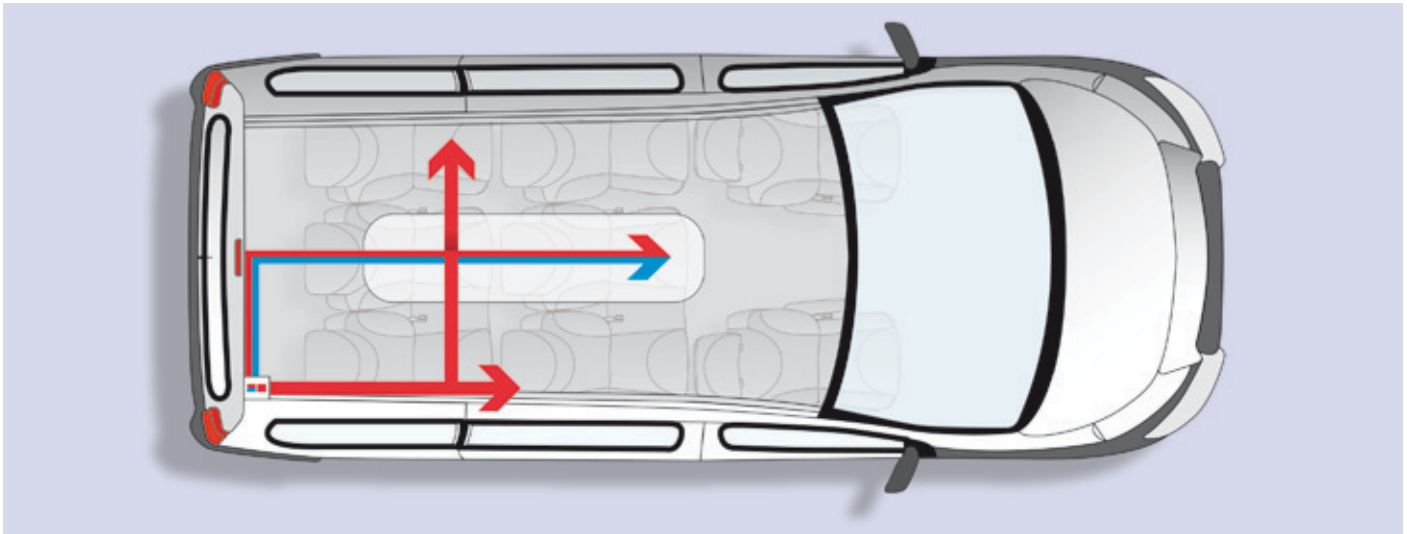

Rear ventilation

ADDITIONAL HEATING

Coolant circuit heater

This is an additional and separate system which heats the Diesel engine cooling system to make starting easier.

It improves the demisting and defrosting performance.

Vehicles fitted with an HDi engine may be fitted with a heater. When the engine is at idle or the vehicle is stationary, it is normal to notice a high-pitched whistling noise and a slight emission of smoke and odour.

Good practice

To avoid any risk of poisoning or asphyxiation, the heater must not be used, even for short periods, in an enclosed space such as a garage or workshop which is not fitted with an exhaust gas extraction system.

Do not park the vehicle on an inflammable surface (dry grass, dead leaves, paper...), there is a risk of fire.

The temperature near the heater must not exceed 120 °C. A temperature higher than this (for example in the case of painting in an oven) could damage the components of the electronic circuits.

The heater is supplied by the vehicle's fuel tank. Ensure that the low fuel warning lamp is not on.



Have the heater checked at least once a year at the beginning of winter. Maintenance and repairs should only be carried out by a PEUGEOT dealer or a qualified workshop. Use recommended replacement parts only.



IMPROVED COMFORT

Treatment of the bodywork leading to acoustic comfort

The underseal under the body, on the body sills and on the wheel arches considerably reduces noise and protects the body from external attack. The Expert Tepee is treated by cataphoresis, ensuring perfect protection against corrosion. The anticorrosion warranty has a duration of 12 years.

By means of digital simulation tools, the acoustic pressure in the whole of the passenger compartment has been optimised specifically to offer good communication with the rear passengers while driving.



FRONT SEATS

Depending on the version and configuration of your vehicle, different front seats are fitted, either:

- a driver's seat and a passenger seat,
- an individual driver's seat and a two-seat passenger bench.

Depending on the models, the following adjustments are available:



1 - Forwards/backwards adjustment

Lift the bar and slide the seat forwards or backwards.



2 - Seat back angle adjustment

Pull the lever upwards and set the required angle.



3 - Driver's seat height adjustment


Depending on the version and configuration of your vehicle, you have either:

- a passive adjustment: pull the handle upwards then take your weight off the seat to raise, or push on the seat to lower,

Seats



- an active adjustment: operate the handle upwards or downwards until the desired position is reached.

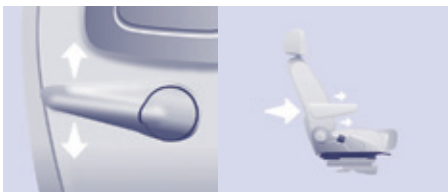

4 - Driver's seat lumbar adjustment

Move the lever up or down to obtain the required position.



Head restraint height adjustment

To raise or lower the restraint, pull it forwards, then slide it.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

To remove it, set it in the high position, press the tabs and pull upwards and forwards at the same time.

To re-install, engage the head restraint rods in the holes, making sure they are aligned with the seat back.



Never drive with the head restraints removed; they must be in place and correctly adjusted.



Adjustable armrest

To place the armrest in its rest position:

- raise it until it is in the centreline of the seat back.

To place the armrest in a position for use:

- fold it down fully,
- raise it slowly to the required position,
- if you pass the required position, raise it fully then repeat the operations above.


Front heated seat controls



Press the corresponding control, located on the overhead storage unit.

The temperature is controlled automatically.

Pressing a second time stops operation.

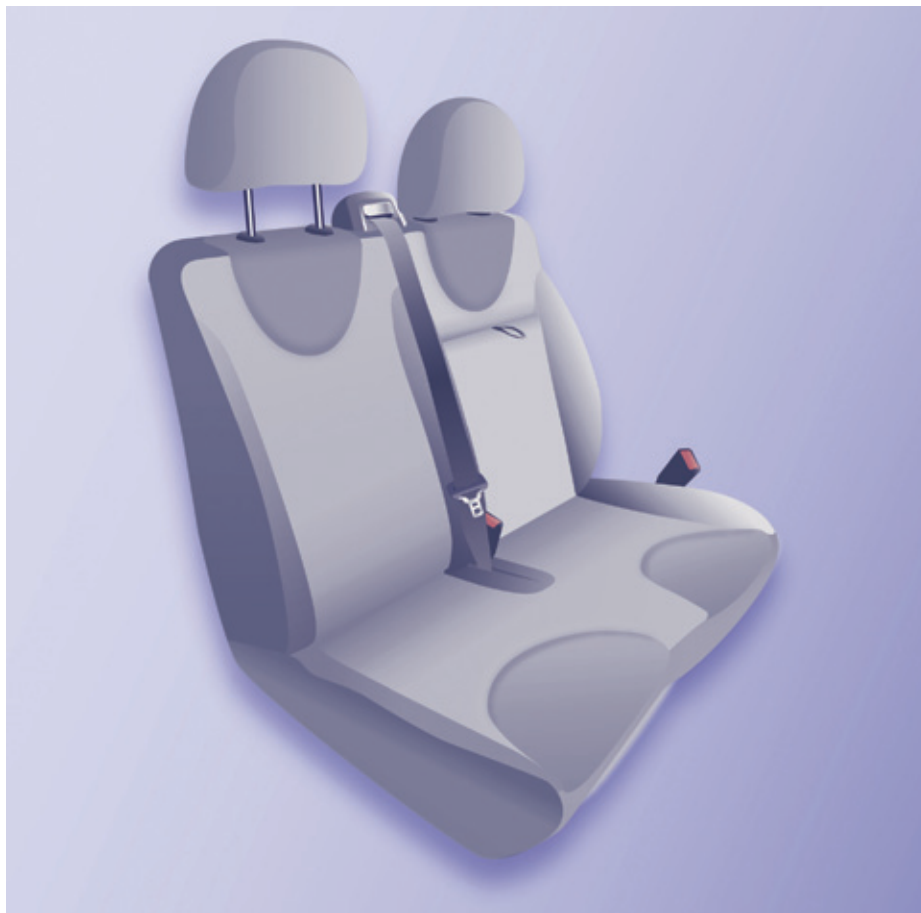

2-SEAT FRONT BENCH

If your vehicle is fitted with this bench seat, it is fixed and has a 3rd seat belt.

Head restraint

Press the tab to adjust the height of the head restraint.

To remove the head restraint, press the tabs and raise the head restraint.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

Never drive with the head restraints removed; they must be in place and adjusted correctly.

Seat back pockets

If your vehicle is fitted with these, they are located on the backs of the front seats.



Writing table

If fitted to your vehicle, the back of the centre seat of the bench (Row 1) folds to form a writing table with two cup holder recesses.

Pull the handle located at the top of the seat back cushion.



REAR SEATS

The type of rear seats depends on the version and configuration of your vehicle.

The individual seat is always located on the right-hand side and the bench on the left-hand side (in the direction of travel).



Individual passenger seat

This seat and the 2-seat bench are interdependent. Any handling operation must begin with the individual seat.

Two models are offered:

Type 1: an individual seat which can be raised permitting access to the rear space.



Type 2: an individual seat the back of which can be folded to the table position then raised, facilitating access to the rear space.



Two-seat bench

Three models are offered:

Type 1: a two-seat cushion with fixed seat back.




Type 2: two seats with folding seat backs and seat cushion which can be raised.



Specifications depending on the type of seat


Seat fitted with this control: the seat back can be tilted.

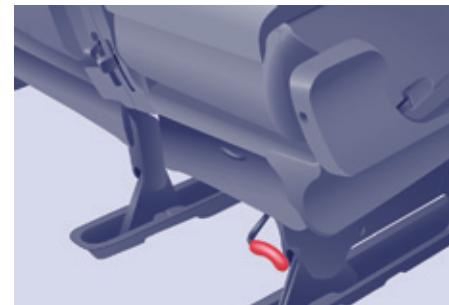


Seat fitted with this control: the seat back can be folded and coupled with the raising control.



Type 3: a two-seat cushion with individual tilting seat backs which can be folded to the table position and cushion which can be raised.

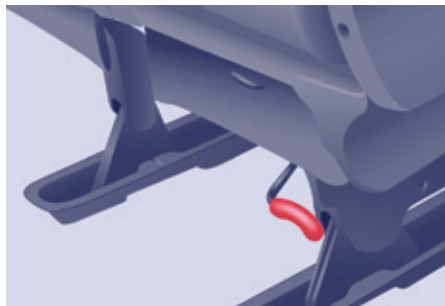

Seat fitted with this control: the seat back can be tilted and raised.

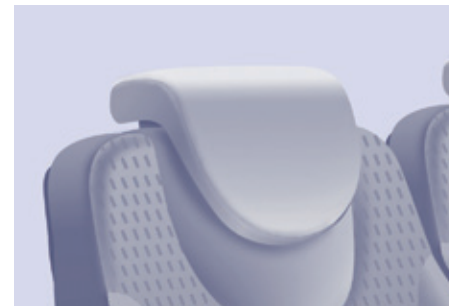

"Comma" shape head restraint.




This armrest may be fitted.



The seat backs of the centre seats are designed with cup holder and storage recesses.



The seat backs of the outer seats are fitted with a storage net.

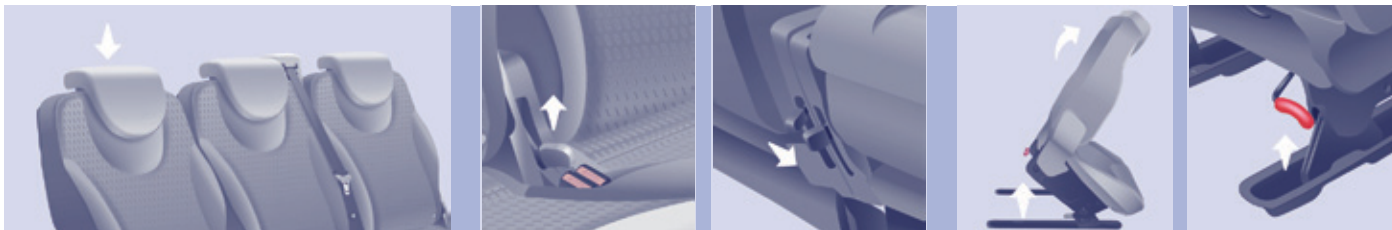

Handling

Enter, exit the vehicle: raise the seat


Always start with the individual seat located on the right-hand side and place the head restraint in the low position.

Folding the seat back to the table position (centre seat example)

- Place the head restraints in the low position.
- Raise this handle to unlock the seat back (from the rear, lower the handle).
- Tilt the seat back onto the seat cushion.

Seat and bench of type 1:

- Raise the seat.

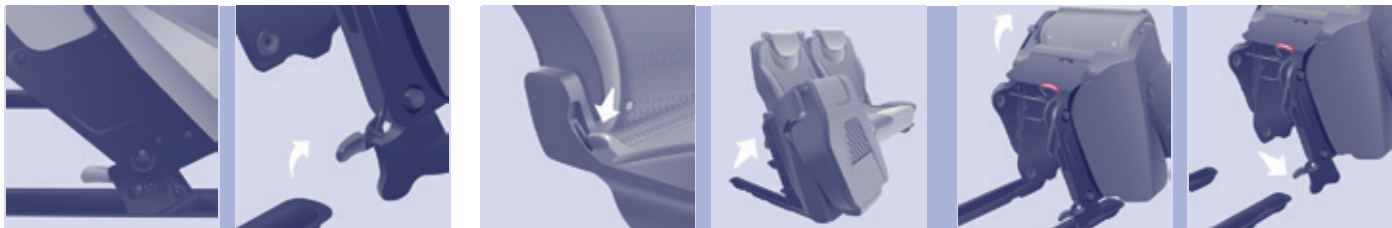

- Unlock the front feet using this handle.
- Disengage the seat from its anchorages.
- Remove the seat from the vehicle via the side door in row 2 and via the rear in row 3.

Seat and bench of type 2 / type 3:

- Fold the seat back to the table position using this handle.
- Raise the seat.

- Unlock the front feet using this handle.
- Disengage the seat from its anchorages.
- Remove the seat from the vehicle via the side door in row 2 and via the rear in row 3.



Installing the seat

Always install the bench first.

- Check that there are no objects obstructing the anchorages and preventing correct locking of the feet.
- Engage the front feet in the anchorages on the floor.

- Lock the front feet using this handle.
- Tilt the seat towards the rear until the rear feet lock. Be aware of the feet of passengers when tilting.

For the type 2 seat and the type 2 / 3 bench: fold up the seat back.



Correct anchoring of the front feet



Check that the seat is locked correctly on the floor when it is returned to the sitting position.

Precautions

Following the various handling operations:

- do not remove a head restraint without storing it to a support,
- check that the seat belts are always accessible to the passenger and easy to fasten,
- a passenger must not take his seat without adjusting his seat's head restraint correctly and adjusting and fastening his seat belt.




Labels


While driving, it is prohibited to have a passenger:

- in row 3 if the seat back in front (row 2) is in the table position.
- in row 3 if the seat/bench in front (row 2) is in the folded position.
- in row 3 if the seat in front (row 2) has been removed,
- on the centre seat if the right-hand side seat is in the folded position.


SEAT AND BENCH CONFIGURATIONS

Examples of various layouts combining comfort and practicality


 The various operations must be carried out while stationary.

 Do not fit seats in the 3rd row without first fitting the corresponding seatbelts.


5 seats

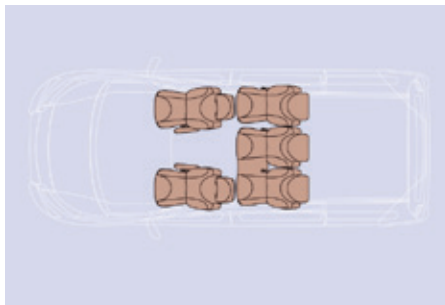


6 seats

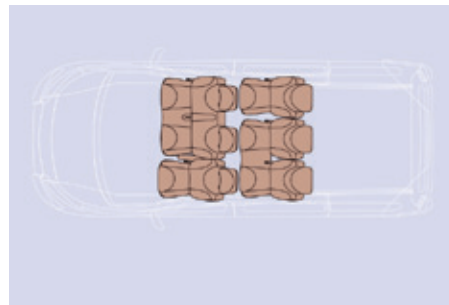


7 seats

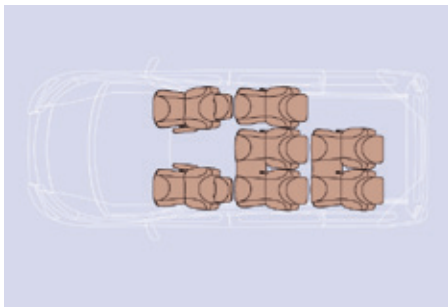

8 seats

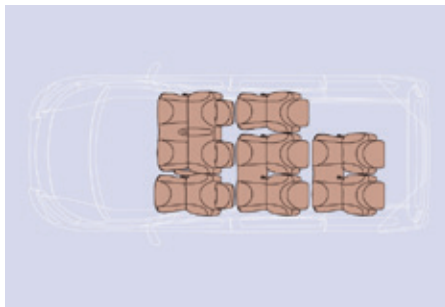

9 seats

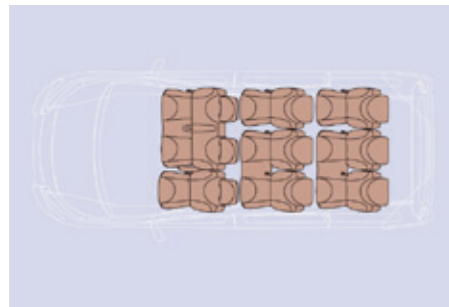



PRACTICAL INFORMATION

CAB FITTINGS

Depending on the vehicle's equipment, the various fittings below enhance your cab.

Sun visor

To prevent dazzle from ahead, fold the sun visor down.

A pocket is provided in the driver's sun visor for storing toll cards, tickets, ...




Glove box

This is fitted with a lock, you can lock it using the key.

It contains three sockets for the connection of portable electronic equipment (video equipment, ...) if the vehicle is fitted with a colour screen.

It also contains cup holders and compartments for storing maps, a packet of cigarettes, an A4 format document, a pen, etc.

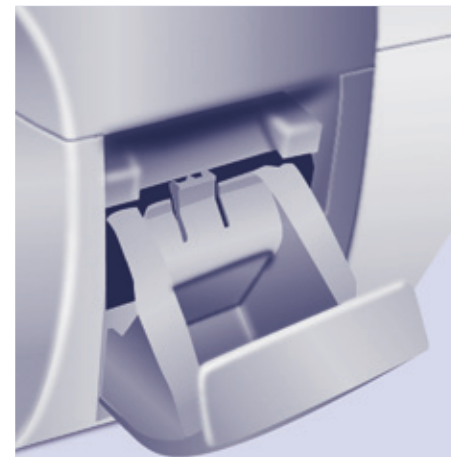

Storage compartment



Ashtray

12 volt socket

The maximum power of the socket, which is of the cigarette lighter type, is 120 W.



Storage tray and bottle holder (1.5 L)

Any liquid carried in an open receptacle (cup or other) may be spilt, with the risk of damage to switches and controls at the driving position and centre console. "Take care".



Ticket storage

According to the configuration of the vehicle.



Overhead storage unit

This is located above the sun visors and has two compartments, with or without a cover, for storing a jumper, a file, ...

Be aware that storing a hard object in direct contact with the compartment may result in noise.



Front courtesy lamp

SEATING AREA COURTESY LAMPS

Automatic switching on/off

The front courtesy lamp comes on when the key is removed from the ignition.

All of the courtesy lamps come on when the vehicle is unlocked, when one of the corresponding doors is opened and for location of the vehicle using the remote control.

They switch off gradually after the ignition is switched on and when the vehicle is locked.



Permanently on, ignition on.



Rear courtesy lamp



Front: comes on when one of the front or rear doors is opened.



Row 2 and row 3: comes on when one of the rear doors or the boot is opened, if fitted on your vehicle.



Permanently off.



Individual reading lamp



If fitted on the vehicle, these are switched on and off by means of a manual switch, with the ignition on.

Areas for toll cards / car park tickets

The athermic windscreen has two non-reflective zones located either side of the base of the interior mirror.

They are intended for affixing toll cards and/or car park tickets.

Mat fitting / removal

When removing the front mat, push the seats as far back as possible and remove the fixings.

When refitting, position the mat correctly on the pins and clip the fixings. Check that the mat is secured correctly.

To prevent the mat from becoming caught under the pedals:

- only use mats suited to the fixings already present in the vehicle. It is imperative that these fixings are used.
- never fit one mat on top of another.



SEATING AREA FITTINGS

Depending on the vehicle's equipment, the various fittings below enhance your seating area.

Grab handle




12 volt socket

This operates with the ignition off, so limit its use to avoid discharging the battery.

Maximum power: 120 W.

Cup holder

Any liquid carried in an open receptacle (cup or other) may be spilt, presenting a risk. "Take care".

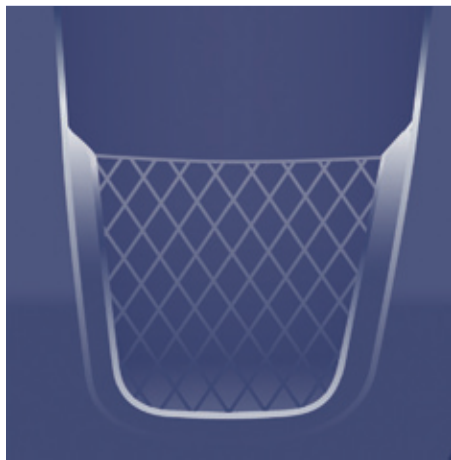


Nets on the back of the outer seats



Fittings / storage compartments

**Storage tray and bottle holder
(0.5 L)**

Coat hooks

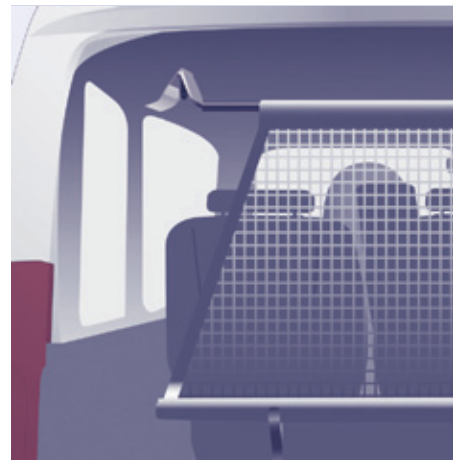

Load retaining net fixing

Raise the flap to gain access to the load retaining net fixings.



Stowing rings

Use the stowing rings on the rear floor to fix the net, your loads or luggage.

For safety reasons, on sharp braking, it is recommended that heavy objects are placed as far forward as possible.



You are advised to immobilise the load by securing it firmly using the stowing rings on the floor.



Load space cover

To install:

- position one end of the load space cover roller in its notch,
- compress the opposite end of the roller and put it in place,
- release it so that it engages,
- unroll the load space cover to the pillars,
- fix the two hooks on the pillars.

To remove:

- pull the load space cover towards you to disengage it from its fixings,
- reinsert the load space cover in its roller,
- compress it and remove it from its support.

Rear suspension



REAR SUSPENSION

Two types of suspension are available.

Metal suspension

This equipment adopts long movement limiters which make it possible to guarantee stable behaviour both when loaded and when empty. No action on your part is required except to ensure that maintenance is carried out and that the authorised loads are complied with.

Rear suspension with pneumatic height correction

If fitted on your vehicle, this type of suspension regulates the variations in the height of the rear platform of your vehicle irrespective of the weight of the load, within

the limit of the authorised values. On board, the increasing or lightening of the load on the vehicle's platform is detected by two height sensors. When all of the doors are closed, the sensors trigger the automatic height correction and determine the optimum height of the sill for the vehicle's driving conditions.

Two functions



1. Automatic height correction
2. Manual height correction

1 - Automatic correction of the height of the rear sill

The pneumatic suspension automatically regulates the variations in the height of the rear platform of your vehicle.



A red warning light on your instrument panel flashes if the height is not at its optimum level and requires correction, drive slowly until this warning lamp goes off.

The automatic height correction is temporarily inactive:

- if a door / the tailgate is open,
- when braking or when stopped at a red traffic signal (brake pedal pressed).

Deactivation of automatic height correction

The control which permits deactivation of automatic regulation is located on the right-hand side, at the rear of the vehicle.



With the vehicle stationary:

- press and hold,
- release the control.

Deactivation is confirmed by the LED which is on. It remains on for approximately 30 seconds.



You must deactivate automatic height correction manually in the following situations:

- when working underneath the vehicle,
- when changing a wheel,
- when the vehicle is being transported by lorry, train, ferry, boat, ...

Return to automatic correction



With the vehicle stationary:

- press and hold,
- release the control.

Return to automatic height correction is confirmed by the LED which goes off.

According to the configurations, a beep may be heard during these operations.



2 - Manual correction of the height of the rear sill

If your vehicle is fitted with this adjustment, the control is located on the right-hand side at the rear of the vehicle.

This manual adjustment permits "lowering" or "raising" of the height of the sill of the rear platform to facilitate operations in a parking area.

This adjustment of the height of the sill is restricted by a lower limit and an upper limit.

Carry out these operations with the vehicle still stationary and:

- with the front and side doors closed,
- with the parking brake applied,
- do not leave your foot on the brake pedal.

First use

To initialise the function, press the control for approximately 2 seconds.



Lower: downwards adjustment of the platform sill

Press the control downwards continuously.

Release the button to stop the movement, "3 beeps" indicate that you have reached the maximum limit, the movement stops automatically.



Raise: upwards adjustment of the platform sill

Press the control upwards continuously.

Release the button to stop the movement, "3 beeps" indicate that you have reached the maximum limit, the movement stops automatically.

Return to the optimum sill height

Press the control up or down twice in succession, the opposite of the position of the load sill.

Malfunctions

If the load sill is not adjusted when the control is pressed, "3 beeps" indicate a malfunction for the following reasons:

- foot on the brake pedal with the key in the ignition,
- excessive use of the manual correction,
- low battery charge,
- other.

If the audible signal persists, contact a PEUGEOT dealer or a qualified workshop.

Deactivation of manual height correction



With the vehicle stationary:

- press and hold,
- release the control.

Deactivation is confirmed by the LED which is on. It remains on for approximately 30 seconds.

Return to manual height correction



With the vehicle stationary:

- press and hold,
- release the control.

Return to manual correction is confirmed by the LED which goes off.

According to the configuration, a beep may be heard during these operations.



You must deactivate the manual height correction in the following situations:

- when working underneath the vehicle,
- when changing a wheel,
- when the vehicle is being transported by lorry, train, ferry, boat, ...

Good practice

When stationary and with the ignition key removed, excessive use of the system consumes battery power.

Driving with the height of the rear platform:

- too low, risks damaging the technical components underneath the vehicle,
- too high, risks unstable driving.

If you start and the warning lamp flashes, to switch it off:

- correct the position of the manual control which is still at the lower or upper limit,
- or drive slowly at above 6 mph (10 km/h), until height correction returns to automatic mode.

Long term parking

Avoid parking for a long duration on ground which could present a potential obstacle as your vehicle could lower.

Following a long period out of use, the height of the platform may change due to the automatic height correction on unlocking or on opening one of your vehicle's doors.

Warning lamp



Refer to the "Instruments and controls" section of chapter 2.



MIRRORS AND WINDOWS

MIRRORS

If fitted on your vehicle, the mirror is supplemented by a 2nd lower mirror. This mirror is convex to broaden the field of side vision. Objects observed are, in reality, closer than they appear. Therefore, take this into account in order to judge the distance correctly.

Electric door mirrors

- Move switch **A** to the right or to the left to select the corresponding mirror.
- Move knob **B** in all four directions to adjust.
- Return switch **A** to the centre position.



Electric folding

If your vehicle is fitted with this function, the mirrors can be folded electrically from the inside, with the vehicle parked and the ignition on:

- Place switch **A** in the centre position.
- Pull switch **A** rearwards.

From the outside, lock the vehicle using the remote control or the key.

Electric unfolding

The electric unfolding of the mirrors is possible with the remote control or the key on unlocking the vehicle, unless folding was selected using switch **A**. In this case, pull the switch rearwards from the centre position again.



The folding / unfolding on locking / unlocking can be deactivated. Contact a PEUGEOT dealer or a qualified workshop.

Heated mirrors

If your vehicle is fitted with this function, press the rear screen demisting button.

Manual door mirrors

Move the lever in all four directions to adjust.

When the vehicle is parked, the door mirrors can be folded back manually.

If the mirror casing has come out of its initial location, with the vehicle stationary, reposition the mirror casing manually or use the electric folding switch.

There is no risk of breakage even in the presence of ice.



Manual rear view mirror

The rear view mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.



SURVEILLANCE MIRROR

This mirror, placed on top of the central mirror, enables the driver or front passenger to observe all the rear seats.

Fitted on its own ball joint, it's manual adjustment is simple and provides a view of the rear interior of the vehicle.

It can also be adjusted for improved visibility during manoeuvres or when overtaking.



REAR WINDOWS

2nd row side windows


If fitted on your vehicle, the 2nd row side windows can be opened.

Squeeze the two controls then move the window sideways. 4 notches are available.

While driving, the window must be closed or secured on one of the 4 notches.

3rd row rear quarter lights

These are fixed.

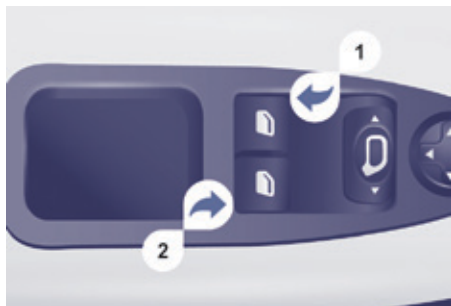

ELECTRIC WINDOWS

1. Driver's electric window control
2. Passenger electric window control


There are two operating modes:

Manual mode

Press or pull the control, without passing the point of resistance. The window stops when you release the control.

Automatic mode

Press or pull the control, beyond the point of resistance. The window opens or closes fully when the control is released. Pressing the control again stops the movement of the window.

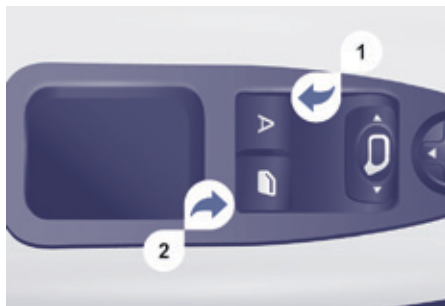

The electrical functions of the electric windows are deactivated:

- approximately 45 seconds after the ignition is switched off,
- after one of the front doors is opened, if the ignition is off.

Safety anti-pinch

If your vehicle is fitted with the safety anti-pinch function, when the window rises and meets an obstacle, it stops and partially lowers.

In the event of unwanted opening of the window on closing, press the control until the window is fully open. Within the next 4 seconds, pull the control until the window is fully closed.

The safety auto-reverse does not operate during these operations.

Reinitialisation

Following reconnection of the battery, the safety anti-pinch function must be reinitialised.

Lower the window fully, then raise it, it will rise in steps of a few centimetres each time the control is pressed. Repeat the operation until the window is fully closed.

Continue to press the control for at least one second after the window closed position has been reached.

The safety anti-pinch does not operate during these operations.


Good practice

If the electric windows meet an obstacle during operation, you must reverse the movement of the window. To do this, press the control concerned.

When the driver operates the passenger electric window controls, he must ensure that no one is preventing correct closing of the windows.

The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

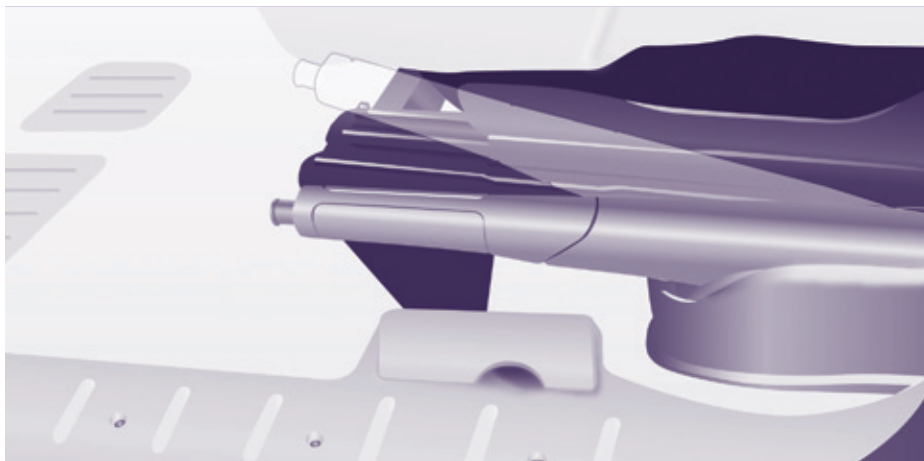

DRIVING SAFELY PARKING BRAKE

Applying

Pull the parking brake lever up to immobilise your vehicle.

Check that the parking brake is applied firmly before leaving the vehicle.



If the parking brake is still on or has not been released properly, this is indicated by this warning lamp which comes on on the instrument panel.

When parking on a slope, direct your wheels towards the pavement and pull the parking brake lever up.

There is no advantage in engaging a gear after parking the vehicle, particularly if the vehicle is loaded.

Pull on the parking brake lever, **only with the vehicle stationary**.

In the exceptional case of use of the parking brake when the vehicle is moving, apply the brake by pulling gently to avoid locking the rear wheels (risk of skidding).

Releasing

Pull the lever and press the button to lower the parking brake lever.




HAZARD WARNING LAMPS

Press this button, the direction indicators flash.

They can operate with the ignition off.

The hazard warning lamps should only be used in dangerous situations, when stopping in an emergency or when driving in unusual conditions.

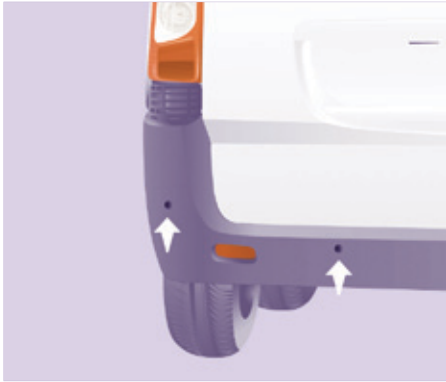

REAR PARKING SENSORS

The audible and/or visual rear parking sensor system consists of four proximity sensors, installed in the rear bumper. The sensors detect any obstacle which enters the field: person, vehicle, tree, fence, behind the vehicle during the manoeuvre.

Certain objects detected at the beginning of the manoeuvre will no longer be detected at the end of the manoeuvre due to the blind spots between and below the sensors. Examples: stake, roadworks cone or pavement post.




Engage reverse gear

An audible signal confirms the activation of the system by engaging reverse gear.

The proximity information is indicated by an audible signal which becomes more rapid as the vehicle approaches the obstacle. When the distance between the rear of the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous.

Display in the screen

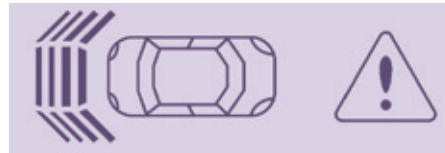

Stop the assistance

Change to neutral.

Activation / Deactivation



You can activate or deactivate the system by pressing this button.

The activation or deactivation of the system is stored when the vehicle stops.

Malfunction

In the event of a malfunction, when reverse gear is engaged the LED in the button comes on, accompanied by an audible signal and a message in the screen. Contact a PEUGEOT dealer or a qualified workshop.

Good practice

In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow.

The system will be deactivated automatically if a trailer is being towed or if a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by PEUGEOT).

The parking assistance cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.



HORN

Press the centre of the steering wheel.

ANTI-LOCK BRAKING SYSTEM (ABS - EBFD)

The ABS and EBFD (electronic brake force distribution) systems improve the stability and manoeuvrability of your vehicle on braking, in particular on poor or slippery surfaces.

The ABS prevents locking of the wheels, the EBFD provides control of the braking pressure wheel by wheel.

Good practice

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock. It does not reduce the braking distance.

On very slippery surfaces (ice, oil, etc...) the ABS may increase the braking distance. When braking in an emergency, do not hesitate to press the brake pedal firmly, without releasing the pressure, even on a slippery surface, you will then be able to continue to manoeuvre the vehicle to avoid an obstacle.

Normal operation of the ABS may be felt by slight vibration of the brake pedal.

When changing wheels (tyres and rims), ensure that these are recommended by PEUGEOT.



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, it indicates a malfunction of the ABS which could result in a loss of control of the vehicle on braking.



If this warning lamp comes on, together with the brake and STOP warning lamps, accompanied by an audible signal and a message in the screen, it indicates a malfunction of the electronic brake force distribution which could result in a loss of control of the vehicle on braking.

Stop as soon as it is safe to do so.

In both cases, contact a PEUGEOT dealer or a qualified workshop.

EMERGENCY BRAKING ASSISTANCE SYSTEM (EBA)

In an emergency, this system enables the optimum braking pressure to be reached more quickly, press the pedal firmly without releasing it. It is triggered by the speed at which the brake pedal is activated.

This alters the resistance of the brake pedal under your foot.

To prolong the operation of the emergency braking assistance system: keep your foot on the brake pedal.



ANTI-SLIP REGULATION (ASR) AND DYNAMIC STABILITY CONTROL (DSC)

These systems are linked and complement the ABS.

The ASR system is very useful for maintaining optimum drive and avoiding losses of control of the vehicle on acceleration.

The system optimises drive to prevent the wheels skidding, by acting on the brakes of the drive wheels and on the engine. It also allows the directional stability of the vehicle to be improved on acceleration.

Use the DSC to hold your course without attempting to countersteer.

If there is a variation between the trajectory followed by the vehicle and that required by the driver, the DSC system automatically acts on the engine and the brake of one or more wheels, in order to put the vehicle back on course.

Operation



The warning lamp flashes when operation of the ASR or DSC is triggered.

Deactivation

In certain exceptional conditions (starting the vehicle when stuck in mud or snow, or on loose ground...), it could prove useful to deactivate the ASR and DSC systems to make the wheels spin and regain grip.



- Press the button, located on the centre console.
- The LED comes on: the ASR and DSC systems no longer operate.

They engage again:

- automatically above 30 mph (50 km/h),
- manually by pressing the button again.

Operating fault



When a malfunction of the systems occurs, the warning lamp and the LED come on, accompanied by an audible signal and a message in the screen.

Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

The warning lamp may also come on if the tyres are under-inflated. Check the pressure of each tyre.

Good practice

The ASR/DSC systems offer increased safety during normal driving, but should not encourage the driver to take risks or to drive at high speed.

The operation of these systems is assured only if the recommendations of the manufacturer regarding the wheels (tyres and rims), the braking components, the electronic components and fitting and repair procedures are observed.

After an impact, have these systems checked by a PEUGEOT dealer or a qualified workshop.



"GRIP CONTROL"

On snow, mud and sand, this traction system, associated with the Michelin® Agilis 51 M+S all terrain tyres, provides a compromise between safety, adhesion and traction.

It allows progress to be made in most conditions of low adhesion.



The accelerator pedal must be pressed sufficiently so that the engine power can be used to effectively manage the various parameters.

Correct use

Your vehicle is designed principally to drive on tarmac roads but it allows you to drive on other less passable terrain occasionally.

However, particularly when your vehicle is heavily laden, it does not permit off-road activities such as:

- crossing and driving on ground which could damage the underbody or tear off components (fuel pipe, fuel cooler, ...), particularly by obstacles or stones,
- driving on ground with steep gradients and poor grip,
- crossing a stream.



This **DSC** mode is calibrated for a low level of skidding, based on different conditions of grip encountered on the road.

When the ignition is switched off, the system returns automatically to DSC mode.



This **DSC OFF** mode is only suitable for specific conditions encountered when moving off or at low speed.

Above 30 mph (50 km/h) the system returns to DSC mode automatically.



This **snow** mode allows the vehicle to adapt its strategy to the conditions of grip encountered for each of the two front wheels, on moving off.

When moving, the system optimises wheelspin to provide the best acceleration possible for the grip available.



This **off-road** mode (mud, wet grass...) allows, when moving off, considerable wheelspin on the wheel with the least grip to favour clearing of the mud and regain "grip". At the same time, the wheel with the most grip is controlled in such a way as to transmit as much torque as possible.

When moving, the system optimises wheelspin to meet the driver's requirements as fully as possible.



This **sand** mode allows a little wheelspin on the two driving wheels at the same time to allow the vehicle to move forward and reduces the risk of getting stuck in the sand. Do not use the other modes on sand as the vehicle may become stuck.



SEAT BELTS

Height adjustment

Squeeze the control with the return and slide the assembly on the driver's seat side and on the individual passenger seat side.

If your vehicle is fitted with a front bench, the height of the seat belt associated with the centre seat cannot be adjusted.

Fastening

Pull the strap, then insert the tongue into the buckle.

Check that the seat belt is fastened correctly by pulling the strap.



Unfastening

Press the red button.



Driver's seat belt not fastened warning lamp

When the vehicle is started, this warning lamp comes on if the driver has not fastened their seat belt.



Passenger seat belt not fastened warning lamp

If your vehicle is fitted with a front passenger seat, when the vehicle is started, this warning lamp comes on if the passenger has not fastened their seat belt.

Good practice

The driver must ensure that passengers use the seat belts correctly and that they are all strapped in securely before moving off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

The seat belts are fitted with an inertia reel which automatically adjusts the length of the strap to your size.

Do not use accessories (clothes pegs, clips, safety pins, etc.) which allow the seat belt straps to fit loosely.

Ensure that the seat belt has reeled in correctly after use.

After folding or moving a seat or a rear bench seat, ensure that the seat belt has reeled in correctly and that the buckle is ready to accommodate the tongue.

Depending on the nature and seriousness of any impact, the pretensioning device may be deployed before and independently of inflation of the airbags. It instantly tightens the seat belts against the body of the occupants.

Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

The force limiter reduces the pressure of the seat belt against the body of the occupants. The pretensioning seat belts are active when the ignition is switched on.

The inertia reels are fitted with a device which automatically locks the strap in the event of a collision or emergency braking or if the vehicle rolls over.

You can unfasten the seat belt by pressing the red button on the buckle. Guide the seat belt after unfastening.

The airbag warning lamp comes on if the pretensioners are deployed. Contact a PEUGEOT dealer or a qualified workshop.

In order to be effective, a seat belt must:

- restrain one person only,
- must not be twisted, check by pulling in front of you with an even movement,
- be tightened as close to the body as possible.

The upper part of the seat belt should be positioned in the hollow of the shoulder.


The lap part should be placed as low as possible on the pelvis.

Do not invert the seat belt buckles as they will not fulfil their role completely. If the seats are fitted with armrests, the lap part of the seat belt should always pass under the armrest.

Check that the seat belt is fastened correctly by pulling the strap firmly.


Recommendations for children:

- use a suitable child seat if the passenger is less than 12 years old or shorter than one metre fifty,
- never allow a child to travel on your lap, even with the seat belt fastened.

 For more information on child seats, refer to the "Children on board" section of chapter 4.

In accordance with current safety regulations, your PEUGEOT dealer can guarantee all work or any checks, from testing to maintenance, on your seat belt equipment.

Have the seat belts checked regularly (even after a minor impact) by a PEUGEOT dealer or a qualified workshop: they must not show any signs of wear, cutting or fraying and they must not be converted or modified.

 Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

FRONT SEAT BELTS

With front airbags

The front seats are fitted with pretensioners and force limiters.

Without front airbag

If your vehicle is fitted with a front bench without front airbag, the centre passenger's seat belt does not have a pretensioner.

REAR SEAT BELTS

If your vehicle is fitted with an individual seat and a 2-seat bench, the 3 seats are fitted with three-point seat belts and inertia reels.

The centre seat has its seat belt guide and inertia reel integrated with the seat back.



In rows 2 and 3, take care to fasten the correct seat belt in the correct buckle. Do not mix the seat belt or the buckle of the side seats with the buckle or the seat belt of the centre seat.




SAFETY SYSTEMS

Roll Over Mitigation*

This system, linked with the DSC, supplements the ABS-EBFD, ASR-DSC and EBA braking functions, already covered in this document, to guarantee a high level of active safety. Indeed, the ROM system was intended originally for top-of-the-range 4x4 type vehicles and today it is fitted on your vehicle.

In situations of extreme transverse acceleration, this module limits the risks of the vehicle rolling over by acting on the brakes.

* Roll-over prevention system.

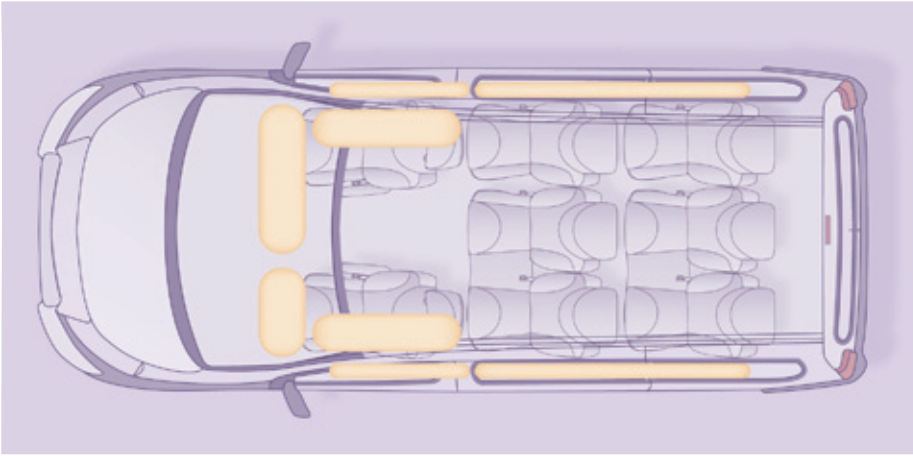

AIRBAGS

The airbags have been designed to maximise the safety of the occupants (with the exception of the centre seats of rows 2 and 3) in the event of a serious collision; they work in conjunction with the force limiting seat belts. In the event of a serious collision, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the airbags inflate instantly and contribute towards better protecting the occupants

of the vehicle. Straight after the impact the airbags quickly deflate so as to not impede visibility, or the exit of passengers if required.

- in the event of a minor or rear impact and in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to contribute towards providing your protection in these situations.

The seriousness of the collision depends on the nature of the obstacle and the speed of the vehicle at the moment of impact.

i Airbags only operate when the ignition is switched on.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not operate.

The deployment of an airbag or airbags is accompanied by a slight discharge of smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.



- +** It is imperative that the passenger's airbag is deactivated if a child seat is installed facing rearwards. Refer to the "Children on board" section of chapter 4.

Airbags

Good practice

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hinder the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel at a PEUGEOT dealer or a qualified workshop.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. In fact, the bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Lateral airbags

Only put recommended covers on the seats. These will not hinder inflation of the lateral airbags. Contact a PEUGEOT dealer or a qualified workshop.

Do not fix or attach anything to the seat backs. This could cause injury to the chest or arms when the lateral airbag inflates.

Do not sit with the upper part of the body any nearer to the door than necessary.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Do not allow passengers to place their feet on the dashboard, they risk serious injury if the airbag is deployed.

Smoke as little as possible as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head when the curtain airbag inflates.

Do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.



Lateral airbags


If fitted on your vehicle, this is a system which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each lateral airbag is fitted in the front seat back frame, on the door side.

Deployment

It is deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the front occupant of the vehicle and the corresponding door trim panel.

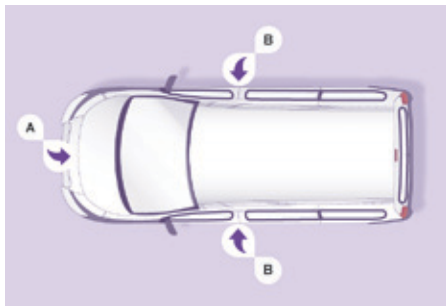

Impact detection zones

- A.** Front impact zone.
- B.** Side impact zone.

i In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

The airbag is not deployed in the event of a rear or front collision.

Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.

Curtain airbags

This is a system which protects the driver and passengers (with the exception of the centre seats of rows 2 and 3) in the event of a serious side impact in order to limit the risk of head injuries.

Each curtain airbag is incorporated in the pillars and the upper part of the passenger compartment.

Deployment

It is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.




Front airbags

The front airbags are fitted in the centre of the steering wheel for the driver and in the dashboard for the front passenger.

Deployment

They are deployed, except the passenger's front airbag if it has been deactivated, in the event of a serious front impact applied to all or part of the front impact zone **A** in the longitudinal centreline of the vehicle on a horizontal plane directed from the front towards the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion their forward movement.

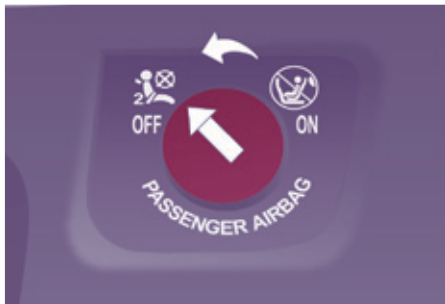


Deactivation

The passenger's front airbag alone can be deactivated:

- **with the ignition switched off**, insert the key into the passenger's airbag deactivation switch,
- turn it to the **"OFF"** position,
- then remove the key keeping the switch in the new position.



The airbag warning lamp in the instrument panel is on while the airbag is deactivated.

 To ensure the safety of your child, it is essential to deactivate the passengers airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured if the airbag were to inflate.

Reactivation


In the **"OFF"** position, the passenger's airbag will not be deployed in the event of an impact.

As soon as the child seat is removed, turn the airbag switch to the **"ON"** position to reactivate the airbag and thus ensure the safety of your passenger in the event of an impact.

Front airbag fault



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked.


 If the two airbag warning lamps are on continuously, do not install a "rearward facing" child seat. Contact a PEUGEOT or a qualified workshop.

GENERAL POINTS ON CHILD SEATS


Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please follow these precautions:

- all children under the age of 12 or less than one metre fifty tall must travel in approved child seats suited to their weight, on seats fitted with a seat belt or ISOFIX mountings,
- statistically, the safest seats in your vehicle for the transportation of children are the rear seats,
- a child weighing less than 9 kg must travel in the "rearward facing" position both in the front and in the rear,
- the passenger must not travel with a child on their lap.

 **PEUGEOT recommends** that children should travel on the **rear seats** of your vehicle:

- **"rearward-facing"** up to the age of 3,
- **"forward-facing"** over the age of 3.

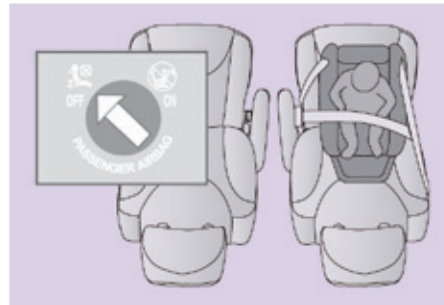


Installing a child seat at the front

"Rearward facing"

When a "rearward facing" child seat is installed on the front passenger seat, it is essential that the passenger's front airbag is deactivated. Otherwise, the child would risk being seriously injured or even killed if the airbag were deployed.


The rules for carrying children are specific to each country. Consult the current legislation in your country.

Please consult the list of seats approved in your country. The Isofix mountings, the rear seats, the passenger airbag and the deactivation of this airbag depend on the version sold.

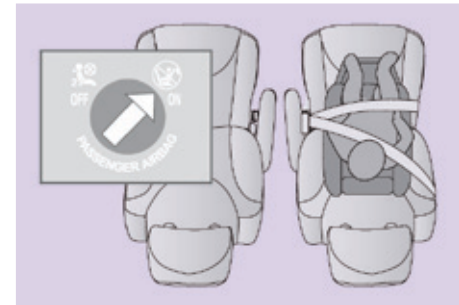

"Forward facing"

When a "forward facing" child seat is installed on the front passenger seat, leave the passenger's front airbag activated.

 The child seats function and the passenger's front airbag deactivation function are common to the entire PEUGEOT range.

If the passenger's front airbag is not deactivated, the installation of a "rearward facing" child seat in the front is strictly prohibited.

Child safety


Installation of a child seat at the rear

"Rearward facing"

When a "rearward facing" child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the "rearward facing" child seat does not touch the vehicle's front seat.

"Forward facing"

When a "forward facing" child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the legs of the child in the "forward facing" child seat do not touch the vehicle's front seat.


 Ensure that the seat belt is correctly tensioned.

For child seats with a support leg, ensure that this is in firm contact with the floor. If necessary, adjust the front seat of the vehicle.




DEACTIVATING THE PASSENGER'S FRONT AIRBAG

The warning label present on both sides of the passenger's sun visor repeats this advice. In line with current legislation, the following tables contain this warning in all of the languages required.

 Never install a rearward facing child restraint system on a seat protected by an active front airbag. This could cause the death of the child or serious injury.



Passenger airbag OFF

 For information on deactivating the passenger's front airbag, refer to the "Airbags" section.

AR	لإجلال الطفل الوجه باتجاه الورا على مقعد سيارة مجهز بوسادة أمان هوائية أمامية مغلقة، فقد يؤدي هذا إلى التسبب بموت الطفل أو بإصابات خطيرة لديه.
BG	НИКОГА НЕ инсталирайте детско столче на седалка с АКТИВИРАНА предна ВЪЗДУШНА ВЪЗГЛАВНИЦА. Това можеда причини СМЪРТ или СЕРИОЗНО НАРАНЯВАНЕ на детето.
CS	NIKDY neumístujte dětské zádržné zařízení orientované směrem dozadu na sedadlo chráněné AKTIVOVANÝM čelním AIRBAGEM. Hrozí nebezpečí SMRTI DÍTĚTE nebo VAŽNĚHO ZRANĚNÍ.
DA	Brug aldrig en bagudvendt barnestol på et sæde der er beskyttet af en aktiv airbag. Død eller alvorlig skade på barnet kan forekomme.
DE	Verwenden Sie NIEMALS einen Kindersitz oder Babyschale gegen die Fahrtrichtung bei AKTIVIERTEM Airbag, TOD oder ERNSTHAFTE VERLETZUNGEN können die Folge sein.
EL	Μη χρησιμοποιείτε ΠΟΤΕ παιδικό κάθισμα με την πλάτη του προς το εμπρός μέρος του αυτοκινήτου, σε μια θέση που προστατεύεται από ΜΕΤΩΠΙΚΟ αερόσακο που είναι ΕΝΕΡΓΟΣ. Αυτό μπορεί να έχει σαν συνέπεια το ΘΑΝΑΤΟ ή το ΣΟΒΑΡΟ ΤΡΑΥΜΑΤΙΣΜΟ του ΠΑΙΔΙΟΥ
EN	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur
ES	NO INSTALAR NUNCA EL SISTEMA DE RETENCIÓN PARA NIÑOS DE ESPALDAS AL SENTIDO DE LA CIRCULACIÓN SOBRE UN ASIENTO PROTEGIDO CON UN COJÍN INFLABLE FRONTAL (AIRBAG) ACTIVADO. ESTO PUEDE CAUSAR LA MUERTE DEL BEBE O HERIRLO GRAVEMENTE.
ET	Ärge kasutage kunagi lapse turvatooli seljaga sõidusuunas sõiduki istmel mis on kaitstud AKTIVEERITUD TURVAPADJAGA. See võib põhjustada lapsele RASKEID VIGASTUSI või SURMA.
FI	ÄLÄ KOSKAAN aseta lapsen turvaistuinta selkä ajosuuntaan istuimelle, jonka edessä suojana on käyttöön aktivoitu TURVATYÖNY. Sen laukeaminen voi aiheuttaa LAPSEN KUOLEMAN tai VAKAVAN LOUKKAANTUMISEN.
FR	NE JAMAIS installer de système de retenue pour enfants faisant face vers l'arrière sur un siège protégé par un COUSSIN GONFLABLE frontal ACTIFÉ. Cela peut provoquer la MORT de l'ENFANT ou le BLESSER GRAVEMENT
HR	NIKADA ne postavljati dječju sjedalicu leđima u smjeru vožnje na sjedalo zaštićeno UKLJUČENIM prednjim ZRAČNIM JASTUKOM. To bi moglo uzrokovati SMRT ili TEŠKŪ OŽLJEDU djeteta.
HU	SOHA ne használnjok menetíránynak háttal beszerelt gyermekülést olyan ülésen, amely AKTIVÁLT ÁLLAPOTÚ (BEKAPCSOLT) FRONTLÉGSÁKKAL van védve. Ez a gyermek halálát vagy súlyos sérülését okozhatja.
IT	NON installare MAI seggiolini per bambini posizionati in senso contrario a quello di marcia su un sedile protetto da un AIRBAG frontale ATTIVATO. Ciò potrebbe provocare la MORTE o FERITE GRAVI al bambino.
LT	NIEKADA neįrenkite vaiko prilaikymo priemonės su atgal atgręžtu vaiku ant sėdynės, kuri saugoma VEIKIANČIOS priekinės ORO PAGALVĖS. Išsiskleidus oro pagalvei vaikas gali būti MIRTINAI arba SUNKIAI TRAUMUOTAS.
LV	NAV PIEĻĀUJAMS uzstādīt uz aizmuguri vērstu bērnu sēdekļi priekšējā pasažiera vietā, kurā ir AKTIVIZĒTS priekšējais DROŠĪBAS GAISA SPILVENS. Tas var izraisīt BĒRNA NĀVI vai radīt NOPIETNUS IEVAINOJUMUS.

Child safety

MT	Gatt m'għandek thalli tifel/tifla marbut f'siggu dahu lejn l-Airbag attiva, għalix tista' tikkawza korriment serju jew anke mewt lit-tifel/tifla
NL	Plaats NOOIT een kinderzitje met de rug in de rijrichting op een zitplaats waarvan de AIRBAG is INGESCHAKELD. Bij het afgaan van de airbag kan het KIND ERNSTIG OF DODELIJK GEWOND raken.
NO	Installer ALDRI et barnesete med ryggen mot kjøretningen i et sete som er beskyttet med en frontal AKTIVERT KOLLISJONSPUTE, BARNET risikerer å bli DREPT eller HARDT SKADET.
PL	NIGDY nie instalować fotelika dziecięcego w pozycji "tyłem do kierunku jazdy" na siedzeniu wyposażonym w CZOŁOWĄ PODUSZKĘ POWIETRZNAJĄ w stanie AKTYWNYM. W przeciwnym razie dziecko narażone będzie na ŚMIERĆ lub BARDZO POWAŻNE OBRAŻENIA CIAŁA w momencie wyzwolenia poduszki powietrznej
PT	NUNCA instale um sistema de retenção para crianças de costas para a estrada, num banco protegido por um AIRBAG frontal ACTIVADO. Esta instalação poderá provocar FERIMENTOS GRAVES ou a MORTE da CRIANÇA.
RO	Nu instalati NICIODATA un sistem de retenere pentru copii, dispus cu spatele in directia de mers, pe un loc din vehicul protejat cu AIRBAG frontal ACTIVAT. Aceasta ar putea provoca MOARTEA COPILULUI sau RANIREA lui GRAVA.
RU	ВО ВСЕХ СЛУЧАЯХ ЗАПРЕЩАЕТСЯ использовать обращенное назад детское удерживающее устройство на сиденье, защищенном ФУНКЦИОНИРУЮЩЕЙ ПОДУШКОЙ БЕЗОПАСНОСТИ, установленной перед этим сиденьем. Это может привести к ГИБЕЛИ РЕБЕНКА или НАНЕСЕНИЮ ЕМУ СЕРЬЕЗНЫХ ТЕЛЕСНЫХ ПОВРЕЖДЕНИЙ
SK	NIKDY nepoužívajte na prednom sedadle chránenom AKTÍVNYM AIRBAGOM detské zadržívacie zariadenie umiestnené v proti smere jazdy. Môže to spôsobiť SMRT, alebo VÁŽNE ZRANENIE DIEŤAŤA.
SL	NIKOLI ne nameščajte otroškega sedeža s hrbtom v smeri vožnje, če je VARNOSTNA BLAZINA pred sprednjim sopotnikovim sedežem AKTIVIRANA. Takšna namestitve lahko povzroči SMRT OTROKA ali HUDE POŠKODBE.
SR	NIKADA ne koristite dečje sedišta koje se okreće unazad na sedištu zaštićenim AKTIVNIM VAZDUŠNIM JASTUKOM ispred njega, jer mogu nastupiti SMRT ili OZBILJNA POVREDA DETETA.
SV	Använd ALDRIG en bakåtvänd barnstol i ett säte skyddat av en AKTIV AIRBAG framför det. Det kan orsaka ALLVARLIGA eller DÖDLIGA skador på barnet.
TR	KEŞİNLKLE HAVA YASTIĞI AKTİF olan ön koltuğa yüzü arkaya dönük bir çocuk koltuğu yerleştirmeyiniz. Bu ÇOCUĞUN ÖLMESİNE veya ÇOK AĞIR YARALANMASINA sebep olabilir.



"ISOFIX" MOUNTINGS

Your vehicle has been approved to the latest ISOFIX regulation.

If fitted on your vehicle, the regulation ISOFIX mountings are located by labels.

The mountings comprise three rings for each seat:

- two front rings **A**, located between the vehicle seat backrest and cushion, indicated by an "ISOFIX" marking,
- a rear ring **B**, located behind the vehicle's seat, called the Top Tether, for securing the upper strap, indicated by a "Top Tether" marking.

The Top Tether is used to secure the upper strap of child seats that have one. In the event of a front impact, this system limits the forward tipping of the child seat.


This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

The ISOFIX child seats are fitted with two latches which are secured on the two front rings **A**.


Some also have an upper strap which is attached to the rear ring **B**.

To secure the child seat to the Top Tether:

- remove and stow the head restraint before installing a child seat on this seat (refit it once the child seat has been removed),
- pass the child seat upper strap over the top of the seat backrest, between the apertures for the head restraint rods,
- fix the hook on the end of the upper strap to the rear ring **B**,
- tighten the upper strap.

 The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Observe strictly the fitting instructions provided with the child seat.


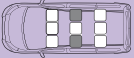


 For information on the possibilities for installing ISOFIX child seats in your vehicle, refer to the summary table.



LOCATIONS FOR ISOFIX CHILD SEATS

In line with European legislation, this table indicates the options for the installation of ISOFIX child seats on the vehicle seats fitted with ISOFIX mountings.

In the case of the universal and semi-universal ISOFIX child seats, the child seat's ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

Weight of the child / indicative age											
	Less than 10 kg (group 0) Up to 6 months approx		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to 1 year approx			From 9 to 18 kg (group 1) From 1 to 3 years approx					
Type of ISOFIX child seat	Infant car seat		"rearward facing"			"rearward facing"		"forward facing"			
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1	
Row 2 outer rear seats with individual seats in Row 1 (a) (b) 	IL-SU		IL-SU			IL-SU		IUF, IL-SU			
Row 2 outer rear seats with 2-seat bench in Row 1 (a) (b) 	IL-SU		X	IL-SU		X	IL-SU	IUF, IL-SU			
Rear seats in Row 3 (a) (b)  	IL-SU		X	IL-SU		X	IL-SU	IUF, IL-SU			

- (a) To install a child seat on a rear seat, move the seats in front forward, then straighten the backrest to allow enough space for the child seat and the child's legs.
- (b) To install a child seat on a rear seat, adjust the rear seat to the fully back position with the backrest straightened.

IUF: seat suitable for the installation of an ISOFIX **U**niversal child seat "forward facing" fitted with an upper strap.


IL-SU: seat suitable for the installation of an ISOFIX **S**emi-**U**niversal child seat, either:

- "rearward facing" fitted with an upper strap or a support leg,
- "forward facing" fitted with a support leg,
- a carrycot fitted with an upper strap or a support leg.

To attach the upper strap, refer to the "ISOFIX mountings" section.




X: seat not suitable for the installation of a child seat of the weight group indicated.

The installation of a carrycot on an outer rear seat prevents the use of the other seats in the row.


 Remove and stow the head restraint before installing a child seat with backrest on a passenger seat. Refit the head restraint once the child seat has been removed.

INSTALLING CHILD SEATS ATTACHED USING THE SEAT BELT

In line with European legislation, this table indicates the options for installing child seats secured using a seat belt and universally approved (a) for the weight of the child and the seat in the vehicle.

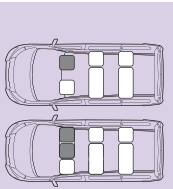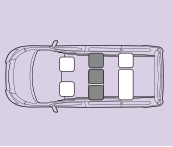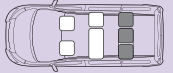Seat			Weight of the child and indicative age			
			Under 13 kg (groups 0 (b) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Row 1 (c) (d)		Individual seat	U	U	U	U
		Bench, outer seat	U	U	U	U
		Bench, centre seat	L1	-	L4, L5	L4, L5
Row 2 (e) (f)		Outer seats	U	U	U	U
		Centre seat	U	U	U	U
Row 3 (e) (f)		Outer seats	U	U	U	U
		Centre seat	U	U	U	U

- (a) Universal child seat: child seat that can be installed in any vehicle using the seat belt.
 - (b) Group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat.
 - (c) Consult the legislation in force in your country before installing your child on this seat.
 - (d) When a "rearward facing" child seat is installed on the front passenger seat, the front passenger airbag must be deactivated. Otherwise the child risks being seriously injured or even killed if the airbag is deployed.
When a "forward facing" child seat is installed on the front passenger seat, the front passenger airbag must remain active.
 - (e) To install a child seat on a rear seat, move the seats in front forward, then straighten the backrest to allow enough space for the child seat and the child's legs.
 - (f) To install a child seat on a rear seat, adjust the rear seat to the fully back position with the backrest straightened.
- U:** seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rearward facing" and/or "forward facing".
- L-:** only the child seats indicated can be installed in the seat in question (depending on country of sale).

 Remove and stow the head restraint before installing a child seat with backrest on a passenger seat. Refit the head restraint once the child seat has been removed.

ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Check that there is no seat belt or seat belt buckle under the child seat, as this could destabilise the seat.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For the installation of a child seat using the seat belt, ensure that the seat belt is well tensioned on the child seat and that it is holding the child seat firmly against the vehicle's seat. If the passenger seat is adjustable, move it forward if necessary.

At the rear, always leave sufficient space between the front seat and:

- a "rearward facing" child seat,
- the feet of a child seated in a "forward facing" child seat.

For this, move the front seat forward and, if necessary, straighten its backrest as well.

For the optimum installation of a "forward facing" child seat, ensure that the back of the child seat is as close as possible to the backrest of the vehicle's seat, or in contact if possible.

The head restraint must be removed before installing a child seat with a backrest on the passenger seat.

Ensure that the head restraint is stowed or attached securely so that it is not thrown around the vehicle in the event of sharp braking.

Refit the head restraint as soon as the child seat is removed.

Children at the front

The legislation on carrying a child on the front passenger seat is specific to each country. Refer to the legislation in force in your country.

Deactivate the passenger's airbag when a "rearward facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.


As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child Lock".

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds to the rear windows.

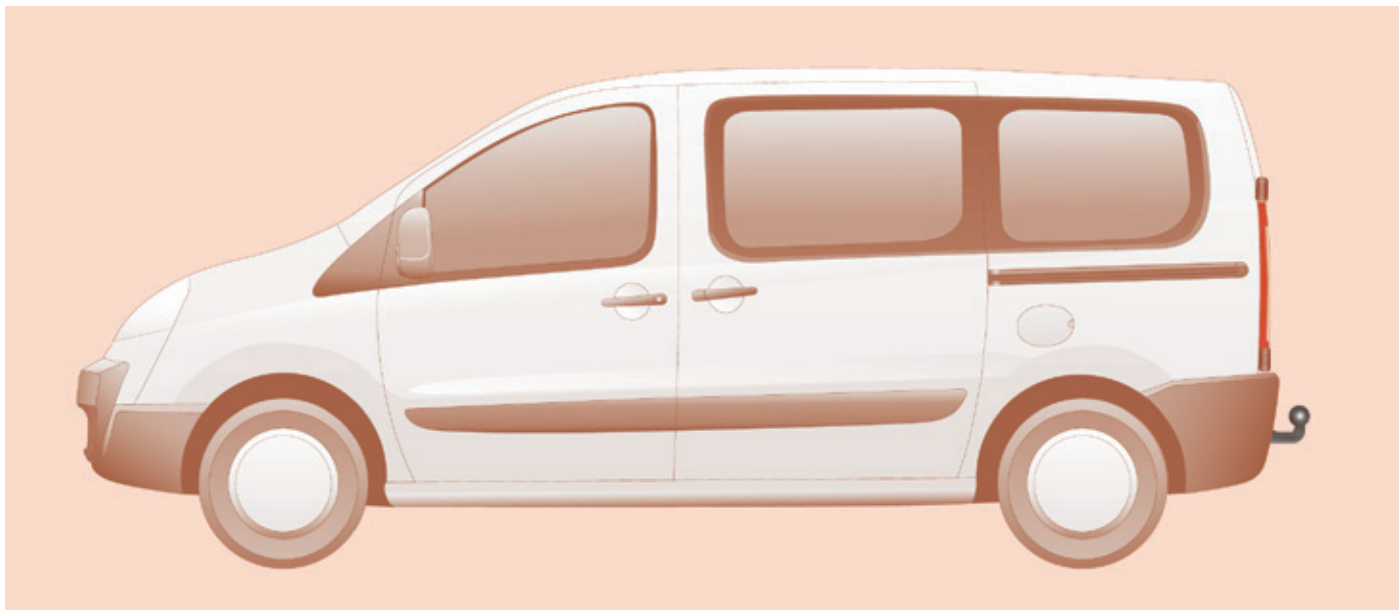

TOWING A TRAILER, CARAVAN, BOAT, ETC...

+ For more information about weights, refer to the administrative documents (registration document, ...) or to the "Weights" section of chapter 8.

Driving advice

A towed vehicle must free wheel: gearbox in neutral.

Distribution of loads

Distribute the load in the trailer so that the heaviest objects are as close as possible to the axle and the nose weight is close to the maximum authorised without, however, exceeding it.

Cooling

Towing a trailer on a slope increases the coolant temperature.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

Towing a trailer

You should therefore use a high gear to lower the engine speed and reduce your speed.

In all cases, pay attention to the coolant temperature.

Good Practice

In certain cases of particularly arduous use (towing the maximum load up a steep slope in high temperatures), the engine automatically limits its power. In this case, the air conditioning is automatically cut off to save engine power.



If the coolant temperature warning lamp comes on, stop the vehicle and switch off the engine as soon as possible.



See the "Levels" section of chapter 6.

+ Tyres

Check the tyre pressures of the towing vehicle (see the "Identification markings" section of chapter 8) and of the trailer, observing the recommended pressures.

Brakes

Towing increases the braking distance. Drive at a moderate speed, change down early and brake gradually.

Side wind

Sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

ABS/DSC

The ABS or DSC systems only control the vehicle, not the trailer or caravan.

Rear parking sensors

The parking sensors system does not function while the vehicle is towing.


Towbar

We recommend the use of genuine PEUGEOT towbars and their harnesses, which have been tested and approved from the design stage of your vehicle, and that you entrust the fitting of this equipment to a PEUGEOT dealer.

If this equipment is not fitted by a PEUGEOT dealer, it is imperative that it is fitted using the electrical pre-equipment installed at the rear of the vehicle and in accordance with the manufacturer's instructions.

In accordance with the general instructions a reminder of which has been given above, we draw your attention to the risk associated with fitting a towbar or electrical accessory not recommended by PEUGEOT. Fitting such equipment could result in the failure of your vehicle's electronic system. Please obtain information from the Manufacturer before fitting this type of equipment.

OTHER ACCESSORIES

 For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

This range is also available, structured around comfort, leisure and maintenance:

Anti-theft alarm, window engraving, first aid kit, high visibility safety vest, rear parking sensors, warning triangle, ...

Front seat covers compatible with airbags, benches, rubber mats, carpet mats, boot tray, roof bars, side blinds, snow chains.

To prevent the mat from becoming caught under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never fit one mat on top of another.

Audio equipment, hands-free kit, speakers, CD changer, navigation, ...

Regardless of the audio and telematic equipment offered on the market, the technical constraints linked with the fitting of equipment of these families of products mean that the special features of the equipment and its compatibility with the capacities of your vehicle's standard equipment must be taken into account. Please contact a dealer for information before fitting such equipment.


Installation of radiocommunication transmitters

Before installing accessory radiocommunication transmitters with an external aerial on your vehicle, you are advised to contact a representative of the PEUGEOT marque.

The PEUGEOT Network will inform you of the specifications (frequency band, maximum output power, aerial position, specific installation conditions) of the transmitters which can be fitted, in accordance with the Motor Vehicle Electromagnetic Compatibility Directive (2004/104/CE).

Trims (except for 163 hp engine), front mud flaps, rear mud flaps, spoilers, sill, ...

Screenwash, replacement fuses, wiper blades, interior and exterior cleaning and maintenance products, replacement bulbs, ...

 The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. You are advised to contact a representative of the Marque to be shown the range of recommended equipment and accessories. Depending on the country in which the vehicle is sold or operated, it is compulsory to have a high visibility safety vest, warning triangle and replacement bulbs available in the vehicle.

Opening the bonnet



OPENING THE BONNET

From inside:

- lift the cover located at the foot of the front left seat.
- pull the release lever upwards.

From outside: partially open the bonnet, lift the safety catch and raise the bonnet.

Bonnet stay

Secure the stay in one of the two notches, according to the height required, to hold the bonnet open.

Before closing the bonnet, replace the stay in its housing.

To close


Lower the bonnet and release it at the end of its travel. Check that the bonnet is properly latched.

"Bonnet open" warning

This warning is linked to the **alarm option** only.




With the engine running or the vehicle moving, a warning lamp and a diagram in the screen, accompanied by an audible signal, warn you that the bonnet is not properly closed.

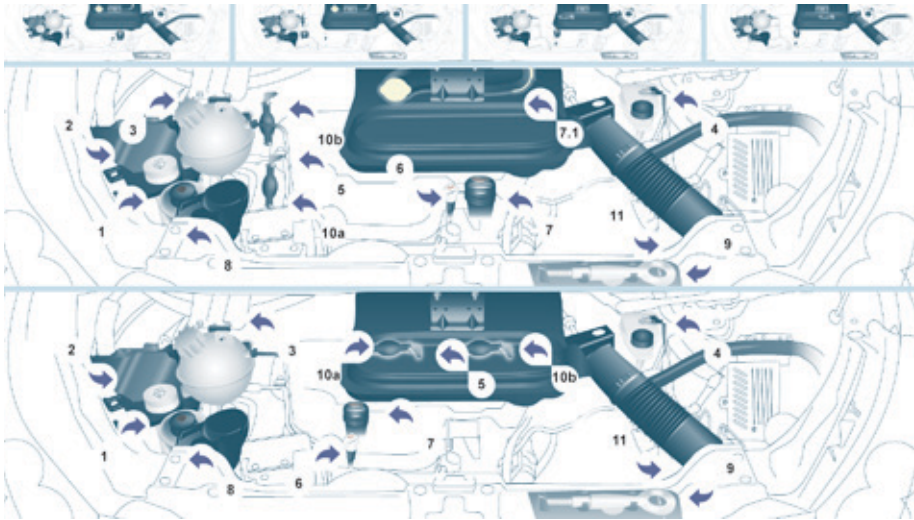

UNDER THE BONNET

DIESEL ENGINES

- 1 - Screen/headlamp wash reservoir.
- 2 - Fusebox.
- 3 - Coolant header tank.
- 4 - Brake and clutch fluid reservoir.
- 5 - Air filter.
- 6 - Engine oil dipstick.
- 7 - Engine oil filler cap.
- 8 - Power steering reservoir.
- 9 - Removable towing eye.
- 10 - Priming pump (a: 1.6 litre HDi;
b: 2 litre HDi).
- 11 - Engine oil filling funnel (2 litre HDi).

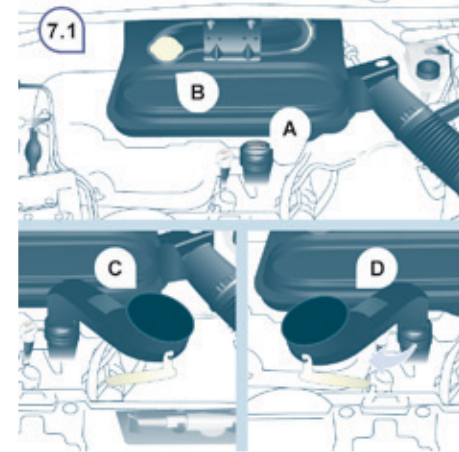


7.1 - Engine oil filler cap.

If your vehicle is fitted with this oil filler tube, proceed as follows:

- A** - Remove the oil filler cap.
- B** - Remove the filler tube from its location.
- C** - Place the filler tube in the filler opening as shown on the illustration.
- D** - Turn it a 1/4 of a turn to the left to lock it then top up the oil.

To refit, proceed in the reverse order without forgetting to retighten the cap **A** correctly.

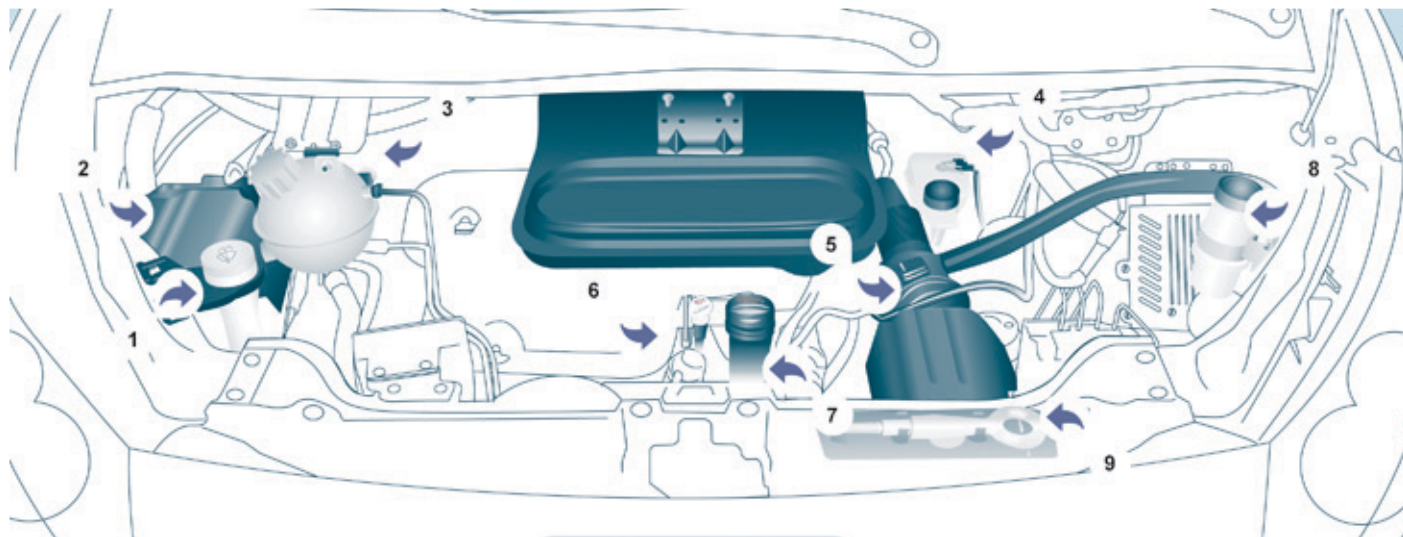

PETROL ENGINE

- | | | |
|------------------------------------|--------------------------------------|------------------------------|
| 1. Screen/headlamp wash reservoir. | 4. Brake and clutch fluid reservoir. | 7. Engine oil filler cap. |
| 2. Fusebox. | 5. Air filter. | 8. Power steering reservoir. |
| 3. Coolant header tank. | 6. Engine oil dipstick. | 9. Removable towing eye. |

LEVELS


i These regular maintenance operations will keep your vehicle in good running order. Consult a PEUGEOT dealer or the servicing and warranty booklet enclosed in the handbook pack.

👁️ If you have to remove / refit the engine style cover, handle it with care to avoid damaging the fixing clips.

Oil level

Check the level regularly and top up between changes.

Check the level with the vehicle level, engine cold, using the dipstick.

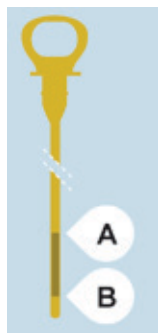

Dipstick


There are two marks on the dipstick:

A = maximum

If you fill past this mark, contact a PEUGEOT dealer or a qualified workshop.

B = minimum

Never allow the level to fall below this mark.

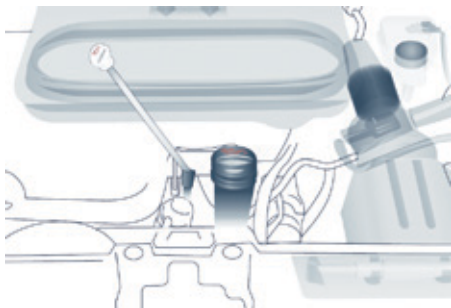

To maintain the reliability of engines and emission control systems, the use of additives in engine oil is prohibited.

Oil change

It is imperative that this is carried out at the intervals specified and the viscosity grade of the oil selected must fulfil the requirements in accordance with the manufacturer's servicing schedule. Ask for advice from a PEUGEOT dealer.

Remove the dipstick before filling.

For the 2 litre HDi engine, use the funnel supplied when filling via the sump opening.

Check the level after filling (never exceed the max mark).

Screw the cap back onto the sump before closing the bonnet.

Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.



Changing the brake fluid

The brake fluid must be changed at the intervals stated, according to the manufacturer's servicing schedule.

Use fluids recommended by the manufacturer, which fulfil DOT4 standards.

The level must be between the MIN and MAX marks on the reservoir.

If fluid has to be added frequently, this indicates a fault which must be checked by a PEUGEOT dealer or a qualified workshop as soon as possible.

Warning lamps

+ Checking by means of the warning lamps in the instrument panel is described in chapter 2, refer to the "Instruments and controls" section.

Cooling system

Only use the fluid recommended by the manufacturer.

Otherwise, you risk seriously damaging your engine.

When the engine is warm, the temperature of the coolant is controlled by the engine fan. As this fan can operate with the ignition key removed and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.

Slacken the cap by 1/4 of a turn to release the pressure to prevent any risk of scalding. When the pressure has dropped, remove the cap and top up the level with coolant.

If fluid has to be added frequently, this indicates a fault which must be checked by a PEUGEOT dealer or a qualified workshop as soon as possible.

Topping up

The level must be between the MIN and MAX marks on the expansion bottle. If more than 1 litre of fluid is required to top up the level, have the system checked by a PEUGEOT dealer or a qualified workshop.

Power steering fluid level

The vehicle must be parked on level ground with the engine cold. Unscrew the cap integrated with the gauge and check the level which must be between the MIN and MAX marks.

Screenwash and headlamp wash level

For best quality cleaning and for your safety, we would advise that you use products of the PEUGEOT range.

Capacity of the screenwash reservoir: approximately 4.5 litres.

If your vehicle is fitted with headlamp washers, the capacity of the reservoir is 7.5 litres.

To ensure optimum cleaning and prevent freezing, this fluid must not be topped up or replaced with plain water.



Diesel additive level (Diesel with particle emission filter)

The minimum level of this additive is indicated by lighting of the service warning light, accompanied by an audible signal and a message in the screen. When this occurs with the engine running it is due to the start of saturation of the particle emission filter (exceptionally prolonged urban type driving conditions: low speed, long traffic jams, ...).

In order to regenerate the filter, you are advised to drive at a speed higher than 40 mph (60 km/h) for at least five minutes as soon as possible, when traffic conditions permit (until the message disappears and the service warning lamp goes off).

During regeneration of the particle emission filter, relay noise may be heard under the dashboard.

If the message is still displayed and if the service warning lamp remains on, contact a PEUGEOT dealer or a qualified workshop.

Topping up

This additive must be topped up by a PEUGEOT dealer or a qualified workshop without delay.

CHECKS

Battery

At the start of winter, have your battery checked by a PEUGEOT dealer or a qualified workshop.

Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances. It may be necessary to check the thickness of the pads, even between services.

Unless there is a leak in the system, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc / drum wear

For any information on checking the brake disc / drum wear, contact a PEUGEOT dealer or a qualified workshop.

Parking brake

Where the parking brake travel is too great or there is a reduction in the performance of the system, the parking brake should be adjusted, even between services.

Have the system checked by a PEUGEOT dealer or a qualified workshop.

Oil filter

Change the filter regularly, in accordance with the servicing schedule.

Carbon filter and passenger compartment filter

The carbon filter permits continuous and effective filtering of dust.

If the passenger compartment filter becomes clogged, this may reduce the performance of the air conditioning system and generate unpleasant odours.

We recommend the use of a combined passenger compartment filter. By means of its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanness of the passenger compartment (reduction of allergic symptoms, unpleasant odours and greasy deposits).

Refer to the servicing and warranty booklet to find out the replacement interval for these components.

Depending on the environment (dusty atmosphere...) and the use of the vehicle (urban driving...), change them twice as often if necessary.



Refer to "Under the bonnet" in section 6.

Particle emission filter (Diesel)



This filter actively contributes to the preservation of air quality by trapping unburnt polluting particles. It is controlled

completely and automatically by the engine management system.

This warning lamp comes on if there is a risk of blockage of the filter.

This alert signals the start of saturation of the particle emissions filter (exceptionally prolonged driving in urban conditions: reduced speed, traffic jams...).

If this alert persists, contact a PEUGEOT dealer or a qualified workshop.

On acceleration after the vehicle has been running for a prolonged period at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust. This water vapour does not have any adverse effect on vehicle handling or the environment.

To regenerate the filter, it is recommended that as soon as driving conditions permit, you drive at a speed of at least 36 mph (60 km/h) for at least 5 minutes (until the warning lamp goes off and/or the message disappears).

Checks

During this regeneration, you may notice that the idling speed is higher than normal and that the cooling fan is running. As operation of the exhaust emissions controls may cause the exhaust gas temperature to reach very high levels, it is recommended that you do not stop the vehicle over easily inflammable surfaces (dry grass and leaves, pine needles, edge of a meadow or forest).



1.6 litre HDi

Bleeding the water contained in the Diesel filter



If this warning lamp comes on, bleed the filter. Otherwise bleed regularly each time the engine oil is changed.

To evacuate the water, unscrew the bleed screw located on the end of the transparent pipe.

Operate until all of the water in the transparent pipe has been drained out then tighten the bleed screw.

HDi engines use advanced technology.

Contact a PEUGEOT or a qualified workshop for all work on the system.



2 litre HDi

Manual gearbox

Have the level checked in accordance with the manufacturer's servicing schedule.

Good practice

To check the main levels and certain components, in accordance with the manufacturer's servicing schedule, refer to the pages of the warranty and maintenance record which correspond to your vehicle's engine.

i Only use products recommended by PEUGEOT or products of equivalent quality and specification.

In order to optimise the operation of units as important as the braking system, PEUGEOT selects and offers specific products.

In order to avoid damaging the electrical units, high pressure washing to clean the engine compartment is strictly prohibited.

After washing the vehicle dampness, or in winter, ice may form on the brake discs and pads: braking efficiency may be reduced. Make some light brake applications to dry and de-ice the brakes.



FILLING WITH FUEL

Low fuel level



When this warning lamp first comes on and when the needle is at the start of the red zone, the minimum fuel tank level has been reached.

At this moment, you have **approximately 8 litres** of fuel remaining.

Fill up without delay to avoid running out of fuel.



Never continue to drive until you run out of fuel as this may damage the emission control and injection systems.

Filling with fuel

The fuel tank must be filled **with the engine off**.



When filling with fuel, do not open the left-hand side door, if fitted on your vehicle, as there is a risk of damage to the fuel filler flap.



You can lock this door using the electric child lock. Refer to "Access" in section of 2.

- Open the fuel filler flap.
Insert the key, then turn it a quarter turn.
- Remove the cap and hook it onto the clip located on the inside of the flap.

It is normal to hear the noise of an inrush of air when the cap is opened as there is a vacuum caused by the sealing of the fuel system.

A label affixed to the inside of the flap reminds you of the type of fuel to be used. More than 8 litres of fuel must be added in order to be registered by the fuel gauge.

When filling the fuel tank, do not continue after the 3rd cut-off of the nozzle. This could cause malfunctions.

The capacity of the fuel tank is approximately 80 litres.

- After filling the fuel tank, lock the cap and close the flap.

Quality of the fuel used for petrol engines



The petrol engines are perfectly compatible with E10 or E24 type petrol biofuels (containing 10 % or 24 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).

Quality of the fuel used for Diesel engines



The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a PEUGEOT dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

FUEL CUT-OFF

In a serious collision, a mechanism automatically prevents fuel from reaching the engine.



The flashing of this warning lamp is accompanied by a message in the screen.


Check that there is no odour or leakage of fuel outside the vehicle and re-establish the fuel supply:

- switch off the ignition (STOP position),
- remove the key,
- put the key back in the ignition,
- switch on the ignition and start.

DIESEL PRIMING PUMP

If you should run out of fuel, it is necessary to prime the circuit:

- fill the fuel tank with at least five litres of diesel,
- squeeze and release the manual priming pump, under the bonnet under the protective cover, until fuel appears in the transparent pipe,
- operate the starter until the engine starts.

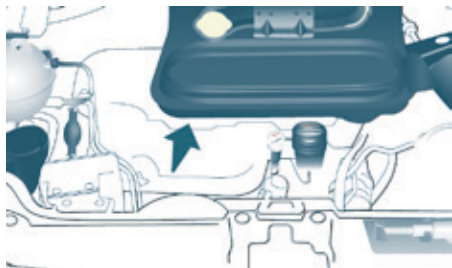

DIESEL PRIMING BUTTON

If you should run out of fuel, it is necessary to prime the system using the priming button:

- fill the fuel tank with at least five litres of Diesel fuel,
- open the bonnet,



- unclip the protective cover for access to the priming push button,
- place the cover to the right of the engine,



- place the two slots in the lugs behind the engine to allow the protective cover to be refitted,



- firmly squeeze and release the manual priming pump until fuel stiffens the pipe,
- operate the starter until the engine starts,




- clip the protective cover in place,
- close the bonnet.

i If the engine does not start first time, do not keep trying. Operate the priming push button again, then start the engine.

BATTERY

This is housed in a compartment located underneath the floor, in front of the front right seat.

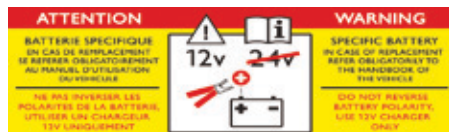

i The presence of this label indicates the use of a 12 V lead-acid battery with special technology and specification, for which the involvement of a PEUGEOT dealer or qualified workshop is required when replacing or disconnecting the battery. Failure to observe this recommendation may cause premature ageing of the battery.

To charge the battery using a battery charger

- Disconnect the battery,
- Follow the instructions for use given by the battery charger manufacturer,
- Reconnect starting with the negative (-) terminal,
- Check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

To start the vehicle from another battery

- Connect the red cable to the positive (+) terminals of the two batteries,
- Connect one end of the green or black cable to the negative (-) terminal of the slave battery,
- Connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery,
- Operate the starter, let the engine run,
- Wait for the engine to return to idle, then disconnect the cables.

i It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.



Before disconnecting the battery, you must wait for 2 minutes after switching off the ignition.

Never disconnect a terminal when the engine is running.

Never charge a battery without first disconnecting the terminals.

After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. If some problems persist after this operation, please contact a PEUGEOT dealer or a qualified workshop.

ECONOMY MODE

After the engine has stopped, with the key in the ignition position, certain functions (windscreen wiper, electric windows, courtesy lamps, audio equipment, etc.) can only be used for a cumulative duration of thirty minutes, to prevent discharging of the battery.

Once the thirty minutes are over, the active functions are put on standby and the battery warning lamp flashes accompanied by a message in the screen.

To resume the use of these functions immediately, start the engine and let it run for a few minutes.

The time available will then be double the time for which the engine was left running. However, this time will always be between five and thirty minutes.

A flat battery will prevent the engine from starting.



PUNCTURE REPAIR KIT

The kit is located at the left hand rear of the vehicle.

The temporary puncture repair kit consists of a compressor and a cartridge (containing a sealant).

i Vehicles supplied with a temporary puncture repair kit do not have a spare wheel or tooling (jack, wheelbrace, ...).

Using the kit

- switch off the ignition,
- affix the speed limitation sticker to the vehicle's steering wheel to remind you that a wheel is in temporary use,
- check that the switch **A** is at position "**0**",
- connect the pipe of the bottle **1** to the valve of the tyre to be repaired,
- connect the compressor's electrical plug to the vehicle's 12V socket,
- start the vehicle and let the engine run,
- switch on the compressor by pressing the switch **A** to position "**1**" until the tyre pressure reaches 2.0 bars,
- remove the compressor, unclip and store the bottle in a sealed bag to avoid staining your vehicle with traces of fluid,
- drive immediately, for approximately two miles (three kilometres), at reduced speed (between 12 and 37 mph (20 and 60 km/h)), to seal the puncture,
- stop to check the repair and the pressure,

i If, after approximately five to ten minutes, you are not able to obtain this pressure, the tyre cannot be repaired; contact a PEUGEOT dealer or a qualified workshop for roadside assistance.

Repairing a wheel



- connect the compressor pipe directly to the valve of the repaired wheel.
 - connect the compressor's electrical plug to the vehicle's 12V socket again,
 - start the vehicle again and let the engine run,
- adjust the pressure using the compressor (to inflate: switch **A** in position "1"; to deflate: switch **A** in position "0" and press button **B**), in accordance with the vehicle's tyre pressure label (located on the door aperture, on the driver's side), then remember to check that the leak has been sealed correctly (no further loss of pressure after several miles (kilometres)),
 - remove the compressor, then stow the complete kit,
 - drive at reduced speed (50 mph (80 km/h) max) limiting the distance travelled to approximately 125 miles (200 km),
 - visit a PEUGEOT dealer or a qualified workshop as soon as possible to have the tyre repaired or replaced by a technician.




Warning, the sealant cartridge contains ethylene-glycol, this product is harmful if swallowed and causes irritation to the eyes. Keep this product out of reach of children.

The expiry date of the sealant is indicated under the cartridge.

The cartridge is intended for a single use; once opened, it must be replaced.

After use, do not discard the cartridge into the environment, take it to a PEUGEOT dealer or to a specialised waste disposal site.

Do not forget to obtain a new sealant cartridge, available from a PEUGEOT dealer or a qualified workshop.

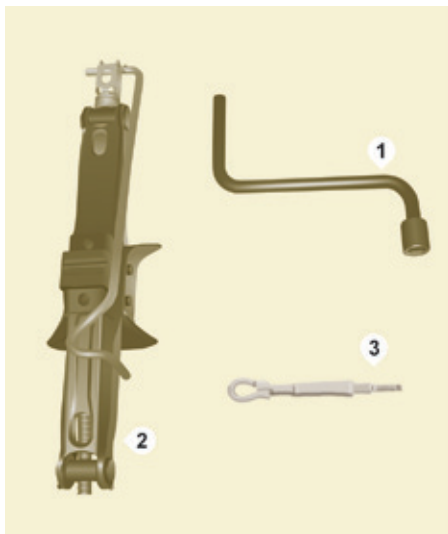


CHANGING A WHEEL

If your vehicle is equipped with a spare wheel located underneath the vehicle, follow these instructions.

1. PARKING THE VEHICLE

- You must ensure that the occupants get out of the vehicle and wait in a safe location.
- If possible, park the vehicle on level, stable and non-slippery ground.
- Apply the parking brake, switch off the ignition and engage first or reverse gear.
- If available, place a chock under the wheel diagonally opposite the one to be changed.

On certain types of ground and/or if heavy loads are being transported, the vehicle must be raised in order to disengage the spare wheel from the carrier. Call a PEUGEOT dealer or a qualified workshop.


 If your vehicle is fitted with suspension with pneumatic height correction, please deactivate the system. Refer to the "Rear suspension" section of chapter 3.



2. TOOLS

- If fitted on your vehicle, open the plastic flap located at the rear left of the vehicle.
- Unscrew the nut then take out the jack and the wheelbrace.

1. Wheelbrace.
2. Jack.
3. Towing eye.

 The jack and the tool kit are specific to your vehicle. Do not use them for other purposes.



3. SPARE WHEEL

- Gain access to the spare wheel from the rear.


i You can switch on the courtesy lamp to improve visibility.



- Open the rear doors.



- Open the cover, located on the sill, to access the carrier bolt.

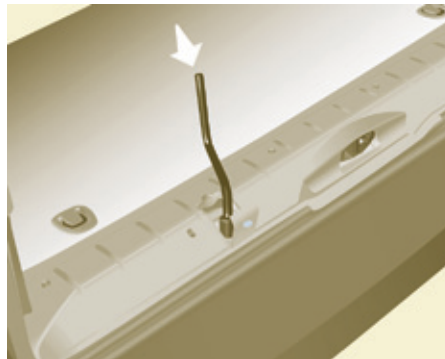

- Unscrew the bolt using the wheelbrace until the carrier is lowered fully.






- Detach the carrier from the hook and place the spare wheel near the wheel to be changed.






4. OPERATING PROCEDURE


- Remove the trim pulling it using the towing eye.
 - Loosen the wheel bolts and start unscrewing them.
- Place the jack in contact with the locating point provided, the one which is closest to the wheel to be changed. Ensure that the jack is straight and that the base of the jack is fully in contact with the ground.
 - Extend the jack to lift the wheel clear of the ground.
 - Resume and complete the unscrewing of the wheel bolts.
 - Remove the bolts and remove the wheel.

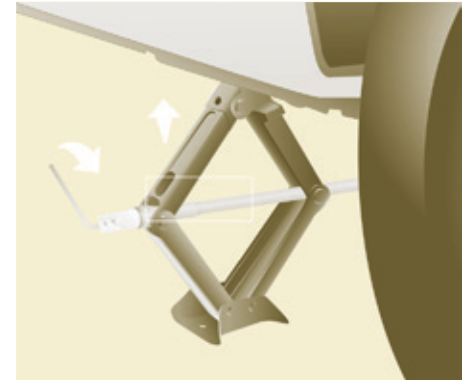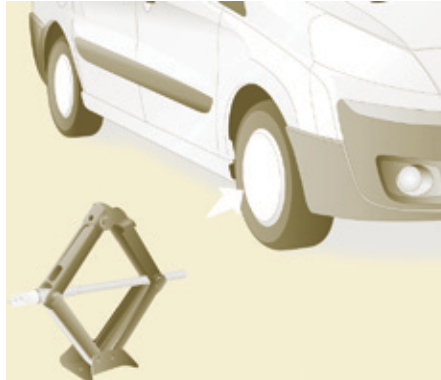

-  Do not extend the jack until you have started unscrewing the bolts on the wheel to be changed and have placed the chock under the wheel diagonally opposite.

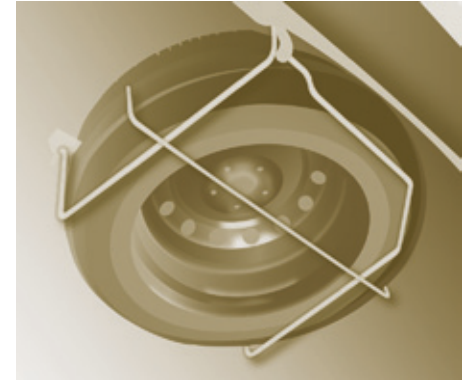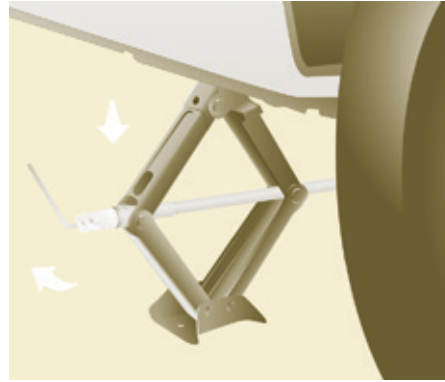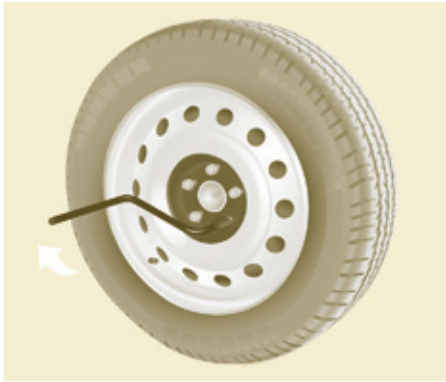

5. FITTING THE SPARE WHEEL

- Position the wheel on the hub and start tightening the wheel bolts by hand.
 - Carry out an initial tightening of the bolts using the wheelbrace.
 - Lower the vehicle completely by folding the jack, then remove the jack.
 - Tighten the bolts again using the wheelbrace, tighten them fully without forcing them.
 - Place the wheel to be repaired in the carrier.
 - Secure the carrier on the hook then raise the carrier using the bolt and the wheel brace. Check that the wheel and the carrier are flush against the floor of the vehicle.
 - Remember to close the flap, located on the sill.
 - Store the trim in the vehicle.
-  Never go underneath the vehicle when it is supported only by the jack. Never use a screwdriver in place of the wheelbrace.

6. REFITTING THE REPAIRED WHEEL

The wheel is refitted as described in step 5, not forgetting to refit the wheel trim.

+ Refer to the "Identification markings" section of chapter 8 to locate the tyre label.


i The spare wheel is not designed to be used over long distances. Have the tightening of the bolts and the tyre pressure checked by a PEUGEOT dealer or a qualified workshop as soon as possible. Also, have the original wheel repaired and refitted by a PEUGEOT dealer or a qualified workshop as soon as possible.



REMOVABLE SNOW SCREEN

According to country, the removable snow screen is installed on the lower part of the front bumper to prevent the accumulation of snow at the radiator cooling fan.

Do not forget to remove the snow screen when the exterior temperature is higher than 10°C (no risk of snowfall) and when towing.

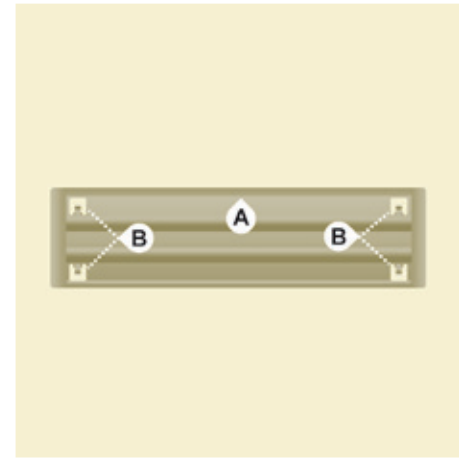

FITTING

- Offer up the snow screen facing its centring pin **A** on the front bumper.
- Put it in place by pressing at each clip **B** located in the four corners.

REMOVAL

- Pass a screwdriver into the hole located near each of the clips.
- Use the screwdriver as a lever to unclip the four clips **B** in turn.

Snow chains

SNOW CHAINS

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.

i The snow chains must be fitted only to the driving wheels. They must never be fitted to "space-saver" type spare wheels.

Use only the chains designed to be fitted to the type of wheel fitted to your vehicle:

Original tyre size	Maximum link size.
215/65 R15	12 mm
215/60 R16 MICHELIN	
215/60 R16 BRIDGESTONE	

For more information on snow chains, contact a PEUGEOT dealer or a qualified workshop.

i Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.

Advice on installation

- ☞ If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
- ☞ Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
- ☞ Fit the chains following the instructions provided by the manufacturer.
- ☞ Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
- ☞ Stop your vehicle and check that the snow chains are correctly tightened.

i Avoid driving on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. It is recommended that before you leave, you practise fitting the snow chains on a level and dry surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.



CHANGING A BULB


TYPES OF BULB

Various types of bulb are installed on your vehicle. To remove them:

Changing a bulb


Type A

All glass bulb: pull gently as it is fitted by pressure.




Type B


Bayonet bulb: press on the bulb then turn it anticlockwise.



Type C


Halogen bulb: release the retaining spring from its housing.

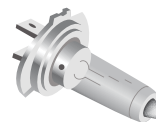

 Halogen bulbs must be changed after the headlamp has been off for several minutes (risk of serious burns). Do not touch the bulb directly with your fingers, use lint-free cloths.

When each operation has been completed, check the operation of the lighting.

Changing a bulb

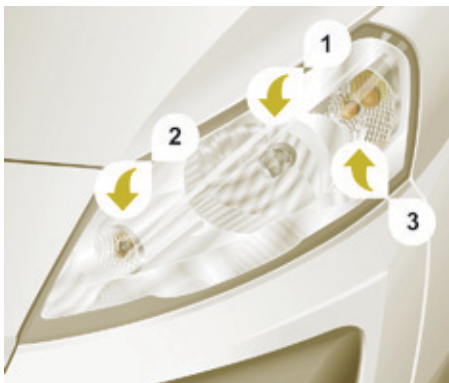

FRONT LAMPS


Open the bonnet. To access the bulbs, reach behind the headlamp unit.

Carry out the operations in reverse order to refit each bulb.

1. Dipped / Main beam headlamps

Type C, H4 - 55W

- Remove the centre cover by pulling the flexible rubber tab.
- Disconnect the electrical connector.
- Release the retaining spring.
- Change the bulb taking care to align the metal part with the slots in the lamp.

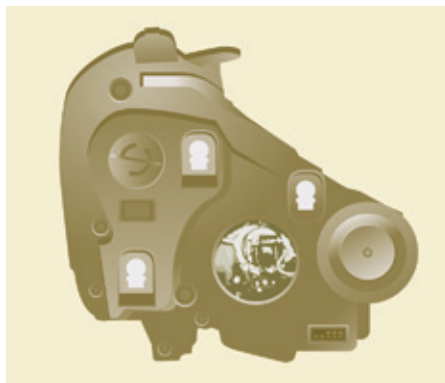

2. Sidelamps

Type A, W5W - 5W

- Remove the cover by pulling the flexible rubber tab.
- Remove the bulb holder fitted by pressure by pulling the connector.
- Change the bulb.
- Ensure that the cover is refitted correctly all the way round to ensure sealing.



3. Direction indicators

Type B, PY21W - 21W (amber)

- Turn the bulb holder a quarter turn anticlockwise.
- Remove the bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

4. Foglamps

Type C, H1 - 55W

Contact a PEUGEOT dealer or a qualified workshop.



DIRECTION INDICATOR SIDE REPEATER

Type A, WY5W - 5W (amber)

- Push the repeater towards the rear and disengage it.
- Support the connector and turn the bulb holder a quarter turn to the left.
- Turn the bulb a quarter turn to the left, remove it and change it.
- When refitting, engage the repeater towards the rear and bring it towards the front.

Amber coloured bulbs (direction indicators and side repeaters) must be replaced with bulbs of identical specification and colour.




Front / Rear

COURTESY LAMPS

Type A, 12V 5W - 5W

- Unclip the lens by sliding a screwdriver in the slots on each side of the courtesy lamp.
- Pull the bulb and change it.
- Clip the lens in its housing and ensure that it is secured correctly.

High pressure jet washing

 When using this type of jet washer on stubborn dirt, do not persist on the headlamps, the lamps and their surrounds to avoid damaging their coating and seals.

Changing a bulb



REAR LAMPS

For more information on bulbs, refer to the "Types of bulb".

1. Brake lamps / sidelamps

Type B, P21/5W - 21/5W

2. Direction indicators


Type B, PY21W - 21W (amber)

3. Reversing lamps

Type B, P21W - 21W

4. Foglamps

Type B, P21W - 21W

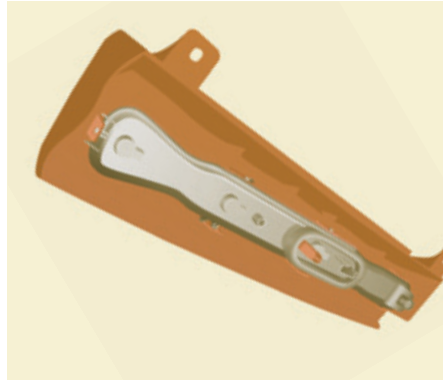

- Identify the faulty bulb then open the rear doors to 180°. Refer to the "Access" section of chapter 2.
- Remove the two fixing nuts.
Pull the lens unit from the outside.
- Holding the lamp unit, disconnect the electrical connector.

- Move aside the 8 tabs then extract the bulb holder.
- Remove the failed bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

When refitting, take care to correctly reposition:

- the 8 tabs,
- the two white lugs in the two rubber holes to maintain the sealing of the lamp unit,
- the supply wire to avoid trapping it.



NUMBER PLATE LAMPS

Type A, W5W - 5W

With tailgate

- Move aside the plastic lens using a screwdriver, on the point indicated by the arrow.
- Change the bulb.
- Replace the plastic lens and press on it.

With hinged doors

- Unclip the interior trim.
- Disconnect the connector by moving aside its tab.
- Remove the plastic cover.
- Turn the bulb holder a quarter turn anticlockwise.
- Change the bulb.



THIRD BRAKE LAMP

Type A, W5W - 5W

Lamp located on the outside (hinged doors)

- Unscrew the two screws using a Torx™ 20 screwdriver.
- Remove the lamp.
- Change the bulb.



Type B, P21W - 21W

Lamp located on the inside (tailgate)

- Unscrew the two screws using a Torx™ 20 screwdriver.
- Remove the plastic cover.
- Remove the bulb holder moving aside the two tabs.
- Remove the failed bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

Changing a fuse

CHANGING A FUSE


The three fuseboxes are placed:

- in the dashboard on the right-hand side (behind the storage compartment, retractable),
- in the passenger compartment (battery compartment),
- under the bonnet.

The descriptions communicated are only the fuses which can be changed by the user.

For any other operations, go to a PEUGEOT dealer or a qualified workshop.

i For motor trade technicians: for complete fuse and relay information, refer to the "Procedures" wiring diagrams via the dealer network.

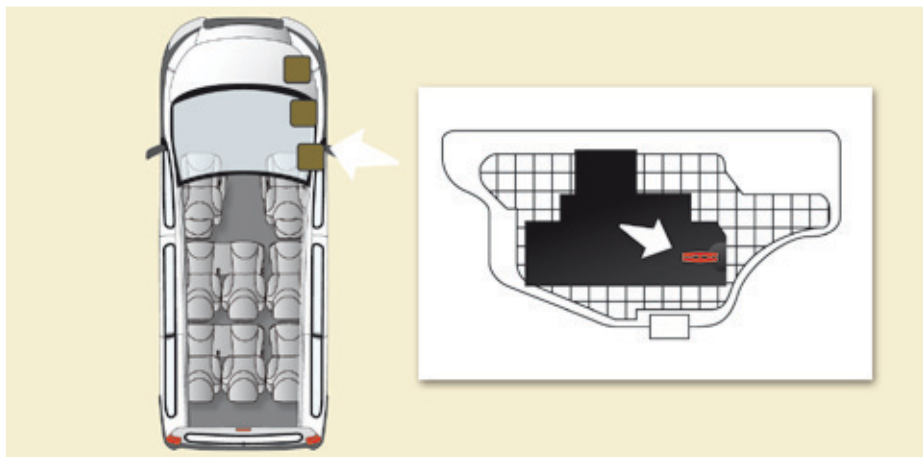


Removing and fitting a fuse

Before changing a fuse, the cause of the fault must be found and rectified.

Always replace a failed fuse with a fuse of the same rating.

PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of auxiliary accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.

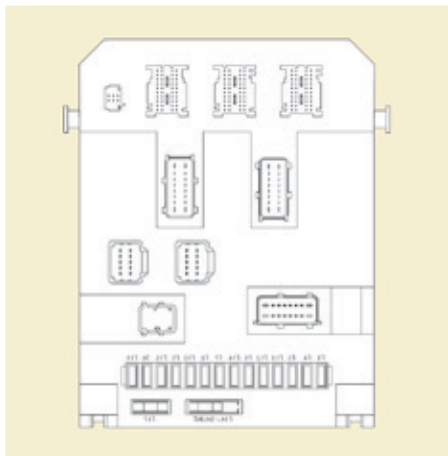


RIGHT-HAND SIDE DASHBOARD FUSES

- Tilt the storage compartment then pull it firmly to access the fuses.

Fuses	A (amps)	Allocation
1	15	Rear wiper
2	-	Free
3	5	Airbag control unit
4	10	Steering wheel angle sensor, Diagnostic socket, DSC sensor, Manual ventilation, Clutch switch, Headlamp beam height, Particle emission filter pump
5	30	Electric mirrors, Passenger electric window motor
6	30	Front electric windows supply
7	5	Courtesy lamps and glove box lamp
8	20	Multifunction screen, Anti-theft alarm siren, Audio equipment, Compact disc changer, Audio/telephone, Trailer fusebox (accessory)
9	10	Row 2 accessory socket
10	30	Rear ride height corrector, Steering wheel switching, Instrument panel
11	15	Diagnostic socket, Ignition switch
12	15	Hands-free kit, Airbag control unit, Parking sensors control unit
13	5	Engine fusebox, Trailer fusebox
14	15	Rain sensor, Rear ventilation, Digital air conditioning, Instrument panel
15	30	Locking/unlocking/deadlocking
16	-	Free
17	40	Heated rear screen, Heated mirrors

Changing a fuse

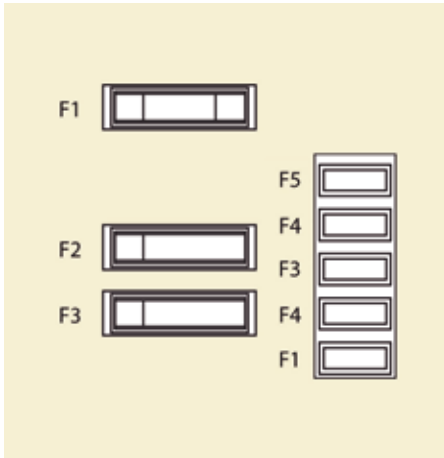


PASSENGER COMPARTMENT FUSES

- Unclip the battery compartment cover.
- Remove the red battery terminal (+).

When you have finished, close the cover carefully.

Fuses	A (amps)	Allocation
1	30	Heated seats
2	20	Row 3 12V socket
3	40/50	Trailer fusebox (accessory)
4	-	Free
36	15	Hinged door locks
37	10	Hinged door locks
38	20	Hinged door rear wiper
39	10	Rear ventilation
40	5	Folding mirrors

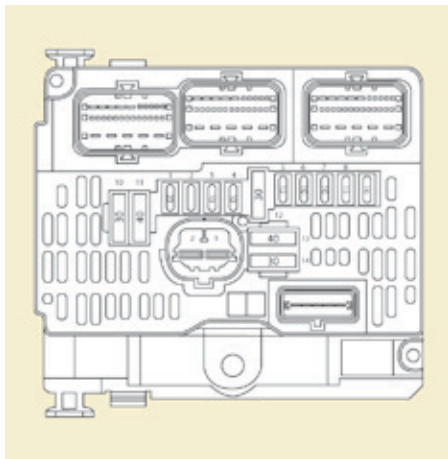

FUSES UNDER THE BONNET

- After opening the bonnet, slide aside the screenwash reservoir support to make access easier.
- Unclip and tilt the box to access the fuses.

Fuses	A (amps)	Allocation
1	20	Engine control unit, Fuel supply and air supply systems, Fan assembly
2	15	Horn
3	10	Front and rear screenwash pump
4	20	Headlamp wash pump
5	15	Fuel supply system
6	10	Power steering, Secondary brake pedal switch
7	10	Braking system (ABS/DSC)
8	20	Starter motor control
9	10	Main brake pedal switch
10	30	Fuel supply and air supply systems, Emissions control systems
11	40	Front ventilation
12	30	Windscreen wipers
13	40	Built-in systems interface
14	30	Free



CHANGING A WIPER BLADE

Placing the windscreen wiper blades in the special position

- Less than a minute after switching off the ignition, press the wiper stalk downwards to position the wiper blades along the windscreen pillars (special position).


Changing a front wiper blade

- Lift the wiper arm.
- Unclip the blade and remove it.
- Fit the new blade.
- Push back the wiper arm.

To return the windscreen wipers to their normal position, switch on the ignition and operate the wiper stalk.

Changing the rear wiper blade

- Lift the wiper arm, then unclip the blade and remove it.
- Fit the new blade and push back the wiper arm.

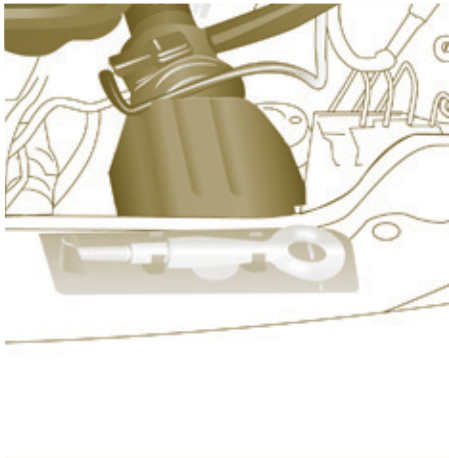

TOWING THE VEHICLE

Without lifting (4 wheels on the ground)

You should always use a towing bar.

From the front

- Unclip the cover by pressing at the bottom,
- Fully screw in the removable towing eye.



From the rear

- Unclip the cover using a coin or the flat part of the towing eye,
- Fully screw in the removable towing eye.

Lifting (2 wheels on the ground only)

It is preferable to lift the vehicle using professional lifting equipment.



Vehicles fitted with a manual gearbox (Diesel version)

In the case of vehicles fitted with a manual gearbox, the gear lever must be in the neutral position. Failure to observe this special condition may result in damage to certain braking components and the absence of braking assistance the next time the engine is started.

General recommendations

Observe the legislation in force in your country.

Ensure that the weight of the towing vehicle is higher than that of the towed vehicle.

The driver must remain at the wheel of the towed vehicle and must have a valid driving licence.

When towing a vehicle with all four wheels on the ground, always use an approved towing bar; rope and straps are prohibited.

The towing vehicle must move off gently.

When towing a vehicle with the engine off, there is no longer any power assistance for braking or steering.

In the following cases, you must always call on a professional recovery service:

- vehicle broken down on a motorway or fast road,
- four-wheel drive vehicle,
- when it is not possible to put the gearbox into neutral, unlock the steering, or release the parking brake,
- towing with only two wheels on the ground,
- where there is no approved towing bar available...




ENVIRONMENT

With you, PEUGEOT acts to protect the environment.

We invite you to visit the www.peugeot.com website.

As the driver, you also can contribute to protecting the environment by following certain rules:

- adopt a preventive style of driving, without frequent and harsh acceleration,
- observe the service intervals; we recommend that services are carried out by a PEUGEOT dealer, authorised to collect used batteries and fluids,
- in order to preserve the reliability of the engine and emission control systems, do not use engine oil additives.

 Refer to information in this handbook on eco-driving (at the end of section 1).




DIMENSIONS

The vehicle is available in 2 lengths (L1, L2) and 1 height (H1), refer to the tables:


		H1	
L	Overall length	4 805	5 135
H	Overall height pneumatic / metal suspension	1 895/1 942	
A	Wheelbase	3 000	3 122
B	Front overhang	975	
C	Rear overhang	830	1 038
D	Overall width:		
	on panel	1 870	
	with mouldings	1 895	
	with mirrors folded	1 986	
	with mirrors unfolded	2 194	
E	Width of front tracks	1 574	
F	Width of rear tracks	1 574	
	Turning circle between kerbs (m)	12.18	12.59
	Maximum loads (kg)		
	Payload	1 000	
	On roof	170	

Dimensions

158

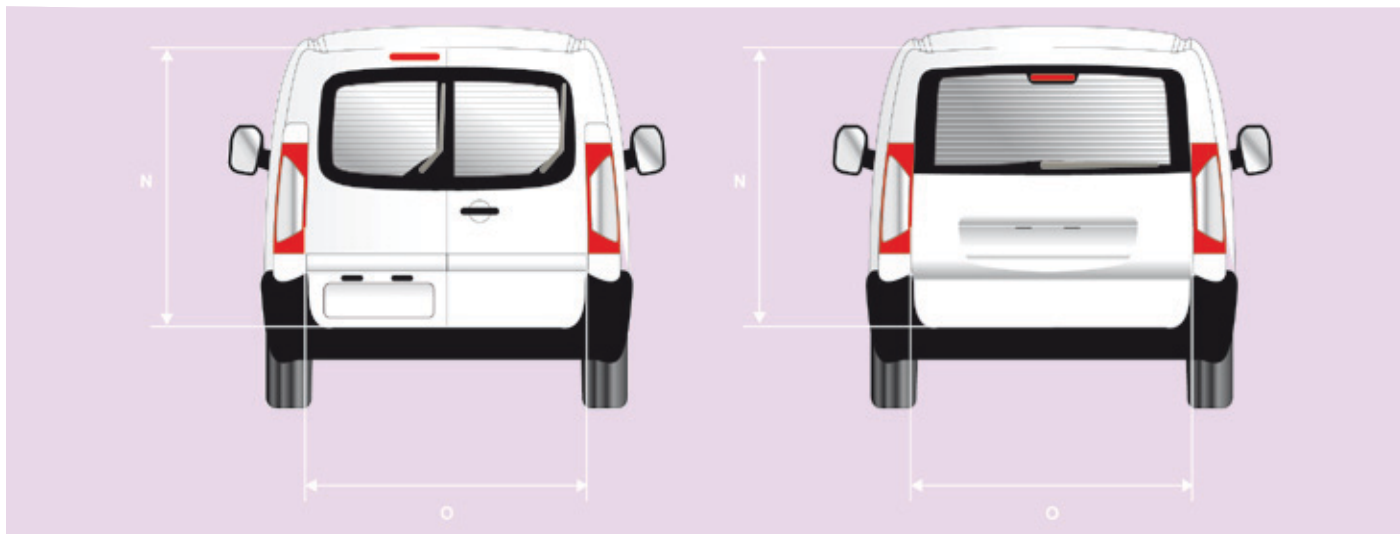

		REAR DOORS (mm)	
		L1	L2
		H1	
N	Usable height	1 272	
O	Usable width	1 237	

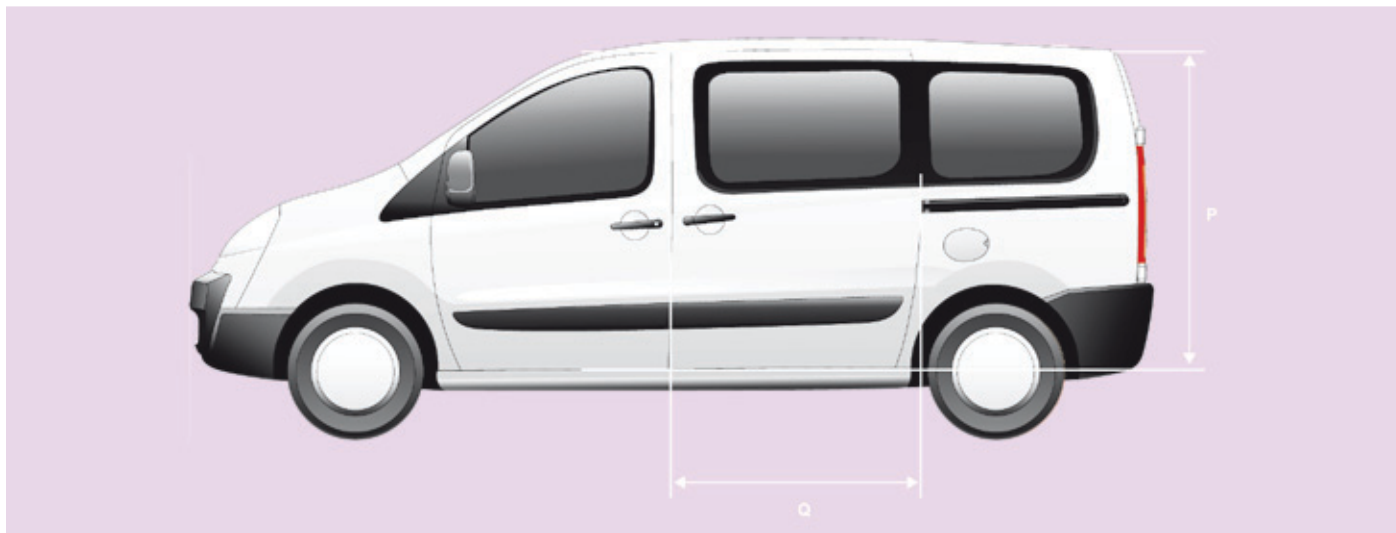

		SLIDING SIDE DOOR (mm)	
		L1	L2
P	Height	H1	
		1 203	
Q	Width	924	

WEIGHTS AND TOWED LOADS (KG)

For more information, refer to your registration certificate.

In each country, it is imperative that the towed loads permitted by local legislation are complied with. To find out your vehicle's towing capabilities and its gross train weight, contact a PEUGEOT dealer.

Load transfer

If the towing vehicle has not reached the GVW, it is possible to transfer this weight to the trailer.

In all cases, do not exceed the weight of the trailer and the GTW, indicated on your registration certificate.


Observe the towing capacities of your vehicle.

The weight of a braked trailer with load transfer can be increased on condition that the equivalent weight is removed from the vehicle and the GTW is not exceeded.

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine. If the ambient temperature is above 37 °C, limit the towed load to 700 kg, without any transfer of load.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

PRECAUTIONS...

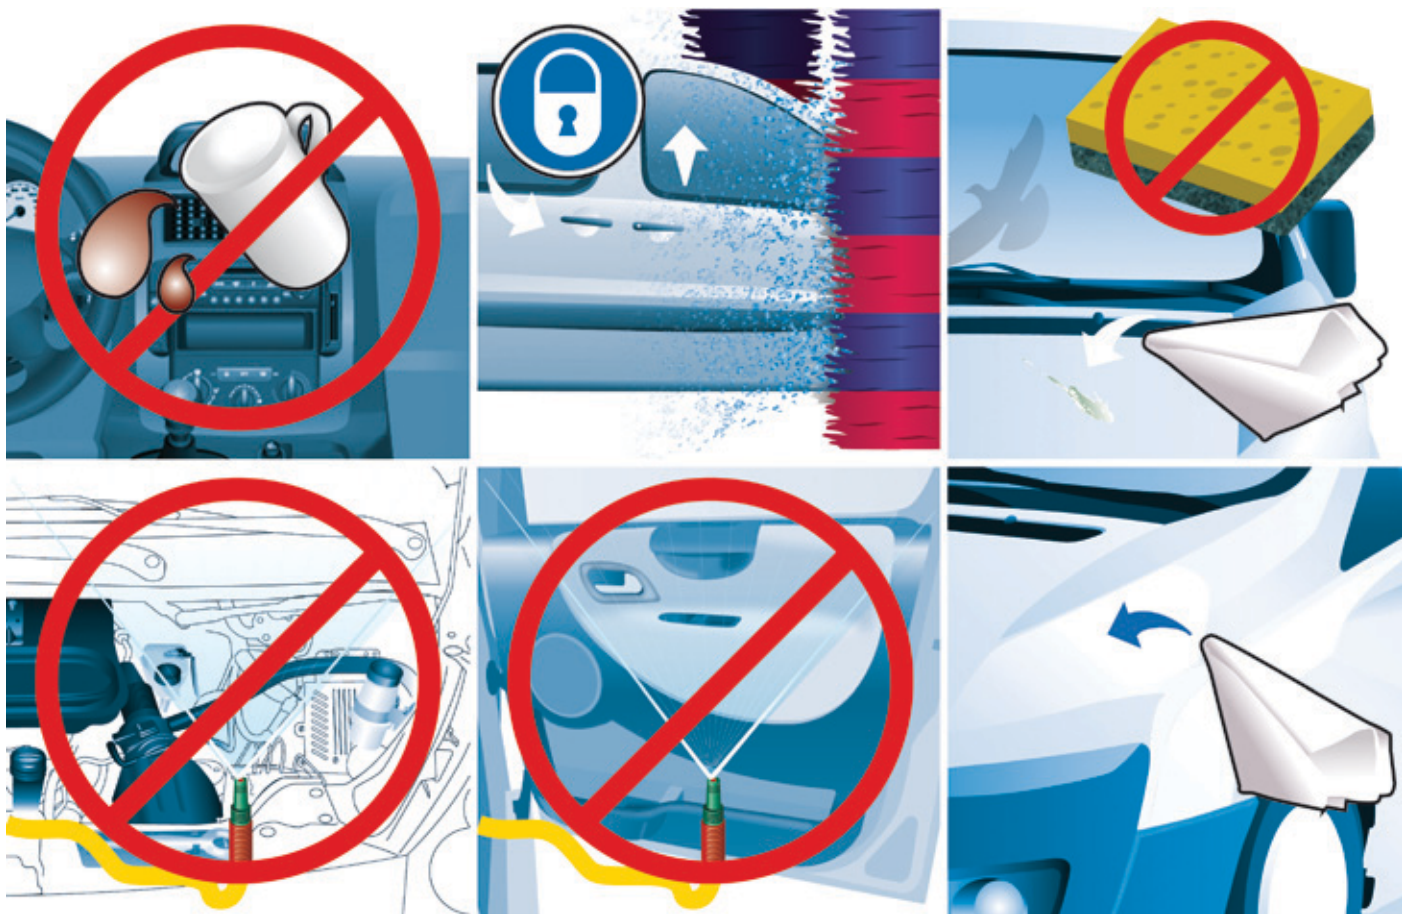

This handbook describes all of the equipment available in the whole range. Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update the current handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.



Printed in the EU
Anglais

01-14



Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS

Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 172 711 770 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z

