

HANDBOOK



PARTNER Tepee








PEUGEOT

WELCOME

PRESENTATION

Within the chapters, symbols draw your attention to specific information:

-  directs you to the chapter and section which contains detailed information concerning a function,
-  indicates important information relating to use of the equipment,
-  alerts you to the safety of individuals and equipment on board.


The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning and contact a PEUGEOT dealer to be shown the recommended equipment and accessories.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

This new vehicle has been designed to satisfy all your requirements in terms of practicality, comfort, safety and aesthetics. In order to get the most out of your vehicle, we suggest that you take a tour with the "Handbook" in front of you. The handbook presents the operation of the equipment available on board in detail.

PEUGEOT thanks you for your confidence and wishes you very happy motoring.



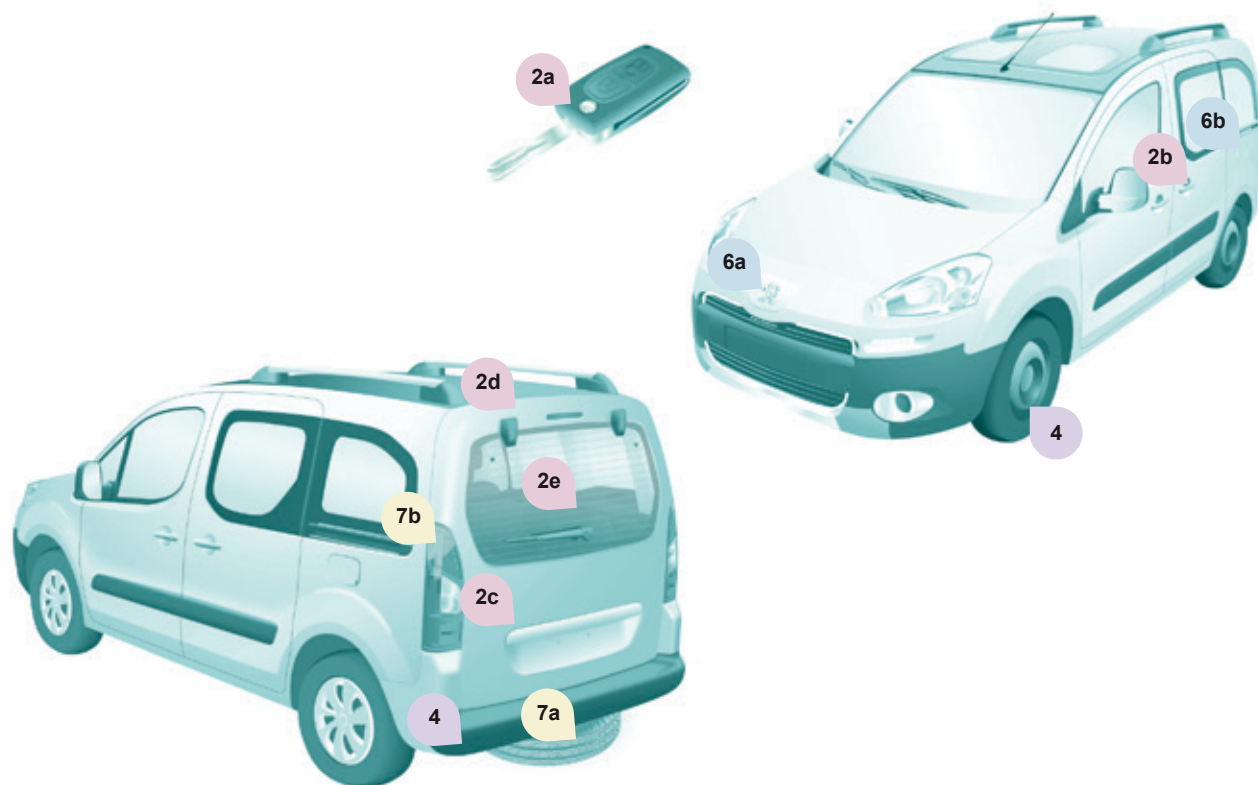



INSTRUMENTS AND CONTROLS

1. Lighting and direction indicator stalk.
2. Instrument panel with screen.
3. Wipers, screenwash, trip computer control stalk.
4. Ignition.
5. Audio system controls.
6. Driver's airbag, horn.
7. Steering wheel height and reach adjustment.
8. Cruise control, speed limiter controls.
9. Switch panel, parking sensors, headlamp beam adjustment, ESC, Stop & Start.
10. Bonnet release.
11. Electric door mirror adjustment.
12. Switch panel: electric windows.
13. Switch panel: hazard warning lamps, central locking, child lock.
14. Cigarette lighter.
15. Heating-ventilation controls.
16. Storage compartment.
17. Grip Control.
18. Audio equipment.
19. Screen.
20. Electronic gearbox control.
21. Emergency or assistance call.



INSTRUMENTS AND CONTROLS

1. Lighting and direction indicator control stalk.
2. Instrument panel with screen.
3. Wiper, screenwash, trip computer control stalk.
4. Ignition switch.
5. Audio system controls.
6. Driver's airbag, horn.
7. Steering wheel height and reach adjustment.
8. Cruise control, speed limiter controls.
9. Switch panel, parking sensors, headlamp beam adjustment, ESC, Stop & Start.
10. Bonnet release lever.
11. Electric door mirror controls.
12. Switch panel: electric windows.
13. Switch panel: hazard warning, central locking, child lock.
14. Cigarette lighter.
15. Heating-ventilation controls.
16. Door pockets.
17. Grip Control.
18. Audio system.
19. Screen.
20. Electronic gearbox control.
21. Emergency or assistance call.

SITTING COMFORTABLY

8




Driver's seat



Steering wheel

Adjust the steering wheel for height and reach.

2 ▶ 43

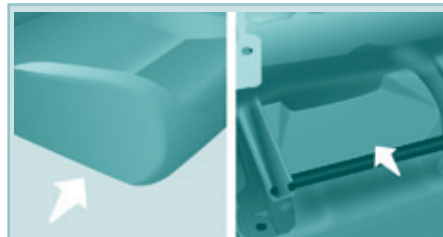

Storage compartments

The tools are stored under the left-hand seat.

3 ▶ 85



1. Forwards-backwards adjustment.



2. Backrest angle.



3. Seat cushion height.



4. Head restraint height and angle.

3 ▶ 66



Seat belts

Height adjustment.
Fastening.

4 ▶ 110




Mirrors

Manual adjustments.
Electric adjustments.

3 ▶ 100

VISIBILITY

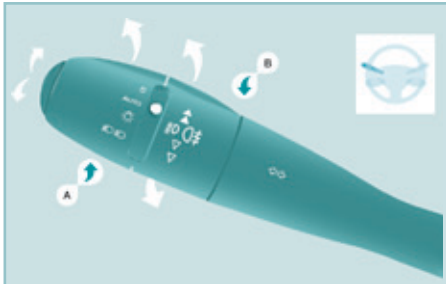

Lighting stalk



Lighting off.

Sidelamps.




Main beam headlamps (blue).
Dipped beam headlamps (green).

AUTO

AUTO, automatic illumination of headlamps.

Motorway function: press the stalk up or down to flash the direction indicator three times.

3 ▶ 49

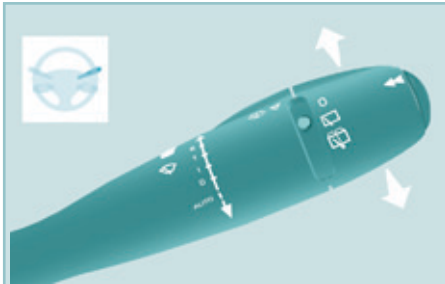

Wiper stalk

- 2 fast.
- 1 normal.
- I intermittent.
- 0 park.
- ↓ single wipe.

AUTO ↓ AUTO, press the stalk down. Reactivate if the ignition has been off for more than one minute.

Special position for the front wipers
For one minute after switching off the ignition, any action on the wiper stalk places the wiper arms and blades vertically alongside the screen pillars.

3 ▶ 52

3 ▶ 53, 160



Changing bulbs

In bad weather or in winter, ensure that the lamps are not covered with mud or snow.

7 ▶ 151

DRIVING SAFELY

10



Cruise control

The vehicle speed must be higher than 25 mph (40 km/h) with at least 4th gear engaged.

3 ▶ 54



Speed limiter

The minimum speed which can be programmed is 20 mph (30 km/h).

3 ▶ 57



Hill start assist

From the time you release the brake pedal, the vehicle is held for approximately 2 seconds without need to use the parking brake, to allow you to move off.


2 ▶ 48



Grip control

ESC (normal mode).
Snow.
Mud.
Sand.
ESC OFF.


4 ▶ 108

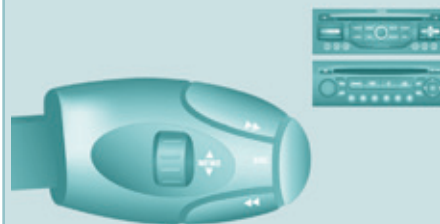

PEUGEOT Connect Sound (RD5)

9 ▶ 9.3, 9.63

Emergency or roadside assistance call



This in-car system allows you to send an emergency or roadside assistance call to the dedicated PEUGEOT centres.

9 ▶ 9.1

PASSENGER COMPARTMENT SPACE



9 9.42, 9.70



The multifunction roof console extends the overhead storage compartment.
The fragrance is diffused in the passenger compartment from the vents of the roof console.

3 87, 89



If the vehicle is fitted with the additional console and an armrest, remove the console or the armrest to fold the passenger seat to the table position.

3 67


REAR FITTINGS

12



Rear seats, 5 seat version

3 ▶ 71

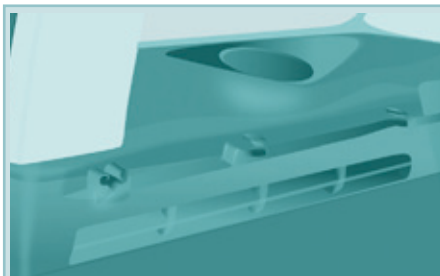

Load space cover, 5 seat version

3 ▶ 94



Rear seats, 7 seat version

3 ▶ 74



Load space cover, 7 seat version

3 ▶ 98

Maximum loads

Overhead storage compartment: 5 kg.

Zenith roof:

- central storage compartments: 6 kg,
- box: 10 kg,
- roof bars placed longitudinally or transversely: 35 kg.

Transverse roof bars: 75 kg.

CHILD SAFETY



Side door child lock

4

▶ 126



Child surveillance mirror

3

▶ 101



Child seats

4


▶ 117



Safety anti-pinch

3

▶ 102

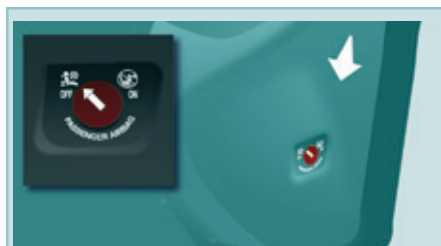

Airbag deactivation

4

▶ 116

VENTILATION

14



Heating

3 ▶ 60



Air conditioning

3 ▶ 60



Digital air conditioning

Recommended settings for Manual Air Conditioning

For optimum use of the system, we recommend:

If I require...	Air distribution	Temperature	Air flow	Air recirculation	AC
Heating					-
Cooling					A/C
Demisting Defrosting					3 ▶ 64

With Digital Air Conditioning, operation in AUTO mode is recommended at all times.



Remember to switch the system off when the ambient air suits your requirements.

3 ▶ 62

ECO-DRIVING

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO₂ emissions.

Optimise the use of your gearbox

With a manual gearbox, move off gently and change up without waiting. During acceleration change up early.

With an automatic or electronic gearbox, give preference to automatic mode and avoid pressing the accelerator pedal heavily or suddenly.

The gear shift indicator invites you engage the most suitable gear: as soon as the indication is displayed in the instrument panel, follow it straight away.

For vehicles fitted with an electronic or automatic gearbox, this indicator appears only in manual mode.

Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO₂ emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

Above 30 mph (50 km/h), close the windows and leave the air vents open. Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic. Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.

Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter, passenger compartment filter...) and observe the schedule of operations recommended in the warranty and maintenance record.

When refuelling, do not continue after the third cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.



ACCESS KEY

This locks and unlocks the doors on the vehicle, opens and closes the fuel filler cap, as well as starting and stopping the engine.



REMOTE CONTROL

Central unlocking



Press this button to unlock all of your vehicle's doors.

The direction indicators flash twice.

Central locking



Press this button to lock all of your vehicle's doors.

The direction indicators flash once.
If one of the doors is open or is not closed correctly, the central locking will not work.

Deadlocking

A second press on the closed padlock on the remote control within five seconds after locking changes the locking to deadlocking.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Deadlocking renders the exterior and interior door opening handles inoperative: do not leave anyone inside the vehicle when it is deadlocked.

If deadlocking is activated from inside the vehicle using the remote control, it will change to normal locking when the vehicle is started.

Access

Folding / unfolding the key



Press this button to release the key from its housing.

To fold the key, press this chromed button then fold the key into the housing.

If you do not press the button, the mechanism may be damaged.

Good practice

Take care not to allow the remote control to come into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (keyring, ...) weighing on the shaft of the key in the switch, may cause a malfunction.

REMOTE CONTROL

Changing the battery

Battery ref.: CR1620 / 3 volts.

The "battery flat" information is given by an audible signal, accompanied by a message in the screen.

To replace the battery, unclip the casing using a coin at the ring.

If the remote control does not work after the battery has been changed, reinitialise the remote control.

There is a risk of damage if the replacement battery is not the correct type.



Use only identical batteries or batteries of an equivalent type to those recommended by PEUGEOT dealers.

Do not discard the remote control batteries, they contain metals which are harmful to the environment.

Deposit them at a PEUGEOT dealership, or at an authorised collection point.



Reinitialising the remote control

Following changing of the remote control battery or disconnection of the vehicle battery, the remote control may have to be reinitialised.

Wait at least one minute before using the remote control.

Insert the key in the ignition switch with the buttons (padlocks) of the remote control facing you.

Switch on the ignition.

Press the locking padlock for at least five seconds within the next ten seconds.

Switch off the ignition.

Wait at least one minute before using the remote control.

The remote control is now working again.

ELECTRONIC IMMOBILISER

All of the keys contain an electronic immobiliser device.

This device locks the engine supply system. It is activated automatically when the key is removed from the ignition.

After the ignition is switched on, a dialogue is established between the key and the electronic immobiliser system.

The metal part of the key must be unfolded correctly for correct dialogue to take place.

If you lose your keys

Visit a PEUGEOT dealer with the vehicle's V5 registration document and your identification document.

A PEUGEOT dealer will be able to retrieve the key code and the transponder code so that a replacement key can be ordered.

Good practice

Do not make any modifications to the electronic immobiliser system.


Operating the remote control, even when it is in your pocket, may result in involuntary unlocking of the doors.

The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...), may interfere with the operation of the remote control temporarily.

The remote control does not operate while the key is in the ignition, even if the ignition is off.

When purchasing a second-hand vehicle:

- have the keys memorised by a PEUGEOT dealer to ensure that the keys in your possession are the only ones which can start the vehicle.

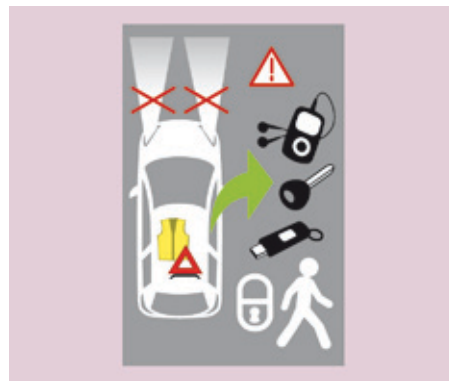

When leaving the vehicle, check that the lamps are off and nothing of value is visible.

As a safety precaution (with children on board), remove the key from the ignition when leaving the vehicle, even for a short time.



ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a front/rear door or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

If your vehicle is fitted with a separation partition, the interior protection is not active in the load space.

Locking the vehicle with complete alarm

Setting the alarm

- Switch off the ignition and get out of the vehicle.
- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control. The red LED, located in the button, flashes once per second.

Access

Disarming

- Unlock the vehicle with the remote control or switch on the ignition, the red LED goes off.

Locking the vehicle with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Switch off the ignition.



- In the next ten seconds, press the button until the red LED is on continuously.

- Get out of the vehicle.
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red LED flashes once a second).

Triggering

The siren sounds, the direction indicators flash for approximately 30 seconds and the red LED flashes rapidly.

- To switch it off, insert the key and switch on the ignition.

When the alarm has been triggered ten times in succession (when triggered for the eleventh time) it is deactivated. Repeat the procedure for setting the alarm.

Locking the vehicle without alarm

- Insert the key in the lock on the driver's door and lock it.

Do not set the alarm when washing your vehicle.

Failure of the remote control

When the alarm is set but the remote control does not operate:

- Unlock the doors with the key and open the door. The alarm is triggered.
- Switch on the ignition in the next ten seconds. The alarm is disarmed.

Incorrect operation

When the ignition is switched on, if the red LED remains on for ten seconds, there is a fault in the siren connection.

Contact a PEUGEOT dealer to have the system checked.

Automatic setting of the alarm

Depending on the country in which the vehicle is sold, the alarm is set automatically approximately 2 minutes after the last door is closed.

To prevent triggering of the alarm when a door is opened, you have to press the remote control unlocking button again.



Do not make any modifications to the alarm system as this could cause faults.



FRONT DOORS

From the outside


Use the remote control to lock/unlock the vehicle.

Insert the metal part of the key in the lock on the driver's side if the remote control does not work.



From the inside

Use the door opening control to unlock and open the door concerned.

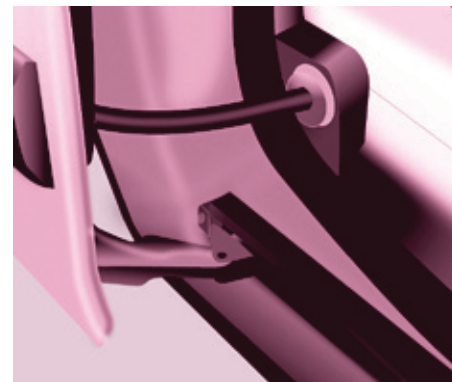

SLIDING SIDE DOORS

From the outside

Pull the handle towards you then towards the rear and open the side door guiding the rearward sliding to beyond the point of resistance to hold it open.

A mechanical system prevents opening of the left-hand side door when the fuel filler flap is open.

From the inside

Unlock the side door using this handle and open it, guiding the rearward sliding to the point of resistance. Pass this point to hold the door open.

Close the side door using the handle to start the sliding and pass the point of resistance. Then, use the shaped recess at the top of the door pillar to guide the door until it locks.

Do not use the grab handle to slide the door.

Good practice

Take care not to block the guide space on the floor to allow the door to slide correctly.

If your vehicle is parked on a slope, guide the sliding of the side door. In fact, the door could open or close more rapidly due to the slope of the ground and could cause injury.

For safety and operation reasons, do not drive with the sliding side doors open.



Operation in the event of a battery failure

Front and side passenger doors

In the event of a battery or central locking fault, use the lock to lock the doors mechanically.

- ☞ To open the door and get out of the vehicle, pull the interior control.
- ☞ To lock the door, insert the key in the lock, located on the edge of the door, then turn it **one eighth of a turn**.

Driver's door

- ☞ Insert the key in the lock, then turn it to the right to lock or to the left to unlock.



TAILGATE

From outside

Locking/unlocking is by means of the remote control.

To open, press the control below the trim then raise the tailgate.

A pull strap is available to close the tailgate in the high position.

Guide the closing of the tailgate to the balance point of its travel then apply a final press on the tailgate to close it fully.



From inside

Emergency control

In the event of a central unlocking operating fault, this permits unlocking of the tailgate from the inside.

Insert a small screwdriver in the opening, between the door and the floor. To unlock the lock, move the catch to the left then push the tailgate.



Tailgate screen

The opening rear screen allows you to access the rear of the vehicle directly, without having to open the tailgate.

Opening

After unlocking the vehicle using the remote control or the key, press the control and raise the rear screen to open it.

Closing

Close the rear screen by pressing the centre of the glass until it is fully closed.

The tailgate and tailgate screen cannot both be open at the same time, to prevent damage to the screen.



HINGED REAR DOORS

The hinged rear doors are asymmetrical (2/3 - 1/3), with the smaller door on the right. They are fitted with a central lock.

From outside

To open, pull the handle towards you.



Pull the lever to open the right-hand door.

To close, start with the right-hand door then close the left-hand door.

With the roof rear flap, the rear bumper has been reinforced to serve as a footrest when entering the vehicle.

Access



In practice

It is possible to drive with the right-hand door open to make it easier to carry long loads. The left-hand door is kept closed by the distinctive "yellow" lock, positioned at the base of the door. This closed door must not be used as a load retainer.

Driving with the right-hand door open is a special dispensation. Comply with the usual safety indications to warn other drivers.




Opening to approximately 180°

A check strap system permits extension of the opening from approximately 90° to approximately 180°.

Pull the yellow control when the door is open.

The check strap will engage again automatically on closing.

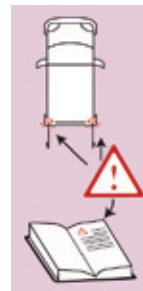

When parked with the rear doors open to 90°, the doors mask the rear lamps. To signal your position to other road users driving in the same direction who may not have seen your vehicle, use a warning triangle or other device required by the legislation in your country.



From inside

Pull the handle towards you to open the left-hand door.



REAR ROOF FLAP

This rear roof flap is only compatible with side-hinged rear doors.

To open the rear roof flap:

- raise the black paddle of the toggle,
- relieve the toggle by pressing the rear roof flap (downwards) then release the hook,
- lift the rear roof flap,
- pass the point of resistance to secure the rear roof flap using the support stays.

Never drive without the stays in place.

To close the rear roof flap:

- check that the support bar is secured correctly,
- lower the rear roof flap,
- while pressing the rear roof flap (downwards), take hold of the two loops of the spring then place the hook in its housing,



- lower the black paddle to secure the rear roof flap.

Securing the rear roof flap places it on the seal correctly and ensures sealing without noise.

Support bar

A support bar is provided for transporting long loads, after opening the rear roof flap.

Fold back the support bar by lifting the lever.

Guide it to the door pillar.

Support the long loads to be transported, lift them and reposition the support bar with one hand.

Ensure that it is secured correctly by pressing the handle downwards past the point of resistance and secure the loads firmly.

The side supports can be used as hooking points.

Never attach any load to the rear roof flap.

i The rear bumper has been reinforced to serve as a footrest when entering the vehicle.

Never drive without the support bar in place.


! The rear doors only lock when the support bar is installed.

When the rear roof flap is open, take care when driving where height is restricted.

Never rest loads directly on the rear doors.

Comply with the usual indications, to warn other drivers.

Reserve the use of the rear roof flap for short journeys.

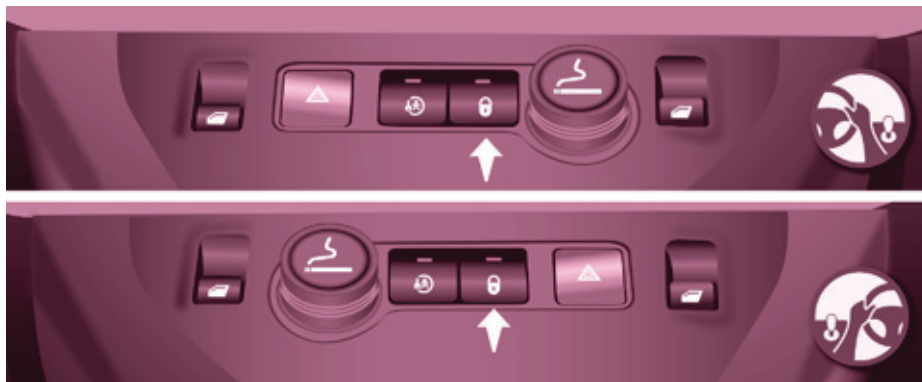

CENTRAL LOCKING



An initial press permits central locking of the vehicle, when all of the doors are closed.

A second press permits central unlocking of the vehicle. The control is inactive when the vehicle has been locked using the remote control or the key from the outside. The doors can still be opened from the inside.

The control switch LED:

- flashes when the doors are locked with the vehicle stationary and the engine off,
- comes on when the doors are locked and from the time the ignition is switched on.



Driving with the doors locked may make access to the interior more difficult in an emergency.

Anti-intrusion security

Locking while driving

When the vehicle moves off, as soon as you reach approximately 6 mph (10 km/h), the system locks the doors. The characteristic central locking noise is heard. The LED in the switch on the dashboard central switch panel comes on.

During the journey, opening a door results in complete unlocking of the vehicle.

Activating / deactivating the function




With the ignition on, press and hold this switch to activate or deactivate the function.

Door open warning lamp



If this warning lamp comes on, check that all of your vehicle's doors are closed correctly.

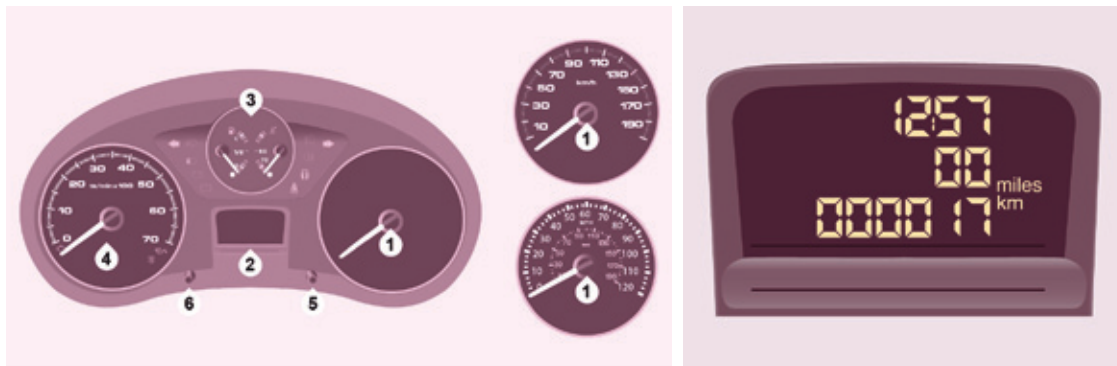

INSTRUMENTS AND CONTROLS

INSTRUMENT PANEL

Dials

1. Distance recorder in kilometres / miles.
2. Screen.
3. Fuel level, coolant temperature.
4. Rev counter.
5. Trip distance recorder / service indicator zero reset.
6. Instrument panel lighting dimmer.



Displays

- Speed limiter / cruise control.
- Kilometres / Miles travelled.
- Service indicator, engine oil level indicator, total kilometres / miles.
- Presence of water in the Diesel filter.
- Diesel pre-heating.



Screens

The format of the information presented in the screen depends on the vehicle's equipment.



Instrument panel without screen

ADJUSTING THE TIME

Centre console without screen



To adjust the time of the clock, use the left-hand button on the instrument panel then carry out the operations in the following order:

- turn to the left: the minutes flash,
- turn to the right to increase the minutes (hold the button to the right for rapid scrolling),
- turn to the left: the hours flash,

- turn to the right to increase the hours (hold the button to the right for rapid scrolling),
- turn to the left: 24H or 12H is displayed,
- turn to the right to select 24H or 12H,
- turn to the left to complete the time adjustment.

After approximately 30 seconds without any action, the screen returns to the normal display.



Centre console with screen



The display - time sequence is linked according to model (version). The access to the "Date" adjustment is only active when the model version offers a date in words.






To adjust the time and date indicated in the screen, refer to the "Adjusting the date and time" section of chapter 9.





Warning lamps






Each time the vehicle is started: a series of warning lamps comes on applying a self-test check. They go off almost immediately. When the engine is running: the warning lamp becomes a warning if it remains on continuously or flashes. This initial warning may be accompanied by an audible signal and a message which appears in the screen.

Do not ignore these warnings.







Warning lamp		is	indicates	Solution - action
	STOP	on, associated with another warning lamp and accompanied by a message in the screen.	major faults linked with the "Brake fluid level", "Engine oil pressure and temperature", "Coolant temperature", "Electronic brake force distribution", "Power steering" and "Under-inflation detection" warning lamps.	You must stop as soon as it is safe to do so, park and switch off the ignition. Have it checked by a PEUGEOT dealer or a qualified workshop.
	Parking brake / Brake fluid level / EBFD	on.	that the parking brake is applied or has not been released fully.	Releasing the parking brake switches off the warning lamp.
		on.	low brake fluid level.	Top up using a fluid recommended by PEUGEOT.
		remaining on even though the level is correct and associated with the ABS warning lamp.	a fault with the electronic brake force distribution.	You must stop as soon as it is safe to do so, park and switch off the ignition. Have it checked by a PEUGEOT dealer or a qualified workshop.
	Engine oil pressure and temperature	on while driving.	low pressure or a high temperature.	Park and switch off the ignition then allow to cool. Visually check the level. Chapter 6, "Levels" section.
		remaining on, even though the level is correct.	a major fault.	Have it checked by a PEUGEOT dealer or a qualified workshop.







Instruments and controls

Warning lamp		is	indicates	Solution - action
	Coolant temperature and level	on with needle in the red zone.	an abnormal increase in temperature.	Park and switch off the ignition then allow to cool. Visually check the level.
		flashing.	a drop in the coolant level.	Chapter 6, "Levels" section. Contact a PEUGEOT dealer or a qualified workshop.
	Service	on temporarily.	minor faults or warnings.	Consult the alert log in the display or screen. If your vehicle is equipped with a trip computer or a screen: refer to the "Audio equipment - Trip computer" section of chapter 9. Contact a PEUGEOT dealer or a qualified workshop.
		remaining on.	major faults.	
	Driver's seat belt not fastened	on then flashing.	the driver has not fastened their seat belt.	Pull the strap then insert the tongue in the buckle.
		accompanied by an audible signal then remains on.	the vehicle is moving with the driver's seat belt not fastened.	Check that the seat belt is fastened by pulling the strap. Chapter 4, "Seat belts" section.
	ECO	on.	The Stop & Start system has put the engine in STOP mode following a vehicle stop (red light, traffic jam, etc...).	As soon as you want to move off, the warning lamp goes off and the engine restarts automatically in START mode.
		flashes for a few seconds, then goes off.	The STOP is temporarily unavailable. or The START mode has been invoked automatically.	Section 2, under "Stop & Start".








Warning lamp		is	indicates	Solution - action
	Front / lateral airbag	flashing or remaining on.	a failure of an airbag.	Have the system checked by a PEUGEOT dealer or a qualified workshop without delay. Chapter 4, "Airbags" section.
	Front passenger's airbag deactivated	on.	the intentional deactivation of this airbag in the presence of a rear-facing child seat.	Chapter 4, "Airbags-child safety" section.
	Low fuel level	on with gauge needle in the red zone.	When it first comes on, there remains around 8 litres of fuel in the tank. The distance you can drive on this fuel depends on your style of driving and the engine type.	You must fill up with fuel to avoid running out. This warning lamp comes on each time you switch on the ignition until you have filled up. Capacity of the tank: approximately 60 litres. Never risk driving until the tank is empty, this could damage the emissions and injection systems.
		flashing.	cutting off of the fuel supply following a serious impact.	Restore the supply. Chapter 6, "Fuel" section.
	EOBD emission control system	flashing or remaining on.	a failure of the system.	There is a risk of damage to the catalytic converter. Have it checked by a PEUGEOT or a qualified workshop.
	Battery charge	on.	a fault in the charging circuit.	Check the battery terminals, ... Chapter 7, "Battery" section.
		flashing.	placing of the active functions on standby (economy mode).	Chapter 7, "Battery" section.
		remaining on, in spite of the checks.	a faulty circuit, an ignition or injection malfunction.	Have it checked by a PEUGEOT dealer or a qualified workshop.

Instruments and controls

Warning lamp		is	indicates	Solution - action
	Power steering	on.	a fault with the system.	The vehicle retains conventional steering without assistance. Have it checked by a PEUGEOT dealer or a qualified workshop.
	Door open detection	on and accompanied by a message in the screen.	that a door is not closed correctly.	Check that all of the doors are closed.
	ABS	remaining on.	a fault with the anti-lock braking system.	The vehicle retains conventional braking. Have it checked by a PEUGEOT dealer or a qualified workshop.
	ESC	flashing.	triggering of the ASR or ESC regulation.	The system optimises traction and improves the directional stability of the vehicle. Chapter 4, "Driving safety" section.
		remaining on.	a fault with the system. E.g.: under-inflation of the tyres.	E.g.: check the pressure of the tyres. (Wheel speed sensor, hydraulic block, ...). Have it checked by a PEUGEOT dealer or a qualified workshop.
		remaining on with the LED in the button (on the dashboard) on.	deactivation of the system at the request of the driver.	Operation of the system is deactivated. Reactivation is automatic above 30 mph (50 km/h) or after pressing the button (on the dashboard).
	Under-inflation	on.	The tyre pressure is too low in or more wheels.	Check the tyre pressure as soon as possible. This check should preferably be done with the tyres cold.
		flashing then remaining on, accompanied by the Service warning lamp, and depending on equipment, the display of a message.	The tyre pressure monitoring system has a fault or one of the wheels does not have a sensor.	Detection of under-inflation is no longer assured. Have it checked by a PEUGEOT dealer or a qualified workshop.

Warning lamp		is	indicates	Solution - action
	Particle emission filter	on.	a fault with the particle emission filter (Diesel additive level, risk of blockage, ...).	Have the filter checked by a PEUGEOT dealer or a qualified workshop. Chapter 6, "Levels" section.
	Dipped beam headlamps / Daytime running lamps	on.	a manual selection or automatic illumination of headlamps.	Turn the ring on the lighting control stalk to the second position.
			illumination of the dipped beam headlamps from the time the ignition is switched on: daytime running lamps (depending on the country in which the vehicle is sold).	Chapter 3, "Steering mounted controls" section.
	Main beam headlamps		pulling of the stalk towards you.	Pull the stalk to return to dipped beam headlamps.
	Direction indicators	flashing with audible signal.	a change of direction via the lighting stalk, to the left of the steering wheel.	To the Right: control to be pushed upwards. To the Left: control to be pushed downwards.
	Front foglamps	on.	a manual selection.	The foglamps only operate if the sidelamps or dipped beam headlamps are on.
	Rear foglamps	on.	a manual selection.	The foglamps only operate if the sidelamps or dipped beam headlamps are on. In conditions of normal visibility, switch them off to avoid breaking the law. "This lamp is a dazzling red."

Instruments and controls

Warning lamp in the screen		is	indicates	Solution - action
	Cruise control	on.	cruise control selected.	Manual selection. Chapter 3, "Steering mounted controls" section.
	Speed limiter	on.	speed limiter selected.	Manual selection. Chapter 3, "Steering mounted controls" section.
	Gear shift indicator	on.	a recommendation independent of the type and density of traffic.	To reduce fuel consumption, change to an appropriate gear with a manual gearbox. The driver retains responsibility to follow this indication or not.
	Diesel pre-heating	on.	climatic conditions requiring pre-heating.	Wait until the warning lamp goes off before operating the starter.
	Presence of water in the Diesel filter	on and accompanied by a message in the screen.	water in the Diesel filter.	Have the filter bled by a PEUGEOT dealer or a qualified workshop without delay. Chapter 6, "Checks" section. According to country.
	Service spanner	on.	that a service will be due shortly.	Refer to the list of checks in the warranty and maintenance record. Have the service carried out by a PEUGEOT dealer or a qualified workshop.
	Time	flashing.	adjustment of the time.	Use the left-hand button on the instrument panel. Chapter 2, at the beginning of the "Instruments and controls" section.




FUEL GAUGE

The fuel level is tested each time the key is turned to the "running" position.

The gauge is positioned on:

- **1:** the fuel tank is full, approximately 60 litres.
- **0:** the reserve is now being used, the warning lamp comes on continuously. The reserve when the warning first comes on is approximately 8 litres.

 Refer to the "Fuel" section of chapter 6.



COOLANT TEMPERATURE

The needle is positioned before the red zone: normal operation.

In arduous conditions of use or hot climatic conditions, the needle may move close to the red graduations.

What you should do if the needle enters the red zone:

Reduce your speed or let the engine run at idle.


What you should do if the warning lamp comes on:

- stop immediately, switch off the ignition. The fan may continue to operate for a certain time, up to approximately 10 minutes,
- wait for the engine to cool down in order to check the coolant level and top it up if necessary.

As the cooling system is pressurised, follow this advice in order to avoid any risk of scalding:

- wait at least one hour after switching off the engine before carrying out any work,
- unscrew the cap by 1/4 turn to allow the pressure to drop,
- when the pressure has dropped, check the level on the expansion bottle,
- if necessary, remove the cap to top up.

If the needle remains in the red zone, have the system checked by a PEUGEOT dealer or a qualified workshop.

 Refer to the "Levels" section of chapter 6.

EMISSIONS CONTROLS



EOBD (European On Board Diagnosis) is a diagnostics system which complies with, among others, the standards concerning authorised emissions of:

- CO (carbon monoxide),
- HC (unburnt hydrocarbons),
- NOx (nitrous oxides) or particles, detected by oxygen sensors placed upstream and downstream of the catalytic converters.

The driver is warned of any malfunction of this emission control system by the illumination of this specific warning lamp in the instrument panel.

There is a risk of damage to the catalytic converter. Have it checked by a PEUGEOT dealer or a qualified workshop.

TYRE UNDER-INFLATION DETECTION



System which automatically checks the pressures of the tyres while driving.

The system continuously monitors the pressures of the four tyres, as soon as the vehicle is moving.

A pressure sensor is located in the valve of each tyre (except the spare wheel).

The system triggers an alert if a drop in pressure is detected in one or more tyres.

i The tyre under-inflation detection system is an aid to driving which does not replace the need for the driver to be vigilant or to drive responsibly.

i This system does not avoid the need to check the tyre pressures regularly (including the spare wheel) and before a long journey.

Driving with under-inflated tyres adversely affects road holding, extends braking distances and causes premature tyre wear, particularly under arduous conditions (vehicle loaded, high speed, long journey).

i Driving with under-inflated tyres increases fuel consumption.

i The tyre pressures for your vehicle can be found on the tyre pressure label (see the "Identification markings" section).

The tyre pressures must be checked when the tyres cold (vehicle stopped for 1 hour or after driving for less than 6 miles (10 km) at moderate speed). Otherwise, add 0.3 bar to the values indicated on the label.

Under-inflation alert



The alert is given by the fixed illumination of this warning lamp, accompanied by an audible signal, and depending on equipment, the display of a message.

In the event of a problem on one of the tyres, the symbol or the message appears, according to equipment, to identify it.

- Reduce speed, avoid sudden steering movements or harsh brake applications.
- Stop as soon as it is safe to do so.
- In the event of a puncture, use the temporary puncture repair kit or the spare wheel (according to equipment),
or
- if you have a compressor, the one in the temporary puncture repair kit for example, check the four tyre pressures when cold,
or
- if it is not possible to check the tyre pressures at the time, drive carefully at reduced speed.



The loss of pressure detected does not always lead to visible deformation of the tyre. Do not rely on just a visual check.



The alert is maintained until the tyre or tyres concerned is reinflated, repaired or replaced.

The spare wheel (space-saver type or a steel rim) does not have a sensor.

Operating fault



The flashing and then fixed illumination of the under-inflation warning lamp accompanied by the illumination of the "service" warning lamp, and depending on equipment, the display of a message indicates a fault with the system.

In this case, monitoring of the tyre pressures is not assured.



This alert is also displayed when one or more wheels is not fitted with a sensor (for example, a space-saver or steel spare wheel).

Go to a PEUGEOT dealer or a qualified workshop to have the system checked or, following the repair of a puncture, to have the original wheel, equipped with a sensor, refitted.

SERVICE INDICATOR

38

This programme's service intervals according to the use of the vehicle.

Operation

A few moments after the ignition has been switched on, the spanner indicating a service operation comes on; the display for the total distance recorder gives (in round figures) the distance remaining before the next service.

The points at which a service is due are calculated from the last indicator zero reset.

The point at which a service is due is determined by two parameters:

- the distance travelled,
- the time which has elapsed since the last service.

i The distance remaining before the next service may be weighted by the time factor, depending on the type of driving.

More than 1 000 miles/km before the next service is due

Example: 4 800 miles/km remain before the next service is due. When the ignition is switched on and for a few seconds, the screen shows:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation showing the total and trip distances.

Less than 1 000 miles/km before the next service is due

Each time the ignition is switched on and for a few seconds, the spanner flashes and the number of miles/kilometres remaining is displayed:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation and the spanner remains on. This indicates that a service should be carried out shortly.

Service overdue



Each time the ignition is switched on and for a few seconds, the spanner flashes and the excess distance is displayed.

i With the engine running the spanner remains on until the service has been carried out.

Zero re-set


Your PEUGEOT dealer or a qualified workshop carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- switch off the ignition,
- press and hold the trip recorder reset button,
- switch on the ignition.

The display begins a countdown.

When the display shows "**=0**", release the button; the spanner disappears.

 After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

Engine oil level indicator

When the ignition is switched on, the engine oil level is indicated for a few seconds, after the service information.



Oil level correct



Low oil level

Flashing of "OIL", linked with the service warning lamp, accompanied by an

audible signal and a message in the screen, indicates a low oil level which could damage the engine.

If the low oil level is confirmed by a check using the dipstick, it is essential that the level is topped up.



Oil level gauge fault

Flashing of "OIL--" indicates a malfunction of the engine oil level

indicator. Contact a PEUGEOT dealer or a qualified workshop.



The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.



Dipstick

A = maximum, never exceed this level as a surplus of oil may damage the engine.

Contact a PEUGEOT dealer or a qualified workshop without delay.

B = minimum, top up the level via the oil filler cap, using the grade of oil suited to your engine.

Trip recorder zero reset button



With the ignition on, press the button until the zeros appear.

Lighting dimmer



With the lighting on, press the button to vary the brightness of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness.

As soon as the lighting is of the required brightness, release the button.



5-speed gearbox - reverse

GEARBOX

To change gear easily, always press the clutch pedal fully.

To prevent the mat from becoming caught under the pedal:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never fit one mat on top of another.

When driving, avoid leaving your hand on the gear knob as the force exerted, even if slight, may wear the internal components of the gearbox over time.


Engaging 5th gear

Push the gear lever fully to the right to engage 5th gear.

Engaging reverse

To engage reverse gear, wait until the vehicle is stationary then push the gear lever to the right then back.

The lever should be moved slowly to reduce the noise on engaging reverse gear.

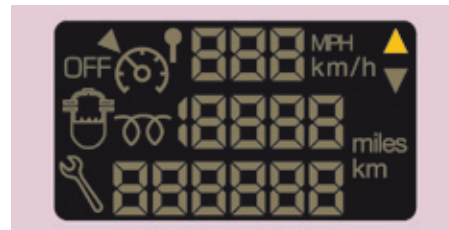

GEAR SHIFT INDICATOR

System which reduces fuel consumption by recommending the most appropriate gear.

With an electronic gearbox, the system is only active in manual mode.

Operation

Depending on the driving situation and your vehicle's equipment, the system may advise you to skip one (or more) gear(s). You can follow this instruction without engaging the intermediate gears.

The gear engagement recommendations must not be considered compulsory. In fact, the configuration of the road, the amount of traffic and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system.

This function cannot be deactivated.



The information appears in the instrument panel in the form of an arrow.

i The system adapts its gear change recommendation according to the driving conditions (slope, load, ...) and the demands of the driver (power, acceleration, braking, ...).


The system never suggests:

- engaging first gear,
- engaging reverse gear.

6-SPEED ELECTRONIC GEARBOX



Mode selection

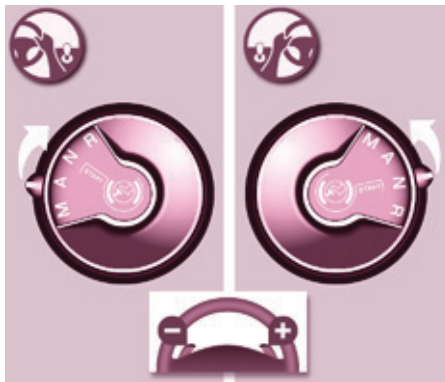

- automatic mode: gear selector in position **A**.
- manual mode: gear selector in position **M**.

i For safety:
It is only possible to come out of position **N** if the brake pedal is pressed.


The change from position **A** (driving in automatic mode) to position **M** (driving in manual mode) or vice versa can be made at any time. The warning lamp **A** goes off in the instrument panel.

Gearbox and steering wheel

Moving off

- To start the engine, the gear selector must be in position **N**.
- Press firmly on the brake pedal.
- Operate the starter.
- When the engine is running, place the gear selector on **R**, **A** or **M** as desired.
- Release the brake pedal and accelerate.

If the gear selector is not in position **N**, and/or if the brake pedal is not pressed, the engine will not start. Repeat the above procedure.

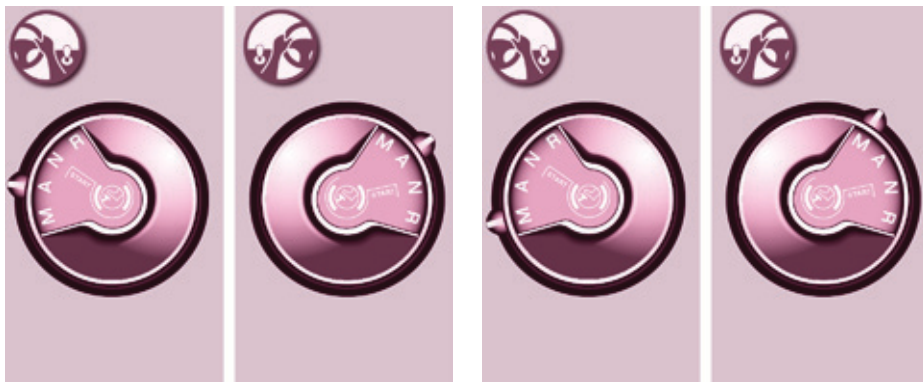

Reverse gear



Engaging reverse gear

Move the gear selector to **R**.

Only attempt to select reverse gear when the vehicle is stationary.

Neutral



Changing to neutral

Move the gear selector to **N**. If the vehicle is moving, do not select this position even momentarily.

Automatic mode



Changing to automatic mode

Move the gear selector to **A**.

The gearbox then operates in automatic mode, without any action on your part.

It constantly selects the gear that is best suited to the following conditions:

- driving style,
- road profile,
- optimum fuel consumption.

Manual mode



Changing to manual mode


Move the gear selector to **M**.

Changing gear



Pull on the "+" control paddle to change up.
Pull on the "-" control paddle to change down.

- If the vehicle stops or reduces speed (for example when approaching a stop sign), the gearbox changes down automatically, to first gear if needed.
- It is not necessary to release the accelerator completely during gear changes.
- A gear change instruction is accepted only if the engine speed permits.
- For safety reasons, depending on the engine speed, a change down may be performed automatically.

 In situations of high engine speeds (heavy acceleration), a change up will not occur unless the driver operates the electronic gearbox control paddle.

Acceleration

For optimum acceleration (e.g. to overtake another vehicle), simply press the pedal beyond the point of resistance at the end of its travel, by pressing down firmly.

Vehicle stationary, with the engine running

In the event of a prolonged stop with the engine running, the gearbox changes automatically to neutral **N**.

Stopping the vehicle

Before stopping the engine, put the gear selector in position **N**.

In all cases, it is essential to apply the parking brake. Check that the parking brake warning lamp is on in the instrument panel.

 Before doing anything in the engine compartment, check that the gear selector is in neutral **N**.



STEERING WHEEL ADJUSTMENT

When the vehicle is stationary, release the steering wheel adjustment mechanism by pulling the lever.

Adjust the steering wheel for height and reach, then lock the mechanism by pushing the lever fully forwards.

Stop & Start


44

The Stop & Start system puts the engine temporarily on standby - STOP mode - during stops in the traffic (red lights, traffic jams, or other...). The engine restarts automatically - START mode - as soon as you want to move off. The restart takes place instantly, quickly and silently.

Perfect for urban use, the Stop & Start system reduces fuel consumption and exhaust emissions as well as the noise level when stationary.


Operation

Going into engine STOP mode


 The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby:

- **with a manual gearbox**, at speeds below 12 mph (20 km/h), when you put the gear lever into neutral and release the clutch pedal,
- **with the 6-speed electronic gearbox**, at a speed below 5 mph (8 km/h), when you press the brake pedal or put the gear selector into position **N**.

If your vehicle is fitted with the system, a time counter calculates the sum of the periods in STOP mode during a journey. It rests itself to zero every time the ignition is switched on with the key.

 With the electronic gearbox, for your comfort during parking manoeuvres, STOP mode is not available for a few seconds after coming out of reverse gear.


STOP mode does not affect the functionality of the vehicle, such as braking, power steering, for example.

 Never refuel with the engine in STOP mode; you must switch off the Ignition with the key.

Special cases: STOP mode unavailable

STOP mode is not invoked when:

- the driver's door is open,
- the driver's seat belt is not fastened,
- the vehicle has not exceeded 6 mph (10 km/h) since the last engine start using the key,
- the parking brake is applied or being applied,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.

 In this case, the "ECO" warning lamp flashes for a few seconds, then goes off.

This operation is perfectly normal.

Going into engine START mode



The "ECO" warning lamp goes off and the engine starts:

- **with a manual gearbox**, when you depress the clutch pedal,
- **with the 6-speed electronic gearbox**:
 - gear selector in position **A** or **M**, when you release the brake pedal,
 - or gear selector in position **N** and the brake pedal released, when you move the gear selector to position **A** or **M**,
 - or when you engage reverse gear.

Special cases: START invoked automatically

START is invoked automatically when:

- you open the driver's door,
- you unfasten the driver's seat belt,
- the speed of the vehicle exceeds 15 mph (25 km/h) with a manual gearbox or 7 mph (11 km/h) with the 6-speed electronic gearbox,
- the parking brake is being applied,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.



In this case the "ECO" warning lamp flashes for few seconds, then goes off.

This operation is perfectly normal.

With a manual gearbox in STOP mode, if a gear is engaged without fully depressing the clutch pedal, a warning lamp comes on or a message is displayed asking you to depress the clutch pedal to restart the engine.

Deactivation



At any time, press the "ECO OFF" switch to deactivate the system.

This is confirmed by the switch warning lamp coming on accompanied by a message in the screen.

If the system has been deactivated in STOP mode, the engine restarts immediately.

Stop & Start

Reactivation

Press the **"ECO OFF"** switch again. The system is active again; this is confirmed by the switch warning lamp going off and a message in the instrument panel.

i The system is reactivated automatically at every new start using the key.

Operating fault



In the event of a malfunction with the system, the **"ECO OFF"** switch warning lamp flashes, then comes on continuously.

have it checked by a PEUGEOT dealer or a qualified workshop.


In the event of a fault in STOP mode, the vehicle may stall. It is then necessary to switch off the ignition and start the engine again using the key.

Maintenance


i Before working under the bonnet, deactivate the Stop & Start system to avoid any risk of injury resulting from automatic operation of START mode.

This system requires a specific battery with a special specification and technology (reference numbers available from a PEUGEOT dealer or a qualified workshop).

Fitting a battery not listed by PEUGEOT introduces the risk of malfunction of the system.

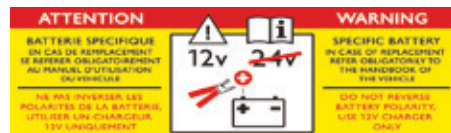

i The Stop & Start system makes use of advanced technology. All work on this type of battery must be done only by a PEUGEOT dealer or a qualified workshop.

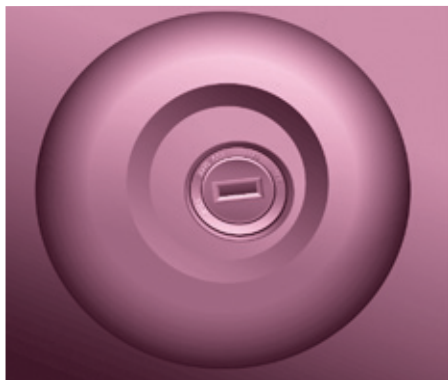

STARTING AND STOPPING

Running and accessories position.

To unlock the steering, turn the steering wheel gently while turning the key, without forcing. In this position, certain accessories can be used.

Starting position.

The starter is operated, the engine turns over, release the key.

STOP position: steering lock.

The ignition is off. Turn the steering wheel until the steering locks. Remove the key.

Good practice when starting



Door or bonnet open warning lamp

If this comes on, a door or the bonnet is not closed correctly, check!



Diesel pre-heating warning lamp

If the temperature is high enough, the warning lamp comes on for less than one second, you can start without waiting.

In cold weather, wait for this warning lamp to go off then operate the starter (Starting position) until the engine starts.

Good practice when stopping



Minimise engine and gearbox wear

When switching off the ignition, let the engine run for a few seconds to allow the turbocharger (Diesel engine) to return to idle.

Do not press the accelerator when switching off the ignition.

There is no need to engage a gear after parking the vehicle.

Starting and stopping

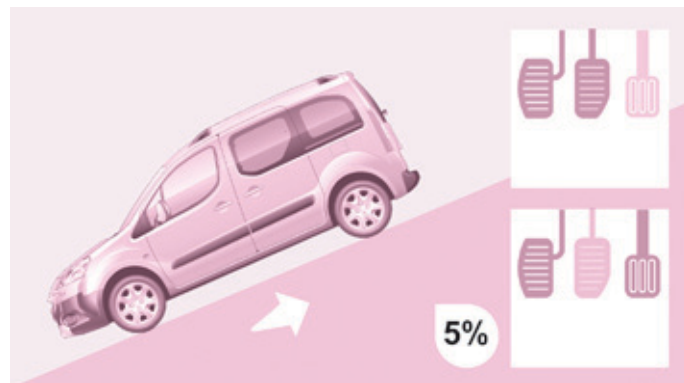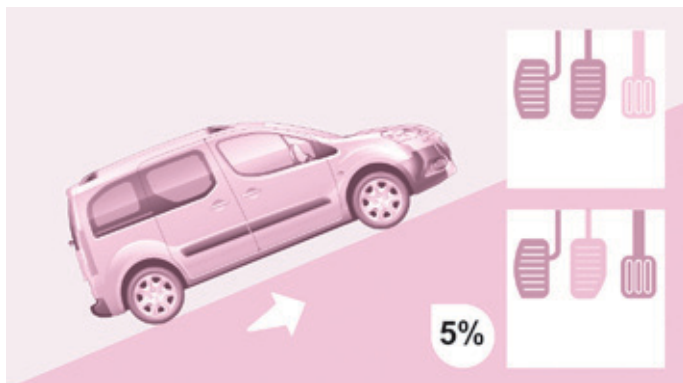

HILL START ASSIST

This function, linked with the ESC, makes hill starts easier and is activated in the following conditions:

- the vehicle must be stationary, engine running, foot on the brake,
- the gradient of the road must be steeper than 5%,
- uphill, the gearbox must be in neutral or in a gear other than reverse,
- downhill, reverse gear must be engaged.

The HHC (Hill Holder Control) or Hill Start Assist function is a driving comfort system. It is not an automatic vehicle parking function or an automatic parking brake.

Operation

With the brake pedal and clutch pedal pressed, from the time you release the brake pedal you have approximately 2 seconds before the vehicle starts to roll back and without using the parking brake within which to move off.

During the moving off phase, the function is deactivated automatically, gradually releasing the braking pressure. During this phase, the characteristic noise of mechanical release of the brakes may be heard, indicating the imminent movement of the vehicle.

Hill start assist is deactivated in the following situations:


- when the clutch pedal is released,
- when the parking brake is applied,
- when the engine is switched off,
- when the engine stalls.

Operating fault



If a malfunction of the system occurs, this warning lamp comes on accompanied by an audible signal and confirmed by

a message in the screen. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

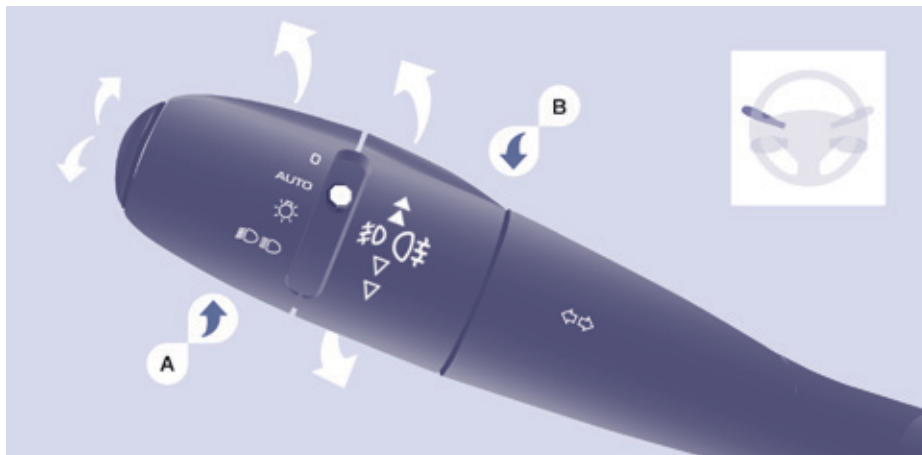

DIRECTION INDICATORS

Direction indicators



Left: downwards passing the point of resistance.

Right: upwards passing the point of resistance.

"Motorway" function

Press the control up or down to flash the corresponding direction indicator three times.

LIGHTING CONTROL

Front and rear lighting

Selection is by turning ring **A**.



Checking by means of the indicator lamps on the instrument panel is described in the "Instruments and controls" section of chapter 2.



Lighting off



Automatic illumination of headlamps



Sidelamps



Dipped beam (green)
Main beam (blue)

Dipped beam/main beam change

Pull the stalk fully towards you.

Lighting-on audible warning

On switching off the ignition, all of the lamps turn off, except dipped beam if automatic guide-me-home lighting has been activated.

To activate the lighting control, turn ring **A** to the lighting off position "0" then to the selection of your choice.

On opening the driver's door, there is an audible warning if you have left the lighting on.

Steering mounted controls

If the user does not operate any equipment for 30 minutes, the Economy mode engages to avoid discharging the battery (see "Battery" in section 7). Electrical functions are put on standby and the battery warning lamp flashes.

Sidelamp operation is not affected by Economy mode.

Front and rear foglamps

Rotate ring **B** forwards to switch on and rearwards to switch off. The status is confirmed by the warning lamps in the instrument panel.

They operate with the sidelamps and dipped beam headlamps.




Front foglamps (green, 1st rotation of the ring forwards).



Rear foglamps (amber, 2nd rotation of the ring forwards).

To switch off the front and rear foglamps, turn the ring rearwards twice in succession.

In clear weather or in rain, both day and night, rear foglamps dazzle and their use is prohibited.

 Do not forget to switch them off when they are no longer needed.

Operation of the automatic illumination of headlamps switches off the rear foglamps, but the front foglamps remain on.

LED DAYTIME RUNNING LAMPS

On starting the vehicle, in daylight the LED daytime running lamps come on automatically.

If the sidelamps and headlamps are switched on manually or automatically, the daytime running lamps go off.

Programming


For countries where exterior lighting by day is not a legal requirement, you can activate or deactivate the function via the configuration menu.


Automatic illumination of headlamps



The sidelamps and dipped beam headlamps switch on automatically if the light is poor, or during operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop.

This function is not compatible with the daytime running lamps.

 In foggy weather or in snow, the sunshine sensor may detect sufficient light. As a consequence, the lighting will not come on automatically.

 If necessary, you must switch on the dipped beam headlamps manually.

Do not cover the sunshine sensor located on the windscreen, behind the mirror. It is used for the automatic illumination of headlamps and for the automatic rain sensitive wipers.

Activation

Turn the ring to the **AUTO** position. The activation of this function is accompanied by a message in the screen.

Deactivation

Turn the ring forwards or rearwards. The deactivation of this function is accompanied by a message in the screen.

The function is deactivated temporarily when you use the manual lighting control stalk.



If the sunshine sensor does not function correctly, the lighting comes on accompanied by the service warning lamp, an audible signal and a message in the screen. Contact a PEUGEOT dealer or a qualified workshop.

Guide-me-home lighting

Keeping the dipped beam headlamps on temporarily with the ignition off, makes the driver's exit easier when the light is poor.

Manual operation

- With the ignition off, "flash" the headlamps within one minute after switching off the ignition.

The guide-me-home lighting switches off automatically after a set time.

Automatic operation



Activate the function via the vehicle configuration menu.



Refer to the "Screen menu map" section of chapter 9.



Cornering lighting

With dipped or main beam headlamps, this function makes use of the beam from a front foglamp to illuminate the inside of a bend, when the vehicle speed is below 25 mph (approximately 40 km/h) (urban driving, winding road, intersections, parking manoeuvres...).

Switching on

This function starts:

- when the corresponding direction indicator is switched on,
- or
- from a certain angle of rotation of the steering wheel.

Switching off


The system does not operate:

- below a certain angle of rotation of the steering wheel,
- above 25 mph (40 km/h),
- when reverse gear is engaged.

Programming

The system is activated or deactivated in the vehicle configuration menu.

The system is activated by default.

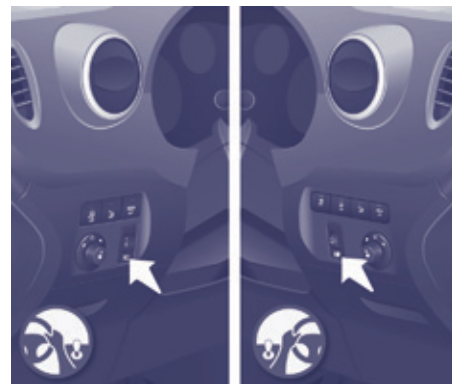

HEADLAMP BEAM

Depending on the load in your vehicle, the beam setting must be adjusted.


- 0** - No load.
- 1** - Partial load.
- 2** - Average load.
- 3** - Maximum authorised load.

Initial setting is position 0.



Travelling abroad

If using your vehicle in a country that drives on the other side of the road, the headlamps must be adjusted to avoid dazzling on-coming drivers. Contact a PEUGEOT dealer or a qualified workshop.

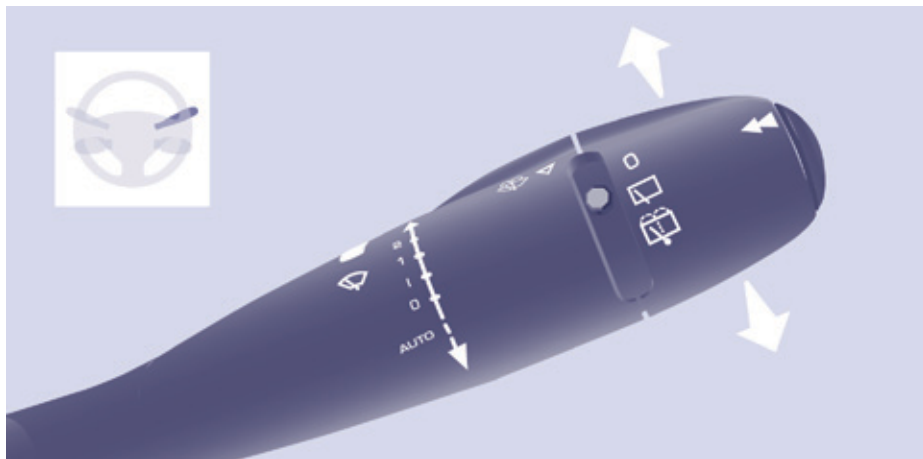

WINDSCREEN WIPER STALK

Manual windscreen wipers

- 2** Fast wipe (heavy rain).
- 1** Normal wipe (moderate rain).
- I** Intermittent wipe.
- 0** Off.
- ↓ Single wipe
(press downwards).

In the Intermittent position, the wiping speed is in proportion to the vehicle speed.

Whenever the ignition has been switched off for more than one minute, with the windscreen wiper stalk in position 2, 1 or I, the stalk must be reactivated:

- move the stalk to any position,
- then move it back to the required position.

Automatic rain sensitive windscreen wipers



Do not cover the rain sensor, located in the centre of the windscreen, behind the mirror.

In the **AUTO** position, the windscreen wipers operate automatically and adapt their speed to the intensity of the rainfall.

When not in **AUTO** mode, for the other positions, refer to the manual windscreen wipers section.

Activation

Press the control downwards. Activation of the function is accompanied by a message in the screen.

The automatic rain sensitive windscreen wipers function must be reactivated by pressing the stalk downwards, if the Ignition has been switched off for more than one minute.

Deactivation / Switching off

Place the windscreen wipers stalk in position I, 1 or 2. Deactivation of the function is accompanied by a message in the screen.

In the event of malfunction of the automatic windscreen wipers, the windscreen wipers will operate in intermittent mode.

Contact a PEUGEOT dealer or a qualified workshop to have the system checked.


! When using an automatic car wash, switch off the ignition to avoid triggering the automatic wiping.

In winter, it is advisable to wait for the windscreen to completely clear of ice before operating automatic wipe.

Wash-wipe and headlamp wash

Pull the stalk towards you, the wash-wipe is accompanied by a timed sweep of the wipers.


The headlamp wash is linked with the wash-wipe, it is triggered if the dipped headlamps are on.

 To top up the levels, refer to the "Levels" section of chapter 6.


Special position of the windscreen wipers

In the minute following switching off of the ignition, any action on the stalk positions the wipers against the windscreen uprights.

This action enables you to position the wiper blades for winter parking, cleaning or replacement.

 Refer to the "Changing a windscreen wiper blade" section of chapter 7.

To park the wipers in their normal position after this has been done, switch on the ignition and move the stalk.

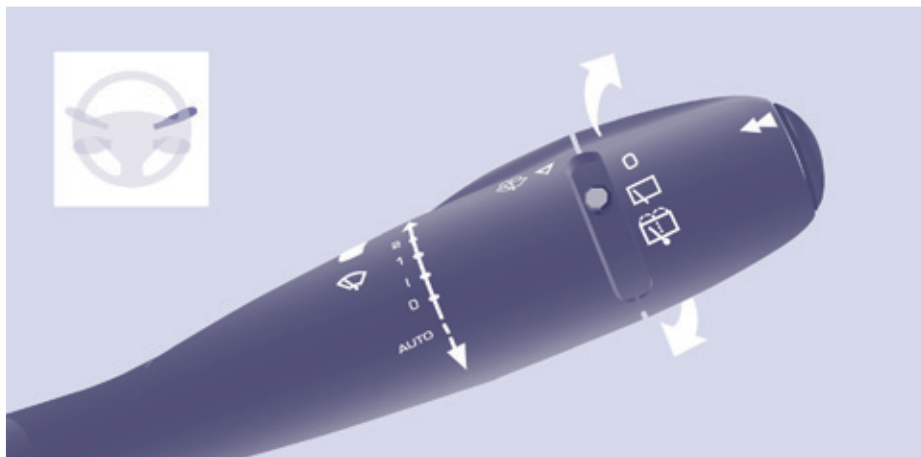

Rear wiper




Turn the ring to the first position.

Rear screenwash



Turn the ring past the first position: the rear screenwash then the rear wiper operates for a fixed time.

 In winter, in the event of a considerable amount of snow or ice, switch on the heated rear screen. Once the screen is clear, remove the snow or ice which has accumulated on the rear wiper blade. You can then operate the rear windscreen wiper.

Steering mounted controls



CRUISE CONTROL "CRUISE"

"This is the speed at which the driver wishes to drive".

This aid to driving in free-flowing traffic enables the vehicle to maintain the speed programmed by the driver, unless a steep gradient makes this impossible.

In order for it to be programmed or activated, the vehicle speed must be greater than 25 mph (40 km/h) with at least 4th gear engaged.

This cruise control shows the function selection status in the instrument panel and displays the programmed speed:



Function selected, display of the "Cruise Control" symbol.



Function deactivated, **OFF**.



Function activated.



Vehicle speed above the programmed speed, which is displayed flashing.





Operating fault detected, **OFF** - the dashes flash.



Selecting the function

- Place the switch in the **CRUISE** position. The cruise control is selected but is not yet active and no speed has been programmed.

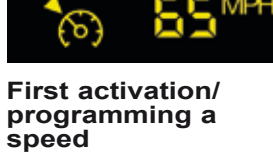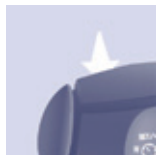

First activation/ programming a speed

- Reach the chosen speed by pressing the accelerator.
- Press the **SET -** or **SET +** button.

This programmes/activates the reference speed and the vehicle will maintain this speed.



Temporarily exceeding the speed


It is possible to **accelerate** and drive momentarily at a speed greater than the programmed speed. The value programmed flashes.

When the accelerator pedal is released, the vehicle will return to the programmed speed.



Deactivation (off)

- Press this button or the brake or clutch pedal.

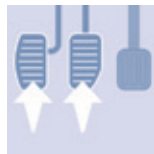

Reactivation

- Following deactivation of the cruise control, press this button. Your vehicle will return to the last programmed speed. Alternatively, you can repeat the "first activation" procedure.

Steering mounted controls



Changing the programmed speed

There are two methods of memorising a speed higher than the previous one: Without using the accelerator:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

Using the accelerator:

- exceed the memorised speed until the speed required is reached,
- press the **Set +** or **Set -** button.

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).



Switching the function off

- Place the dial in position **0** or switch off the ignition to switch everything off.

Cancelling the programmed reference speed

When the vehicle becomes stationary, after switching off the ignition, the system no longer memorises a speed.



Operating fault

The programmed speed is cleared then replaced by three dashes. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

Good practice

When changing the programmed reference speed by means of a maintained press, pay attention as the speed can increase or decrease rapidly.

Do not use the cruise control on slippery roads or in heavy traffic.

In the event of a steep slope, the cruise control cannot prevent the vehicle from exceeding the programmed speed.

In any event, the cruise control cannot replace the need to observe the speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

It is advisable to leave your feet near the pedals.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.



SPEED LIMITER "LIMIT"

"This is the selected speed which the driver does not wish to exceed".

This selection is made with the engine running while stationary or with the vehicle moving. The minimum speed which can be programmed is 20 mph (30 km/h).

The speed of the vehicle responds to the pressure of the driver's foot as far as the accelerator pedal point of resistance which indicates that the programmed speed has been reached.

However, pressing the pedal beyond this point of resistance to the floor allows the programmed speed to be exceeded. To resume use of the limiter, simply reduce the pressure on the accelerator pedal gradually and return to a speed below that programmed.

The operating actions may be carried out when stationary, with the engine running, or with the vehicle moving.


This speed limiter shows the function selection status in the instrument panel and displays the programmed speed:



Function selected, displaying of the "Speed Limiter" symbol.



Function deactivated, last programmed speed - OFF.



Function activated.




Vehicle speed above the programmed speed, which is displayed flashing.







Operating fault detected, **OFF** - the dashes flash.

Steering mounted controls

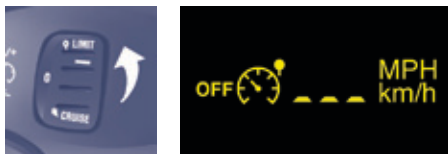

Selecting the function

- Place the switch in the **LIMIT** position. The limiter is selected but is not yet active. The screen indicates the last programmed speed.

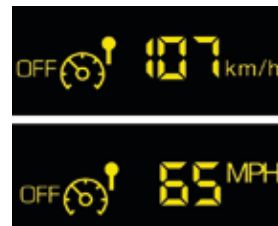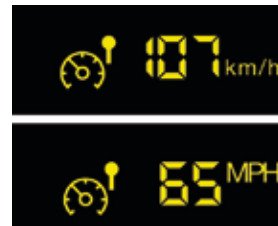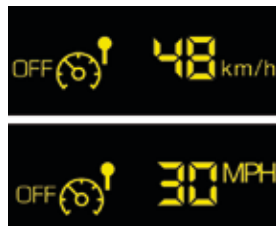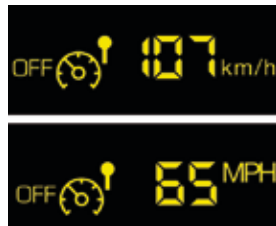

Programming a speed

A speed can be programmed without activating the limiter but with the engine running.

To memorise a speed higher than the previous one:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).

Activation/Deactivation (off)

Pressing this button once activates the limiter, pressing the button again deactivates it (OFF).



Exceeding the programmed speed

Pressing the accelerator pedal in order to exceed the programmed speed will have no effect unless you press the pedal **firmly** beyond the **point of resistance**.


The limiter is deactivated temporarily and the programmed speed flashes.

To return to the limiter function, reduce your speed to below the programmed speed.

Flashing of the speed

The speed flashes:

- following forcing of the accelerator point of resistance,
- when the limiter cannot prevent an increase in the vehicle speed due to the profile of the road or on a steep descent,
- in the event of sharp acceleration.

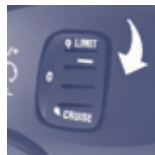

Switching the function off

- Place the switch in position **0** or switch off the ignition to switch the system off.

The last programmed speed remains in the memory.



Operating fault

The programmed speed is cleared then replaced by three dashes.

Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

Good practice

In any event, the speed limiter cannot replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Always pay attention to the profile of the road and sharp acceleration and stay in complete control of your vehicle.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.

Ventilation



Heating control panel



Air conditioning control panel

VENTILATION

Manual settings:

Temperature

Control positioned:



in the blue zone, provides ambient air,



in the red zone, provides heating of the passenger compartment.

Air flow



The speed of the blown air at the vents varies from 1 to the fastest 4. Position 0 switches it off.

Adjust this control in order to attain the desired comfort level.

Air distribution

The air supply distribution is determined by the following symbols:



the side vents and the central vents,



the footwells,



the windscreen and the footwells,



the windscreen.



The air distribution can be modulated by placing the control in the intermediate positions, marked "●".

Intake of exterior air



The LED in the button is off. This is the preferred operating position.

Recirculation of interior air



The LED in the button is on. Recirculation temporarily prevents exterior odours and smoke from entering the passenger compartment.

Used with the setting of the fan speed (from 1 to 4), recirculation enables you to attain the desired comfort level more quickly with both hot or cold settings.

This position should only be temporary. When your desired comfort level has been reached, return to the intake of exterior air position to permit renewal of the air in the passenger compartment and avoid misting. This is the preferred operating mode.

Air conditioning A/C

The air conditioning can only operate with the engine running.



Pressing the button starts the air conditioning system, the LED is on. Pressing the button again switches the function off and the LED goes off.

The air conditioning does not operate if the fan speed is set to 0.



DIGITAL AIR CONDITIONING WITH SEPARATE SETTINGS FOR THE DRIVER AND PASSENGER

Good practice

For maximum cooling or heating of the passenger compartment, it is possible to exceed the value 15 by turning until LO is displayed or the value 27 by turning until HI is displayed.

On entering the vehicle, the inside temperature may be much colder (or warmer) than is comfortable. There is no advantage in changing the value displayed in order to quickly reach the level of comfort required. The system will use its maximum performance to reach the comfort value set.

Automatic operation

AUTO comfort programme

This is the normal air conditioning system operating mode.

Press this button, the **AUTO** symbol is displayed. In accordance with the comfort value selected, the system controls the distribution, the flow and the intake of air to guarantee comfort and a sufficient circulation of air in the passenger compartment. No further action on your part is required.

When the engine is cold, to prevent an excessive diffusion of cold air, the air diffuser will reach its optimum level gradually.

For your comfort, the settings are stored when the ignition is switched off and are reinstated the next time the vehicle is started.

The automatic function will no longer be maintained if you change a setting manually (AUTO is cleared).

Driver or passenger side comfort value

The value indicated in the screen corresponds to a level of comfort and not a temperature in degrees Celsius or Fahrenheit.



Turn this control to the left or to the right to decrease or increase the value. A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is usual.



Do not cover the sunshine sensor located on the dashboard.

Manual operation

You can, according to your requirements, make a different selection from that offered by the system by changing a setting. The other functions will still be controlled automatically. Pressing the **AUTO** button restores fully automatic operation.



Air distribution

Pressing this button several times in succession directs the air flow towards:

- the windscreen,
- the windscreen and footwells,
- the footwells,
- the side vents, central vents and footwells,
- the side vents and central vents.



Air flow

Press the **small fan** button to reduce the flow or the **large fan** button to increase the flow.

On the display, the blades of the fan fill when the flow is increased.



Deactivating the system

Press the air flow **small fan** button until the fan symbol disappears from the display.

This action deactivates all of the system's functions, with the exception of the air recirculation and rear screen demisting (if fitted on your vehicle). Your comfort setting is no longer maintained and is switched off.

For your comfort, do not deactivate the system for long periods.



Pressing the **large fan** button or the **AUTO** button reactivates the system with the values set before it was deactivated.



Intake of exterior air / Recirculation of interior air

Press this button to recirculate the interior air. The recirculation symbol is displayed.

Recirculation prevents exterior odours and smoke from entering the passenger compartment. Avoid prolonged operation in interior air recirculation mode (risk of condensation, odour and humidity). Pressing this button again activates the intake of exterior air.



Switching the air conditioning On / Off

Press this button, the **A/C** symbol is displayed and the air conditioning is activated.

Pressing this button again switches off the air conditioning.



The ventilation outlet, located in the glove box, diffuses cool air (if the air conditioning is on) regardless of the reference temperature requested in the passenger compartment and regardless of the exterior temperature.

Ventilation



DEMISTING AND DEFROSTING

Manual mode



Turn the control to this air distribution setting.



Turn the control to this temperature setting.



Increase the air flow setting.



Press the air conditioning button.



Returning to exterior air intake open permits renewal of the air in the passenger compartment (LED off).

Demisting the rear screen and/or mirrors



Pressing this button, with the engine running, activates the rapid demisting - defrosting of the rear screen and/or electric mirrors.

This function switches off:

- when the button is pressed,
- when the engine is switched off,
- automatically to prevent excessive energy consumption.



DEMISTING AND DEFROSTING

Automatic mode: visibility programme

The comfort programme (AUTO) may not be sufficient to quickly demist or defrost the windows (humidity, several passengers, ice).

In this case, select the visibility programme. The visibility programme indicator comes on.

It activates the air conditioning, the air flow and provides optimum distribution of the ventilation to the windscreen and side windows.

It deactivates the air recirculation.

GOOD PRACTICE

Vents

"Leave them open"

For optimum distribution and diffusion of hot or cool air in the passenger compartment, there are adjustable central and side vents which can be directed sideways (right or left) or vertically (up or down). For your comfort while driving, do not close them and direct the flow of air towards the windows instead.

Air vents in the footwells and directed towards the windscreen complete the equipment.

Do not block the vents located at the windscreen or the air extractor located in the boot.

Dust filter, odour filter (activated carbon)

This filter traps certain dust and limits odours.

Ensure that this filter is in good condition and have all of the filter elements replaced regularly.



Refer to the "Checks" section of chapter 6.

Air conditioning

In all seasons, the air conditioning should only be used with the windows closed. However, if the interior temperature remains high after a prolonged period parked in the sun, do not hesitate to ventilate the passenger compartment for a few minutes.

Use the AUTO mode as much as possible as it permits optimised control of all of the functions: air flow, passenger compartment comfort temperature, air distribution, air intake mode or air recirculation in the passenger compartment.

Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in good working order.

It is normal that the condensation created by the air conditioning system results in a flow of water which may form a puddle under the vehicle when parked.

If the system does not produce cold air, do not use it and contact a PEUGEOT dealer or a qualified workshop.



FRONT SEATS

The following adjustments are available:



1 - Forwards/backwards adjustment

Lift the bar and slide the seat forwards or backwards.



2 - Seat back angle adjustment

With your back pressed against the seat back, move the lever forwards and set the required angle.



3 - Driver's seat height adjustment

To raise the seat, pull the control upwards then take your weight off the seat cushion.

To lower the seat, pull the control upwards then push on the seat cushion.





Head restraint height adjustment

To raise the head restraint, slide it vertically upwards.

To lower the head restraint, press the button and slide the head restraint vertically downwards.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

To remove the head restraint, press the button and pull the head restraint upwards.

To re-install the head restraint, engage the rods in the holes making sure they are aligned with the seat back.



Never drive with the head restraints removed; they must be in place and correctly adjusted.

Adjustable armrest

To access the vertical position, raise the armrest until it locks.

Lower the armrest to return it to a position for use.

To remove the armrest, press the release button from the vertical position and move aside the armrest.

To put the armrest back in place, clip it in the vertical position.

If the vehicle is fitted with the additional console and an armrest, to fold the passenger seat to the table position remove the console or the armrest.




Front heated seats control

Each front seat may be fitted with a control located on the side part of the cushion.

Press to switch on the cushion heating.


Press again to switch it off.

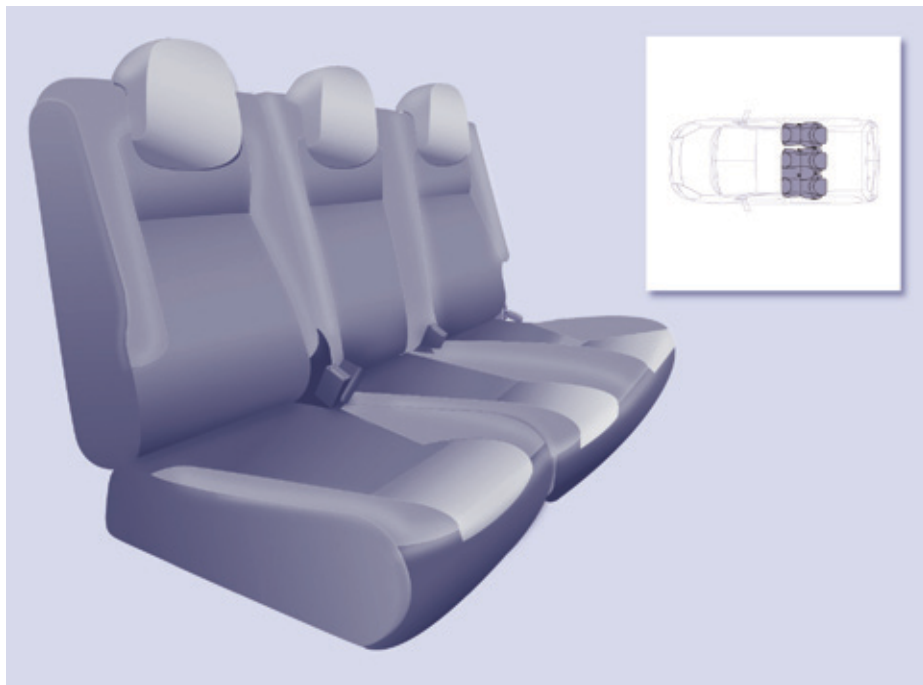

REAR BENCH SEAT

The 1/3 - 2/3 rear bench seat is fitted with "comma" shape head restraints.

Each 1/3 - 2/3 section can be folded fully, then removed individually.

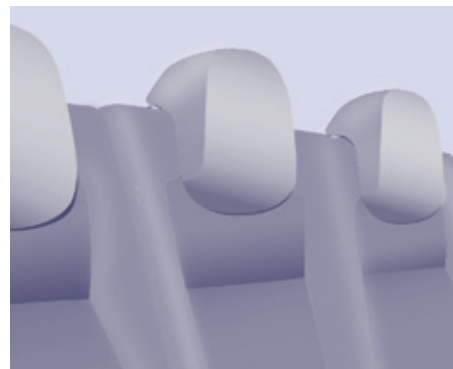


Head restraint

High position: lift and raise the head restraint.

Low position: press on the head restraint to lower it.

To remove the head restraint, after raising it press the tab and lift the head restraint.


To install the head restraint, engage the rods of the head restraint in the holes keeping it in line with the seat back.

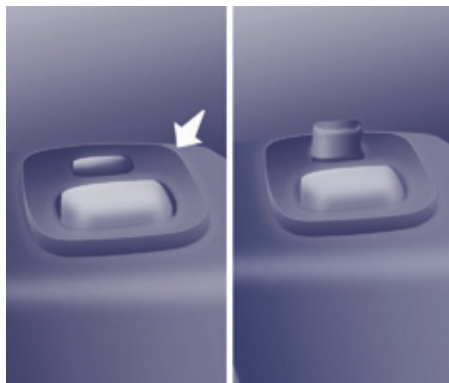

Fully folded position

Example of operations for the 1/3 section. They are identical for the 2/3 section.

- Place the head restraints in the low position.
- If necessary, move the front seats forward.
- Press the grey control located on the upper part of the seat back.
- Fold the seat back onto the seat cushion.

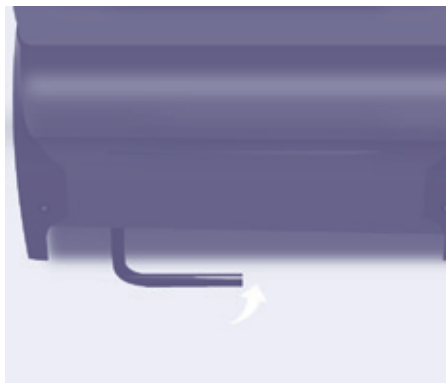

- Raise the grey control bar, located at the rear of the seat cushion.



- Tilt the entire seat forward.



Putting back in place

Tilt the entire seat rearwards until it locks.

Raise the seat back.


The seat is locked correctly when the control (at the top of the seat back) is no longer visible.


- i** Check that the seat is locked on the floor securely when it is returned to the sitting position.



Removing the bench seat


- If necessary, move the front seats forward.
- Place the bench seat (1/3 section and/or 2/3 section) in the fully folded position.

 Refer to the "fully folded position" described on the previous page.

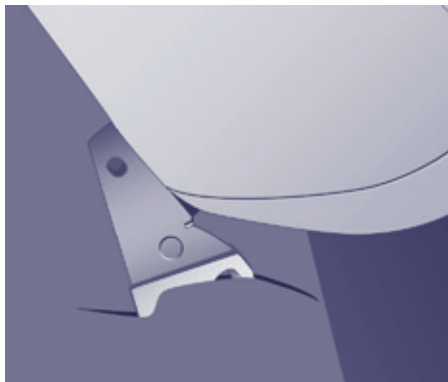


Refitting the bench seat

- Offer up the bench seat (1/3 section and/or 2/3 section) vertically.
- Place the hooks between the two bars.
- Fold the bench seat rearwards.

 To return the bench seat (1/3 section and/or 2/3 section) to the "passenger transportation" position, refer to the "fully folded position" described on the previous page.

- Tilt the entire seat rearwards by approximately 45°.
- Lift the bench seat **vertically** to the limit of the anchorages.
- Straighten bench seat by tilting it forwards then lift it.

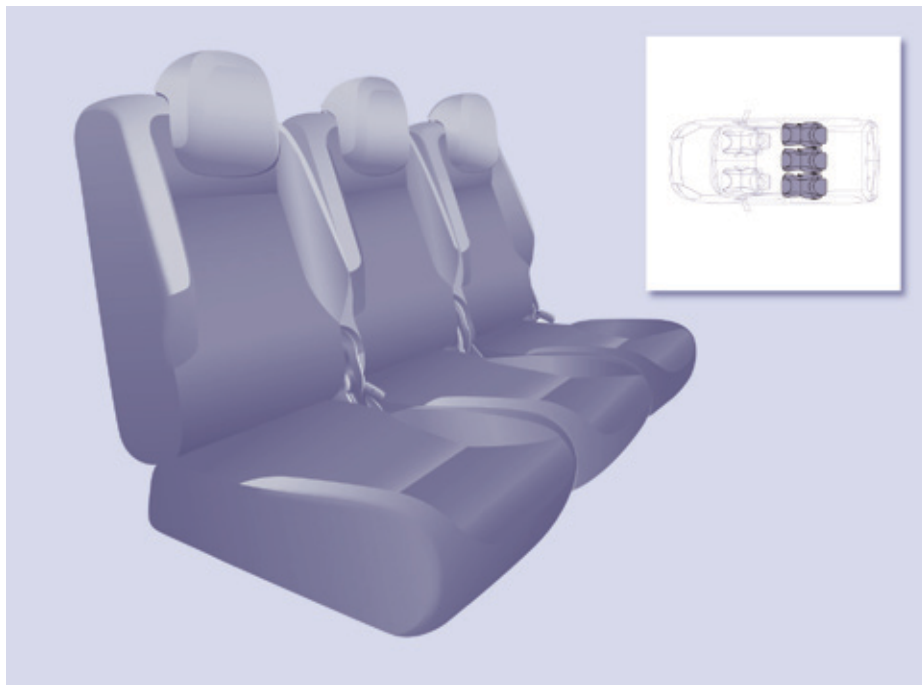


REAR SEATS (5 SEAT VERSION)

The three independent rear seats are fitted with "comma" shape head restraints.

The back of the centre seat, folded onto the seat cushion, has a shell which serves as a table with cup holder.

Each seat can be removed individually.

Each time a seat is returned to the sitting position or after removing then refitting a seat, check that it is locked on the floor securely.

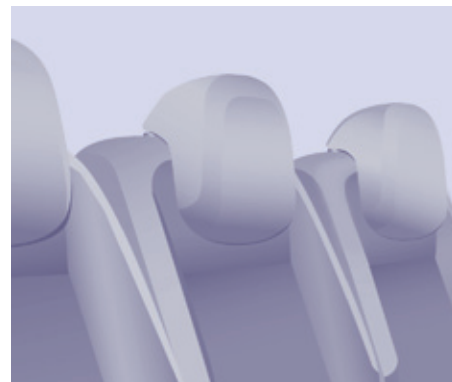

Head restraint


High position: lift and raise the head restraint.

Low position: press on the head restraint to lower it.

To remove the head restraint, after raising it press the tab and lift the head restraint.

To install the head restraint, engage the rods of the head restraint in the holes keeping it in line with the seat back.

Seats

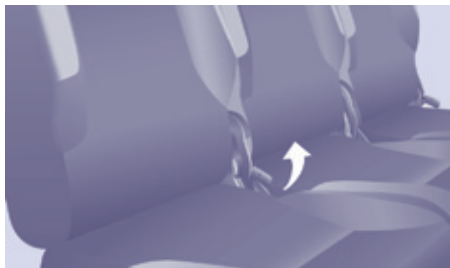

Adjusting the angle of the seat back

- Operate the control and adjust the angle of the seat back.



Placing the seat back in the table position

- Pull the control to fold the seat back onto the seat cushion.

Do not place hard or heavy objects on the table. They could become dangerous projectiles in the event of sharp braking or impact.

Returning the seat back to the sitting position

- Release the seat back by pulling the control, then return it to its original position.

When returning the seat back to the sitting position, ensure that it is locked securely.



Placing the seat in the fully folded position

- Pull the control to place the seat back in the table position.
- Raise the bar located behind the seat to release the rear anchoring points.
- Tilt the entire seat forwards, until it locks.



Returning the seat to its original position


- Push the red control.
- Fold back the seat to fix the rear anchoring points.
- Raise the seat back by pulling the control.

Check that the entire seat is anchored securely.



Removing the seat

- If necessary, move the front seats forward and lower the head restraint.
- Place the seat in the fully folded position.

 Refer to the "fully folded position" described on the previous page.

- Press the red lever to release the front feet.
- Tilt the entire seat rearwards by approximately 45° without releasing the lever.
- Release the lever.
- Lift the seat **vertically** to the limit of the anchorages.
- Straighten the seat by tilting it forwards then lift it.



Putting the seat back in place

- Tilt the seat forward by 45°.
- Place the hooks between the two bars.
- Fold back the seat to fix the rear anchoring points.
- Pull the control to return the seat back to its initial position.
- Raise the head restraint.

Check that no object is obstructing the anchoring recesses or preventing correct locking of the seats.

Good practice

Following the various operations:

- do not remove a head restraint without storing it and fix it to a support,
- ensure that the passengers can always access the seat belts and fasten them easily,
- passengers must never take their seat without adjusting and fastening their seat belt.



REAR SEATS (7 SEAT VERSION)

The seats of row 2 and row 3 are independent and adjustable.

Each seat can be removed and must be replaced in the specified position, indicated by a symbol on its label.



Head restraint

This is of the "comma" shape type.

High position: press the tab, lift and raise the head restraint.

Low position: push the tab and press the top of the head restraint to lower it.

To remove the head restraint: place it in the high position, lift it, then remove it.


Store it inside the vehicle, securing it firmly.

To install the head restraint: engage the rods of the head restraint in the holes keeping it in line with the seat back.




Types of Row 2 seat

Left-hand outer seat

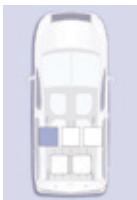

Centre seat

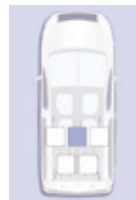


Right-hand outer seat



Types of Row 3 seat

Left-hand outer seat

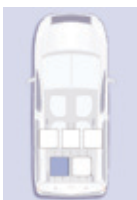

Right-hand outer seat



Seats



Row 2 seat adjustments

Adjusting the angle of the seat back

- Operate the control and adjust the angle.



Placing the seat in the table position

- Lower the head restraint fully.
- Operate the control to fold the seat back onto the seat cushion.

Returning the seat back to the sitting position

- Release the seat back by pulling the control, then return it to its original position.

Ensure that the entire seat is anchored securely.



Placing the seat in the fully folded position

- Place the seat in the table position.
- Pull the red strap, located behind the seat, to release the feet of the seat from their anchorage on the floor.
- Tilt the entire seat forwards.



Returning the seat to its original position

- Fold back the entire seat.

i Before folding the seat, ensure that:

- in row 3, no passenger's foot is at one of the seat anchorages on the floor,
- the seat is locked securely on the floor,
- the seat belt is available for the passenger.



Row 3 seat adjustments

Placing the seat back in the table position

- Lower the head restraint fully.
- Operate the control to fold the seat back onto the seat cushion.

Returning the seat back to the sitting position


- Release the seat back by pulling the control, then return it to its original position.

Ensure that the entire seat is anchored securely.



Placing the seat in the fully folded position

- Place the seat in the table position.
- Raise the bar fitted with a red strap, located behind the seat, to release feet of the seat from their anchorage on the floor.
- Tilt the entire seat forwards.

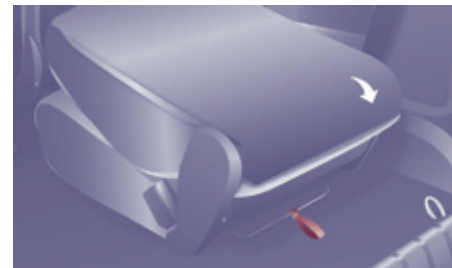

Returning the seat to its original position

- Push the red control.
- Fold back the entire seat.



Ensure that:

- the seat is locked securely on the floor,
- the seat belt is available for the passenger.

Seats



Entering, exiting from row 3

Entering


- Place the row 2 seat in the table position.



- Tilt it to the fully folded position to allow access.



- i** Before folding it back, ensure that the feet of the passenger in row 3 are not obstructing the row 2 seat anchoring points.

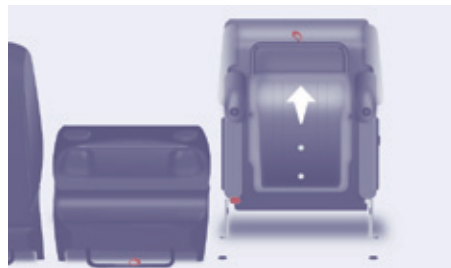


- Pull the red strap to place the seat in the fully folded position.
- Tilt the entire seat forwards.



Exiting

- Lower the head restraint fully.
- Operate the yellow control, located on the back of the row 2 seat back.
- Fold the seat back to the table position.

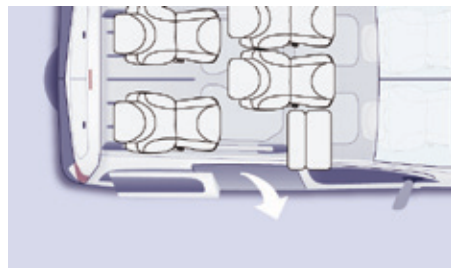

- Exit via the side door.


- i** Ensure that the stored centre seat belt is placed correctly in its strengthener in the headlining.



Handling the Row 2 seat

Removing the seat

- If necessary, move the front seats forward.
- Lower the head restraint.
- Place the seat in the fully folded position.
- Tilt the entire seat forwards then lift it.

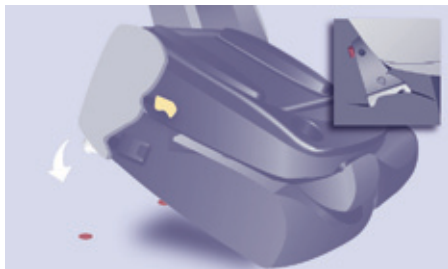

Repositioning the seat

The label on the seat indicates the position in which it must be installed.

- Place the hooks of the front feet between the two bars.
- Fold back the seat to fix the rear anchoring points.
- Operate the control to raise the seat back to its initial position.
- Raise the head restraint.




- I** Ensure that no object or foot of a passenger seated in the rear is obstructing the anchoring recesses or preventing correct locking of the seat.



Handling the Row 3 seat

Removing the seat

- Lower the head restraint.
- Place the seat in the fully folded position.
- Tilt the entire seat forwards.
- On each side, take hold of the uprights of the folded seat, tilting it forward slightly, and lift it.

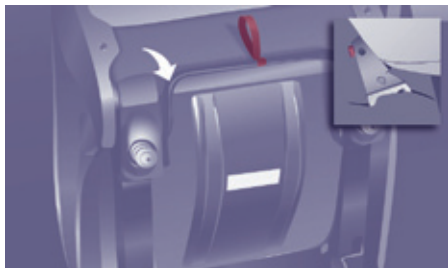

Repositioning the seat

The label on the seat indicates the position in which it must be installed.







- Place the hooks of the front feet between the two bars.
- Ensure that no object or foot is obstructing the rear anchoring recesses and that the seat belt is positioned correctly and available.
- Fold back the seat to fix its rear anchoring feet.
- Operate the control to raise the seat back to its initial position.
- Raise the head restraint.

Good practice

Do not place hard or heavy objects on the seat backs forming a table, they could become dangerous projectiles in the event of sharp braking or impact.







Following the various operations:

- do not remove a head restraint without storing it, fix it to a support in the vehicle,
- ensure that the passengers can always access the seat belts and fasten them easily,
- passengers must never take their seat without adjusting and fastening their seat belt.
- a passenger seated in row 3 must ensure that he does not obstruct the row 2 seat anchoring recesses,
- a passenger seated in row 3 must not have the seat in front of them in row 2 in the folded position; this is in case the seat should tip towards the passenger unexpectedly and injure them.

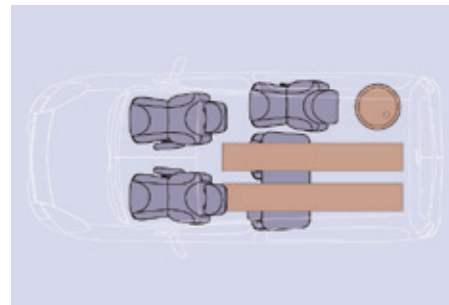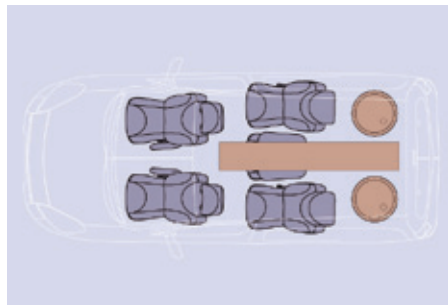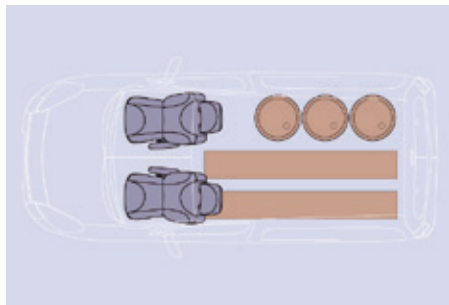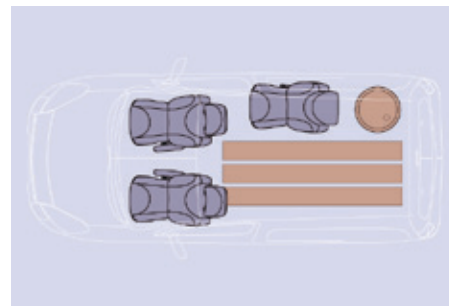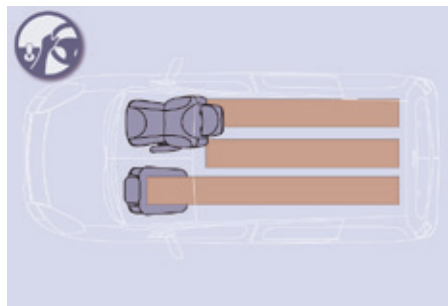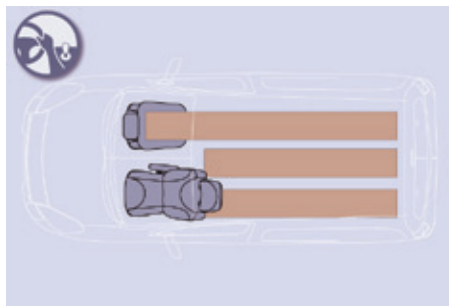

MODULARITY AND DIFFERENT SEAT CONFIGURATIONS


5 seat layouts

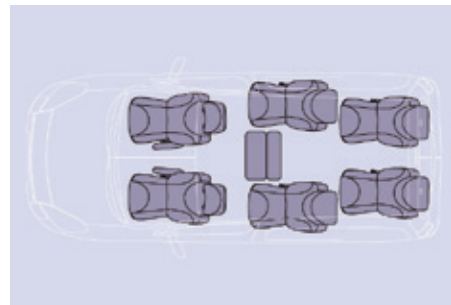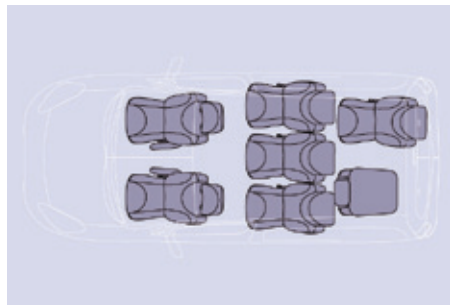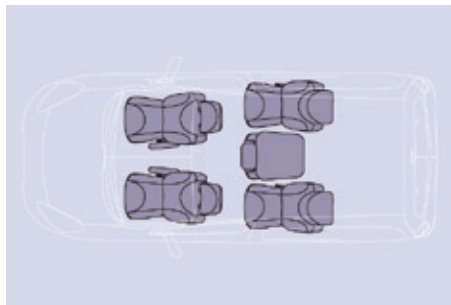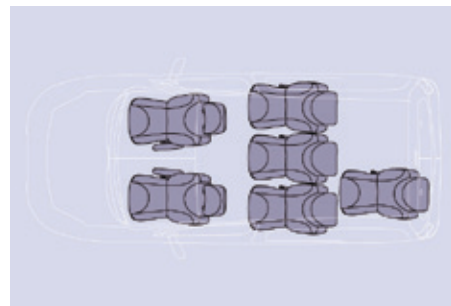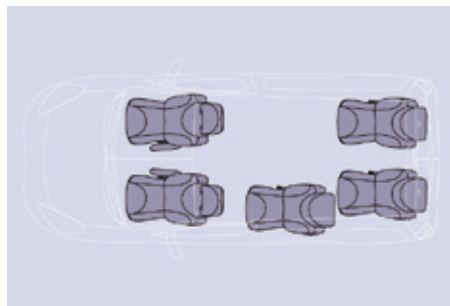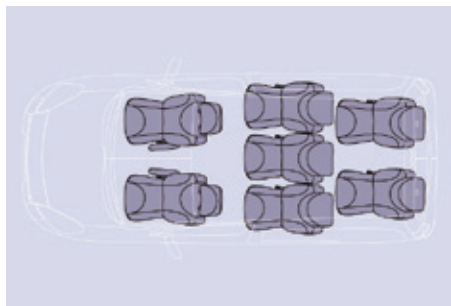

7 seat layouts



The various operations must be carried out while stationary.

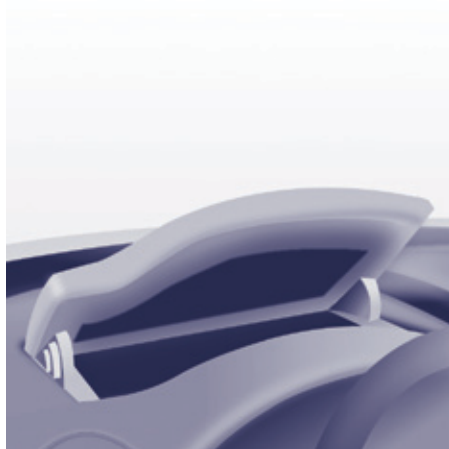

FRONT FITTINGS


Upper storage compartment

This is located on the dashboard, behind the steering wheel.

A recess makes lifting of the lid easier when opening. Guide it to its rest position.

To close, guide the lid then press the centre gently.

Any liquid which could spill risks causing an electrical short circuit and therefore a potential fire.

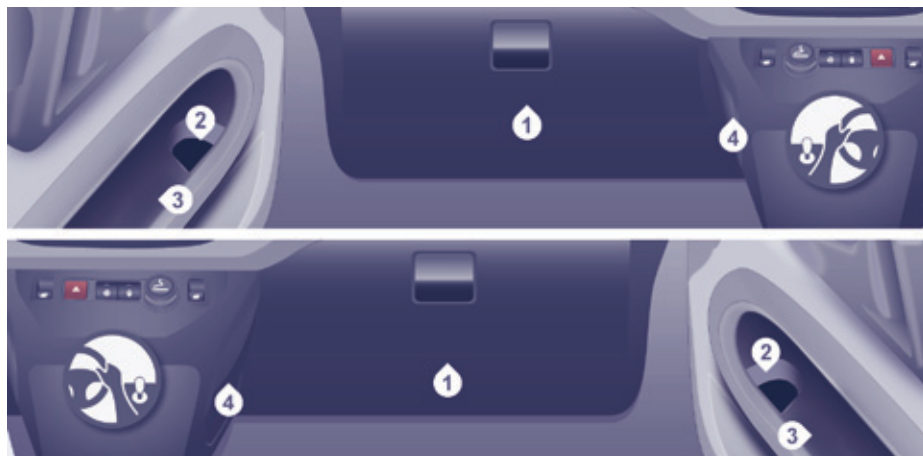

1. Lower glove box

This may or may not be fitted with a lid.


2. Storage pocket and bottle holder (1.5 L)

3. Side storage compartment

4. Bag hook

Only hang flexible bags which are not too heavy on this hook.

Practical information

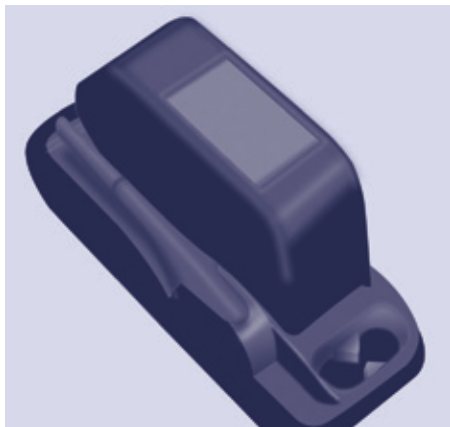

Central storage console

This console offers an appreciable additional storage area: it can be removed and clips onto a base which also incorporates two cup holders at the rear.

Ensure that the object (bottle, can...) placed in the cup holder is retained securely and does not risk being dislodged while driving.

Any liquid which could spill presents a risk of damage on contact with the instrument panel and centre console controls.

Take care.



Overhead storage unit

This is located above the sun visors and can accommodate various objects (a jumper, file, gloves...).

The openings concealed by the sun visors allow you to see and access the objects stored in the overhead storage unit.

The maximum weight permitted in the overhead storage unit is 5 Kg.

Do not place objects in this storage unit which could present a risk to the occupants.

Sun visor

To prevent dazzle from ahead, fold the sun visor down.

A pocket is provided in the driver's sun visor for storing toll cards, tickets, ...



Drawers under seats


Your vehicle may be fitted with a drawer, under each front seat.



Storage compartment under seats

Storage compartments are available, with or without lid, in the floor under the front seats.

To gain access to them, move the seat forward. The lid must be lifted from the rear of the seat.

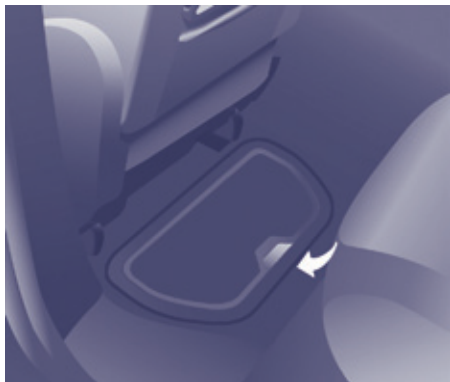

SEATING AREA FITTINGS

Floor boxes

Two boxes are available, located under the rear passenger footwells.

To open them, slide your fingers into the recess and lift the lid.



Aircraft style tables

To put the table in place, pull it upwards and fold it down.

As a safety precaution, above a high pressure, the table is designed to unhook.

To put it back in place, with the table vertical, engage one side then the other, forcing slightly.

Do not place hard or heavy objects on the table. They could become dangerous projectiles in the event of sharp braking or impact.

A bag hook is provided on the side of each table.




Side blinds

Side blinds may be available on the sliding side doors.

Pull the side blind by the tab to install it.

To avoid damaging the blind when opening the door, check that the tab is hooked securely.

i Always guide the blind slowly using the tab, both when raising and when lowering.

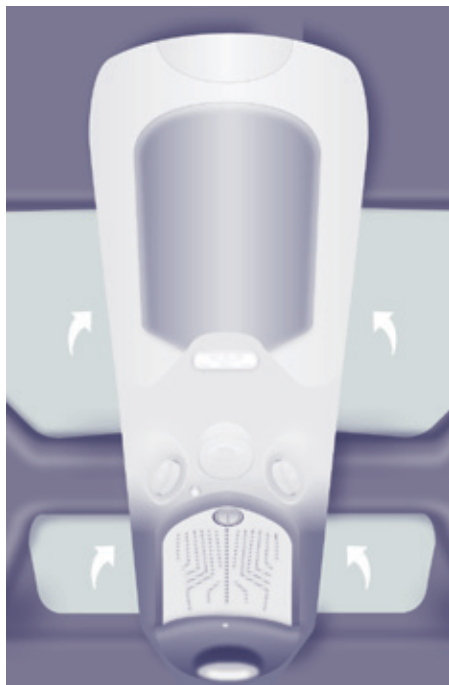

ZENITH ROOF

The multifunction roof extends the overhead storage unit. It consists of the following components:



Storage compartments

Storage compartments are provided on each side of the roof. The maximum weight is 6 Kg.

The translucent base assists with finding objects stored inside.

Do not store objects which could present a risk to the occupants.



Courtesy lamp

The operation of the courtesy lamp is identical to that of the front courtesy lamp.

+ Refer to the "Comfort and Safety" section of chapter 3, "Courtesy lamps" part.

Practical information



From inside


Rear box

This roof box can be accessed from the rear seats and the boot. From the rear seats, slide the flaps to open.



From outside

From the boot, place your thumb on the recess then pull the handle to open.

 Open carefully to prevent objects stored in this interior roof box from falling out.

The maximum authorised weight is 10 Kg.



Vents

A 3-position control allows you to adjust the air flow through the vents. The vents are also fitted with a scented air freshener.



SCENTED AIR FRESHENER

The scented air freshener diffuses a fragrance in the passenger compartment from the roof console vents.

Adjusting the flow

Turn the chromed button to adjust the diffusion:



- to the left to decrease,
- to the right to increase.

To stop the diffusion, turn the chromed button fully to the left.



Removing the scented air freshener

- Press the button down while turning it a quarter of a turn to the left to the stop.
- Remove the scented air freshener from the roof console.
- Replace the cartridge.

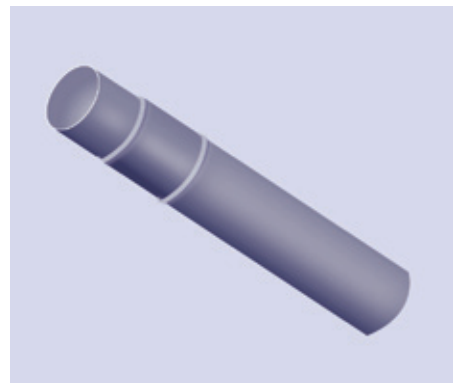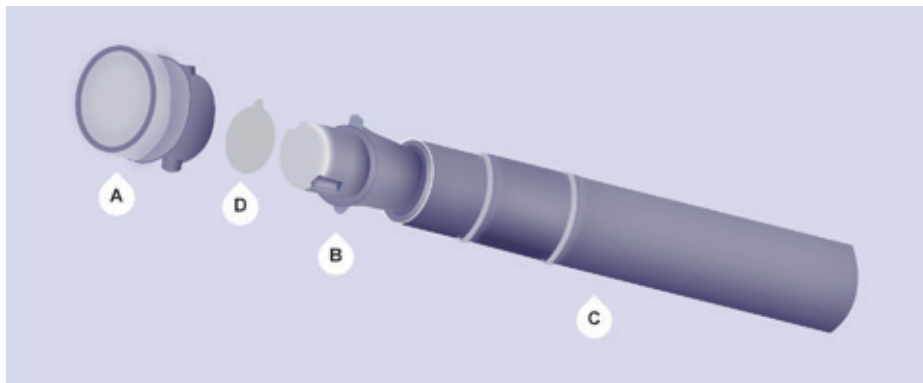

Replacing a cartridge

The scented air freshener refill consists of a cartridge **B** and its sealing case **C**.

- Remove the protective film **D**.
- Place the head of the cartridge **B** on the button **A** of the scented air freshener.
- Turn it a quarter of a turn to lock it on the button and remove the case.
- Insert the scented air freshener in its location.

You can change the cartridges at any time and store cartridges which have already been started in their original case.

The scented air freshener button **A** is independent of the cartridge.

The cartridges are supplied without the button **A**.

The scented air freshener button **A** can only be fixed on the multifunction roof console with a cartridge.

Therefore, always retain button **A** and a cartridge.

The cartridges are available from PEUGEOT dealers.

Inserting the scented air freshener

After fitting or changing the cartridge:

- Put the scented air freshener back in place in its location.
- Turn it a quarter of a turn to the right.


Good practice

As a safety precaution, only use the cartridges provided for this purpose. Do not dismantle the cartridges.

Keep the cartridge sealing cases which are used as packaging when the cartridges are not in use.

Never try to refill the cartridges with fragrances other than those recommended by the PEUGEOT network.

Keep out of reach of children and animals. Avoid contact with the skin and eyes. If swallowed, consult a doctor and show him the packaging or product label.

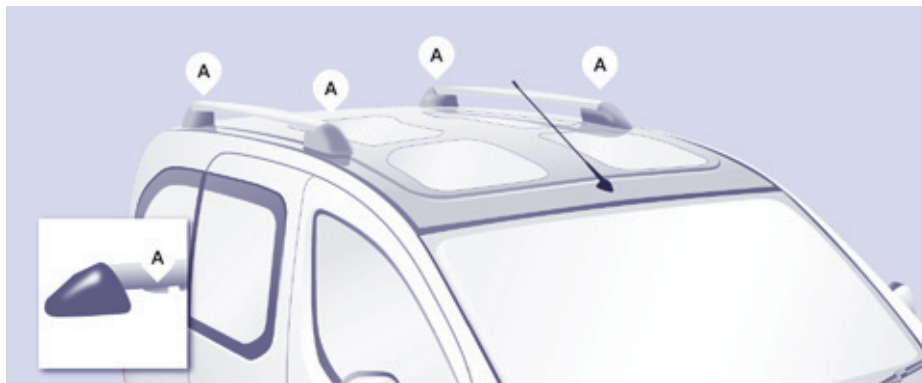

ZENITH ROOF BARS

These two longitudinal Zenith roof bars can be removed.


The maximum authorised weight on each bar is 35 kg.

Recommendations for loading on the roof:

- Open the protective covers.
- Use the screwdriver (stored in the tool kit under the right-hand seat) to remove the 4 bolts.
- Turn the bars 90° placing the hollow parts towards the front.
- Tighten the 4 bolts.
- Close the protective covers.
- Use the strap passages **A** only to secure the load firmly.



In all cases, the load must rest on the non-slip bands provided for this purpose and must not touch the roof or the glazing of the roof.

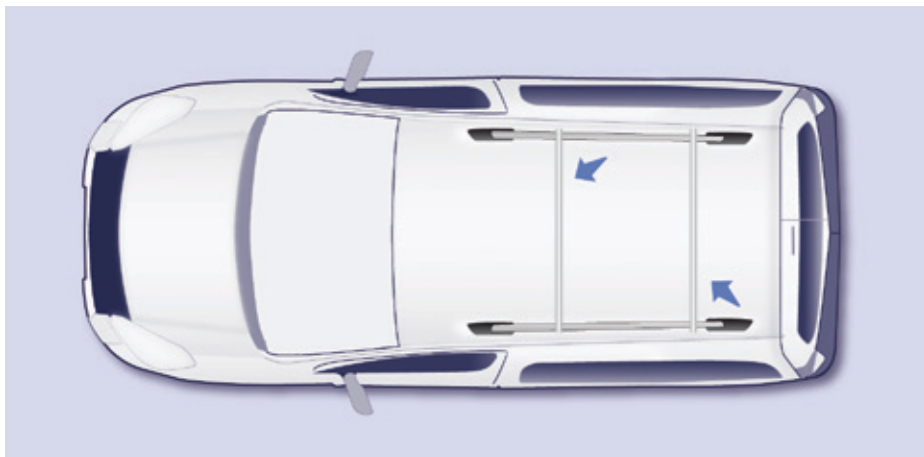

ROOF BARS

If you install transverse bars on these bars, refer to the weight values indicated by the manufacturer but do not exceed 75 Kg.



Front courtesy lamp



Rear courtesy lamp



Front individual reading lamps

COURTESY LAMPS

Automatic switching on/off

The front courtesy lamp comes on when the key is removed from the ignition, when the vehicle is unlocked, when one of the front doors is opened and for location of the vehicle using the remote control.

It goes off gradually after the ignition is switched on and when the vehicle is locked.



Permanently on, ignition on.



Front seats: comes on when one of the front doors is opened.



Rear seats: comes on when one of the rear doors is opened.

If the doors remain open for a few minutes, the courtesy lamps go off.




Permanently off.



These are switched on and off by means of a manual switch, with the ignition on.

Practical information

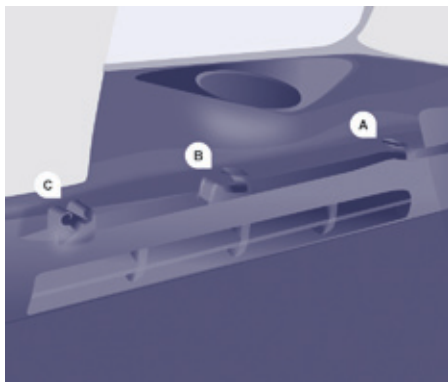


LOAD SPACE COVER (5 SEAT VERSION)

This rigid shelf conceals the objects stored in the boot.

Folding

From the boot, fold the half-shelf, raising it to detach it from the notch **C**.

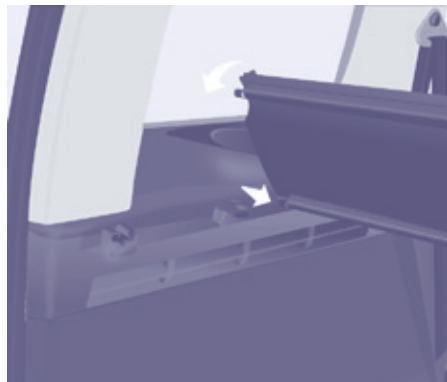

Removing

Fold the load space cover.
Detach it from the notches **A** and **B** pulling it towards you.
Raise it and remove the assembly.

Refitting

Place the load space cover in front of **A** and **B**.
Push it forwards to insert the lugs in the notches.
Unfold and clip into the notches **C**.



Storing (according to version)

A location is provided in the back of the rear seats to accommodate the load space cover folded onto itself.

Slide it vertically between the side guides located at mid seat back height.
Insert the hinge first, with the free flaps turned upwards.

This rigid load space cover can form a shelf. However, for safety reasons, do not place objects on it which could become dangerous projectiles in the event of sharp braking or rear impact.



12 Volt socket (120 W Max)

It is advisable to limit the use of this socket to avoid discharging the battery.



Stowing rings

Use these rings to secure loads on the floor.




Protective net

Open the cover located in the hook support.

Fix the top of the net in the notches, having first turned the bar 1/4 of a turn. Ensure that the end of the bar engages correctly in the metal part of its location.

Fix the straps in the locations provided on the floor.

Tighten the net using the straps.

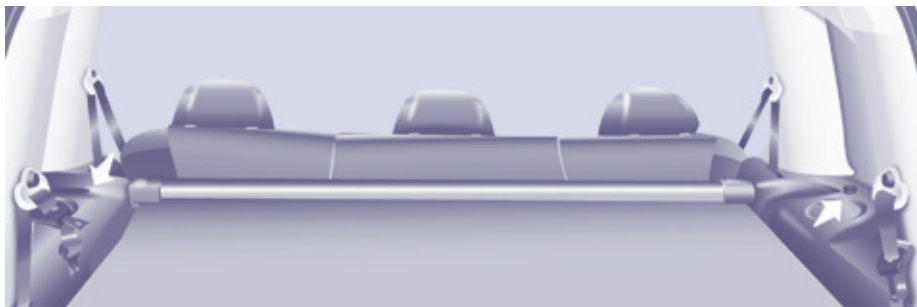

REAR FITTINGS (7 SEAT VERSION)

Cup holder

Any liquid carried in a cup (mug or other) on board which could spill, presents a risk.
Take care.

12 volt socket (120 W max)

It is advisable to limit the use of this socket to avoid discharging the battery.



Stowing rings

Use the stowing rings on the floor to secure and retain your loads firmly.
The seat belt anchorages must not be used for this purpose.



It is recommended that the load is immobilised by securing it firmly using the stowing rings on the floor.



Seat belts

Ensure that the centre seat belt has reeled in correctly to its strengthener on the roof.


Prevent the row 3 seat belt buckles from knocking by raising them as close as possible to the anchorages in the roof.

The seat belt buckle attachment rings on each side of the boot must not be used to retain loads.




Storage flaps

Raise the corresponding flap.

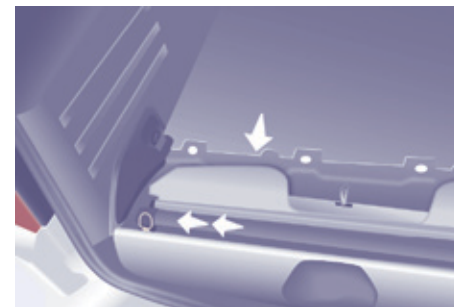

Next to the boot sill, the recess is intended to receive the roller tube containing the load space cover.

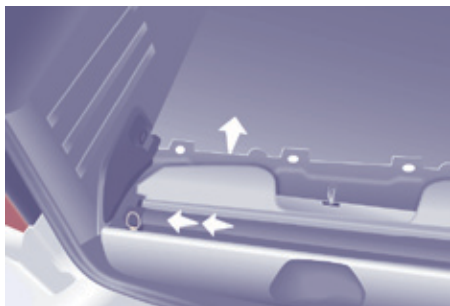

LOAD SPACE SCREEN, LOAD SPACE COVER

The load space screen is a load space cover of the blind type with roller. Take care not to place heavy objects on the load space cover when unrolled.


To install it

Place the row 3 seats in the fully folded position.

Raise the storage flap at the boot sill.

Take hold of the roller in the centre and compress it towards the left-hand pillar.

Raise the assembly.

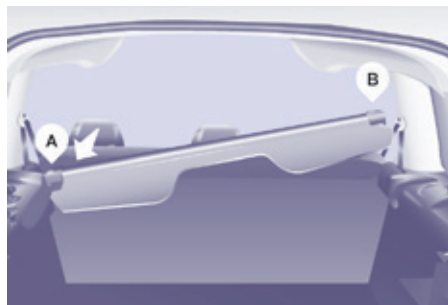

Position the load space screen so as to present the rear load space cover flaps towards you.

Engage the left-hand lug of the roller in the support **A**.



Compress then place the right-hand lug facing the support **B**.


Release to engage the roller in its support.

Unroll the load space cover to the rear side pillars.

Engage the ends in the rear notches to keep it taut.

i The roller is fitted with three flaps permitting concealment of the boot, whether the row 2 seats are in the normal position or the comfort position.

Each flap has two clips which are hooked on the base of each head restraint.

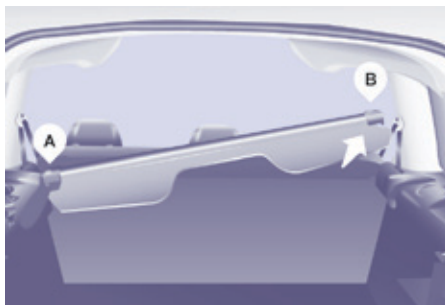

To remove it



From the boot, pull the load space cover towards you to release it from the side pillars.

Guide the load space cover as it rolls up.

Remove the clips of the three flaps from the base of each row 2 head restraint.

Compress the roller to the left to remove it from the support **B**.

Raise it and pivot it forwards.

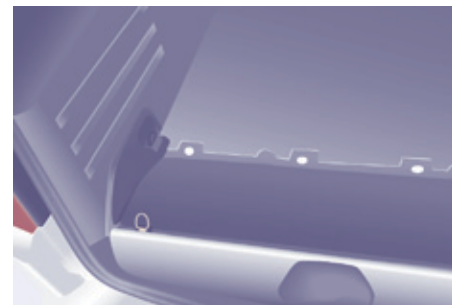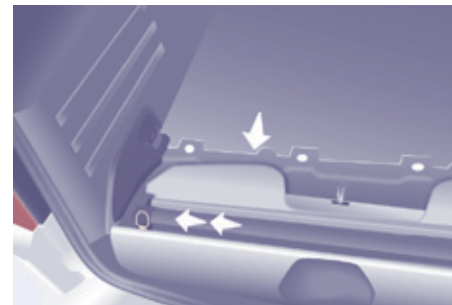

To store it

Store it in the recess at the boot sill, with the two rear flaps uppermost.

First, compress the load space screen to the left.

Release.

Arrange the two flaps and close the storage flap.



MIRRORS

Manual door mirrors

Move the lever in all four directions to adjust.

When the vehicle is parked, the door mirrors can be folded back manually. The mirrors are not equipped with automatic heating.



Electric door mirrors

- Move the control to the right or to the left to select the corresponding mirror.
- Move the control in all four directions to adjust.
- Return the control to the central position.



Heated mirrors

The electric mirrors can be heated.



Press the heated rear screen button.

Electric folding / unfolding

The mirrors can be folded or unfolded electrically from the inside, with the vehicle parked and the ignition on:

- Place the control in the central position.
- Turn the control downwards.

Forced folding

If the mirror casing has come out of its initial location, with the vehicle stationary reposition the mirror casing manually or use the electric folding control.



Manual rear view mirror

The rear view mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.

Areas for toll cards / car park tickets

The athermic windscreen has two non-reflective zones located either side of the base of the interior mirror.

They are intended for affixing toll cards and/or car park tickets.



SURVEILLANCE MIRROR

This mirror, placed on top of the central mirror, enables the driver or front passenger to observe all the rear seats.

Fitted on its own ball joint, it's manual adjustment is simple and provides a view of the rear interior of the vehicle. It can also be adjusted for improved visibility during manoeuvres or when overtaking.



REAR WINDOWS

To partially open the rear windows, tilt the lever and push it fully to lock the windows in the open position.



ELECTRIC WINDOWS

1. Driver's electric window control
 2. Passenger electric window control
- There are two operating modes:

Manual mode

Press or pull the control, without passing the point of resistance. The window stops when you release the control.

One-touch mode

Press or pull the control, beyond the point of resistance. The window opens or closes fully when the control is released. Pressing the control again stops the movement of the window.

The electrical functions of the electric windows are deactivated:

- approximately 45 seconds after the ignition is switched off,
- after one of the front doors is opened, if the ignition is off.

Safety anti-pinch

When the window rises and meets an obstacle, it stops and partially lowers.

Reinitialisation

Following reconnection of the battery, or in the event of a malfunction, the safety anti-pinch function must be reinitialised.

Lower the window fully, then raise it, it will rise in steps of a few centimetres each time the control is pressed. Repeat the operation until the window is fully closed.

Continue to press the control for at least one second after the window closed position has been reached.

The safety anti-pinch does not operate during these operations.

Good practice


If the electric windows meet an obstacle during operation, you must reverse the movement of the window. To do this, press the control concerned.

When the driver operates the passenger electric window controls, they must ensure that no one is preventing correct closing of the windows.

The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

Following several consecutive closing/opening operations of the electric window control, a protection system is triggered which only authorises closing of the window. After closing, wait approximately 40 minutes. Once this time has elapsed, the control becomes operational again.

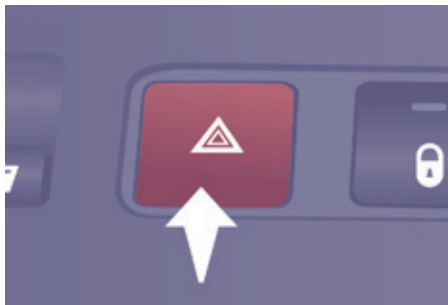

DRIVING SAFELY

HAZARD WARNING LAMPS

Press this button, the direction indicators flash.

They can operate with the ignition off.

The hazard warning lamps should only be used in dangerous situations, when stopping in an emergency or when driving in unusual conditions.

Automatic operation of hazard warning lamps

When braking in an emergency, depending on the force of deceleration, the hazard warning lamps come on automatically. They switch off automatically the first time you accelerate.

It is also possible to switch them off by pressing the switch on the dashboard.

HORN

Press the centre of the steering wheel.



PARKING BRAKE

Applying

Pull the parking brake lever up to immobilise your vehicle.

Check that the parking brake is applied firmly before leaving the vehicle.



If the parking brake is still on or has not been released properly, this is indicated by this warning lamp which comes on on the instrument panel.

When parking on a slope, direct your wheels towards the pavement and pull the parking brake lever up.

There is no advantage in engaging a gear after parking the vehicle, particularly if the vehicle is loaded.

Pull on the parking brake lever, **only with the vehicle stationary**.

In the exceptional case of use of the parking brake when the vehicle is moving, apply the brake by pulling gently to avoid locking the rear wheels (risk of skidding).

Releasing

Pull the lever and press the button to lower the parking brake lever.

Parking sensors



REAR PARKING SENSORS


The audible and/or visual rear parking sensor system consists of four proximity sensors, installed in the rear bumper. The sensors detect any obstacle which enters the field: person, vehicle, tree, fence, behind the vehicle during the manoeuvre.

Certain objects detected at the beginning of the manoeuvre will no longer be detected at the end of the manoeuvre due to the blind spots between and below the sensors.
Examples: stake, roadworks cone or pavement post.

Engage reverse gear

An audible signal confirms the activation of the system by engaging reverse gear.


The proximity information is indicated by an audible signal which becomes more rapid as the vehicle approaches the obstacle. When the distance between the rear of the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous.

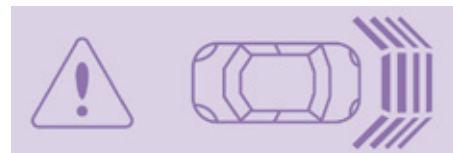

Display in the screen

Stop the assistance

Change to neutral.

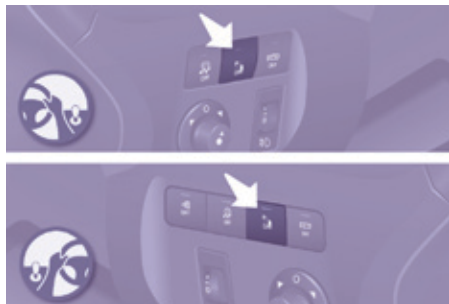

Activation / Deactivation



You can activate or deactivate the system by pressing this button.

The activation or deactivation of the system is stored when the vehicle stops.

Malfunction

In the event of a malfunction, when reverse gear is engaged the LED in the button comes on, accompanied by an audible signal and a message in the screen. Contact a PEUGEOT dealer or a qualified workshop.

Good practice

In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow.

The system will be deactivated automatically if a trailer is being towed or if a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by PEUGEOT).

The parking assistance cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

ANTI-LOCK BRAKING SYSTEM (ABS - EBFD)

The ABS and EBFD (electronic brake force distribution) systems improve the stability and manoeuvrability of your vehicle on braking, in particular on poor or slippery surfaces.

The ABS prevents locking of the wheels, the EBFD provides control of the braking pressure wheel by wheel.

Good practice

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock. It does not reduce the braking distance.

On very slippery surfaces (ice, oil, etc...) the ABS may increase the braking distance. When braking in an emergency, do not hesitate to press the brake pedal firmly, without releasing the pressure, even on a slippery surface, you will then be able to continue to manoeuvre the vehicle to avoid an obstacle.

Normal operation of the ABS may be felt by slight vibration of the brake pedal.

When changing wheels (tyres and rims), ensure that these are recommended by PEUGEOT.



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, it indicates a malfunction of the ABS which could result in a loss of control of the vehicle on braking.



If this warning lamp comes on, together with the brake and STOP warning lamps, accompanied by an audible signal and a message in the screen, it indicates a malfunction of the electronic brake force distribution which could result in a loss of control of the vehicle on braking.

Stop as soon as it is safe to do so.

In both cases, contact a PEUGEOT dealer or a qualified workshop.

EMERGENCY BRAKING ASSISTANCE SYSTEM (EBA)

In an emergency, this system enables the optimum braking pressure to be reached more quickly, press the pedal firmly without releasing it.

It is triggered by the speed at which the brake pedal is activated.

This alters the resistance of the brake pedal under your foot.

To prolong the operation of the emergency braking assistance system: keep your foot on the brake pedal.



ANTI-SLIP REGULATION (ASR) AND DYNAMIC STABILITY CONTROL (DSC)

These systems are linked and complement the ABS.

The ASR system is very useful for maintaining optimum drive and avoiding losses of control of the vehicle on acceleration.

The system optimises drive to prevent the wheels skidding, by acting on the brakes of the drive wheels and on the engine. It also allows the directional stability of the vehicle to be improved on acceleration.

Use the DSC to hold your course without attempting to countersteer.

If there is a variation between the trajectory followed by the vehicle and that required by the driver, the DSC system automatically acts on the engine and the brake of one or more wheels, in order to put the vehicle back on course.

Operation of the ASR and DSC systems



The LED flashes when the ASR or DSC is triggered.

Deactivating the ASR/DSC systems

In certain exceptional conditions (starting the vehicle when stuck in mud or snow, or on loose ground...), it could prove useful to deactivate the ASR and DSC systems to make the wheels spin and regain grip.



- Press the button or turn the dial to the DSC OFF position (depending on model).
- The warning lamp comes on: the ASR and DSC systems no longer come into play.

They engage again:

- automatically above 30 mph (50 km/h),



- manually by pressing the button again or by turning the dial to this position (depending on model).

Operating check



When a malfunction of the systems occurs, the warning lamp comes on, accompanied by an audible signal and a message in the screen.

Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

The warning lamp may also come on if the tyres are under-inflated. Check the pressure of each tyre.

Good practice

The ASR/DSC systems offer increased safety during normal driving, but should not incite the driver to take risks or to drive at high speed.

The operation of these systems is ensured if the recommendations of the manufacturer regarding the wheels (tyres and rims), the braking components, the electronic components and the fitting and repair procedures within the PEUGEOT network are observed.

After an impact, have these systems checked by a PEUGEOT dealer or a qualified workshop.



"GRIP CONTROL"

On snow, mud and sand, traction control is obtained by a compromise between safety, grip and traction, which is associated with the Michelin® Latitude Tour HP M+S tyres.

It adapts to allows most conditions of poor grip to be accommodated.

The accelerator pedal must be pressed enough for there to be adequate engine power to manage the various parameters in the best way.

Correct use

Your vehicle is designed principally to drive on tarmac roads but it allows you to drive on other less passable terrain occasionally.

However, particularly when your vehicle is heavily laden, it does not permit off-road activities such as:

- crossing and driving on ground which could damage the underbody or tear off components (fuel pipe, fuel cooler, ...), particularly by obstacles or stones,
- driving on ground with steep gradients and poor grip,
- crossing a stream.



This **DSC** mode is calibrated for a low level of skidding, based on different conditions of grip encountered on the road.

When the ignition is switched off, the system returns automatically to DSC mode.



This **DSC OFF** mode is only suitable for specific conditions encountered when moving off or at low speed.

Above 30 mph (50 km/h) the system returns to DSC mode automatically.



This **snow** mode allows the vehicle to adapt its strategy to the conditions of grip encountered for each of the two front wheels, on moving off.

When moving, the system optimises wheelspin to provide the best acceleration possible for the grip available.



This **off-road** mode (mud, wet grass...) allows, when moving off, considerable wheelspin on the wheel with the least grip to favour clearing of the mud and regain "grip". At the same time, the wheel with the most grip is controlled in such a way as to transmit as much torque as possible. When moving, the system optimises wheelspin to meet the driver's requirements as fully as possible.



This **sand** mode allows a little wheelspin on the two driving wheels at the same time to allow the vehicle to move forward and reduces the risk of getting stuck in the sand. Do not use the other modes on sand as the vehicle may become stuck.

Seat belts



SEAT BELTS


Height adjustment

Squeeze the control with the return and slide the assembly on the driver's seat side and on the individual passenger seat side.

Fastening

Pull the strap, then insert the tongue into the buckle.

Check that the seat belt is fastened correctly by pulling the strap.

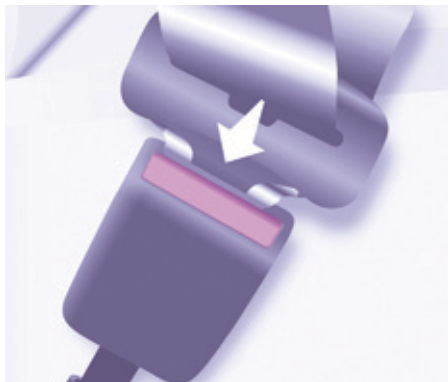

Unfastening

Press the red button.

Driver's seat belt not fastened warning lamp



When the vehicle is started, this warning lamp comes on if the driver has not fastened their seat belt.

Good practice

The driver must ensure that passengers use the seat belts correctly and that they are all strapped in securely before moving off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

The seat belts are fitted with an inertia reel which automatically adjusts the length of the strap to your size.

Do not use accessories (clothes pegs, clips, safety pins, etc.) which allow the seat belt straps to fit loosely.

Ensure that the seat belt has reeled in correctly after use.

After folding or moving a seat or a rear bench seat, ensure that the seat belt has reeled in correctly and that the buckle is ready to accommodate the tongue.

Depending on the nature and seriousness of any impact, the pretensioning device may be deployed before and independently of inflation of the airbags. It instantly tightens the seat belts against the body of the occupants.

Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

The force limiter reduces the pressure of the seat belt against the body of the occupants.

The pretensioning seat belts are active when the ignition is switched on.

The inertia reels are fitted with a device which automatically locks the strap in the event of a collision or emergency braking or if the vehicle rolls over.

You can unfasten the seat belt by pressing the red button on the buckle. Guide the seat belt after unfastening.

The airbag warning lamp comes on if the pretensioners are deployed. Contact a PEUGEOT dealer or a qualified workshop.

In order to be effective, a seat belt must:

- restrain one person only,
- must not be twisted, check by pulling in front of you with an even movement,
- be tightened as close to the body as possible.

The upper part of the seat belt should be positioned in the hollow of the shoulder.

The lap part should be placed as low as possible on the pelvis.

Do not invert the seat belt buckles as they will not fulfil their role completely. If the seats are fitted with armrests, the lap part of the seat belt should always pass under the armrest.

Check that the seat belt is fastened correctly by pulling the strap firmly.

Recommendations for children:

- use a suitable child seat if the passenger is less than 12 years old or shorter than one metre fifty,
- never allow a child to travel on your lap, even with the seat belt fastened.



For more information on child seats, refer to the "Children on board" section of chapter 4.

In accordance with current safety regulations, your PEUGEOT dealer can guarantee all work or any checks, from testing to maintenance, on your seat belt equipment.

Have the seat belts checked regularly (even after a minor impact) by a PEUGEOT dealer or a qualified workshop: they must not show any signs of wear, cutting or fraying and they must not be converted or modified.



Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

Front seat belts

The front seats are fitted with pretensioners and force limiters.

Rear seat belts (5 seat version)

The rear seats are fitted with three-point inertia reel seat belts.

Seat belts



Rear seat belts (7 seat version)

In row 2

The three seats are fitted with three-point inertia reel seat belts.

When folding the side seats or the seat backs to the table position, avoid trapping the strap of the centre seat belt.

When handling the side seats (removing/installing) or when accessing row 3, avoid hooking the centre seat belt.

Ensure that the centre seat belt is rolled up correctly in its strengthener on the roof.



In row 3

The two seats are fitted with three-point inertia reel seat belts.


Do not attach the seat belts to the stowing rings marked with a red cross, represented on the label.

Take care to hook the seat belts correctly on the rings provided for this purpose.



The row 3 seat belts which are not in use can be stored to clear the load space and make use of the load space cover easier.

Hook the snap hook in the location provided on the rear pillar trim.

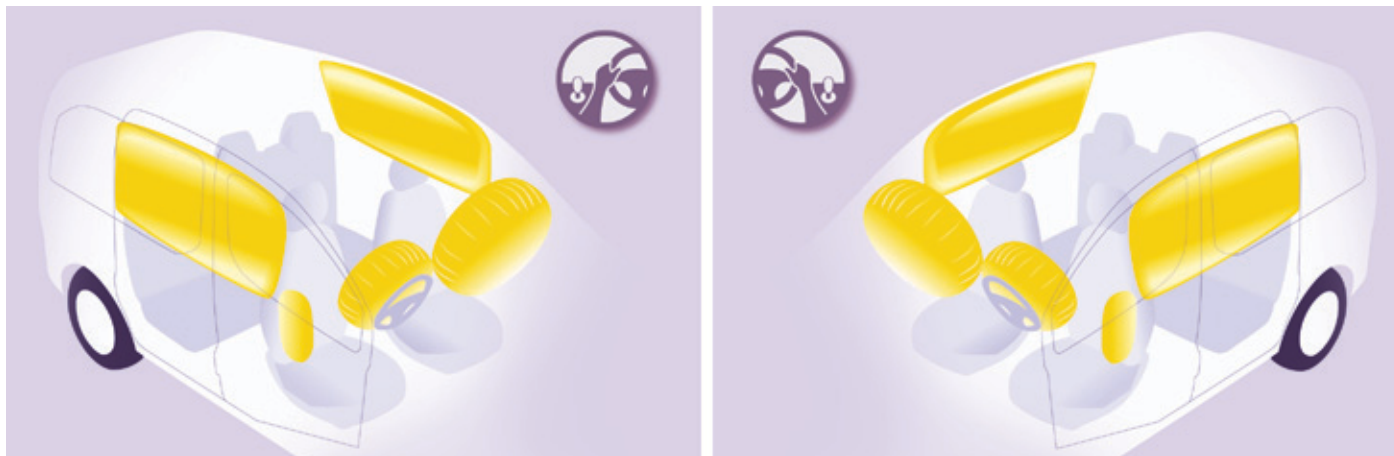

AIRBAGS

The airbags have been designed to maximise the safety of the occupants in the event of a serious collision; they work in conjunction with the force limiting seat belts.

In the event of a serious collision, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the airbags inflate instantly and contribute towards better protecting the occupants of the vehicle. Immediately after the impact, the airbags deflate rapidly, so that they do not hinder the visibility of the occupants nor their possible exit from the vehicle.

- in the event of a minor or rear impact and in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to contribute towards your protection in these situations.

The seriousness of the collision depends on the nature of the obstacle and the speed of the vehicle at the moment of impact.

i Airbags only operate when the ignition is switched on.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not operate.

The deployment of an airbag or airbags is accompanied by a slight discharge of smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.



+ It is imperative that the passenger's airbag is deactivated if a child seat is installed facing rearwards. Refer to the "Children on board" section of chapter 4.

Good practice

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hinder the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel at a PEUGEOT dealer or a qualified workshop.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. In fact, the bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Lateral airbags

Only put recommended covers on the seats. These will not hinder inflation of the lateral airbags. Contact a PEUGEOT dealer or a qualified workshop.

Do not fix or attach anything to the seat backs. This could cause injury to the chest or arms when the lateral airbag inflates.

Do not sit with the upper part of the body any nearer to the door than necessary.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Do not allow passengers to place their feet on the dashboard, they risk serious injury if the airbag is deployed.

Smoke as little as possible as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.



Lateral airbags


This is a system which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each lateral airbag is fitted in the front seat backrest frame, on the door side.

Deployment


It is deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the front occupant of the vehicle and the corresponding door trim panel.

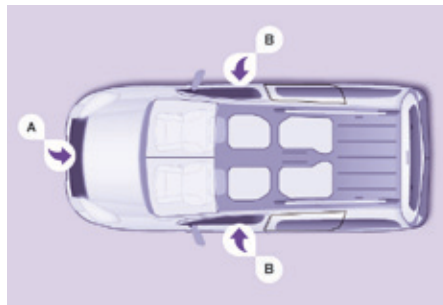

Impact detection zones

- A.** Front impact zone.
- B.** Side impact zone.

 In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.

Curtain airbags

This is a system which protects the driver and passengers (with the exception of the centre seat of row 2) in the event of a serious side impact in order to limit the risk of head injuries.


Each curtain airbag is incorporated in the pillars and the upper part of the passenger compartment.

Activation

It is triggered at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

Airbags

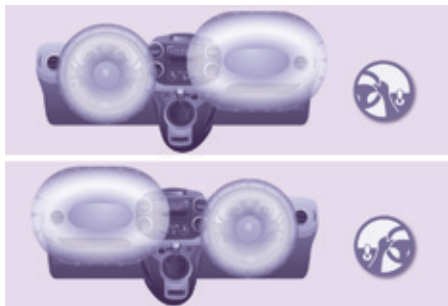

Front airbags

The front airbags are fitted in the centre of the steering wheel for the driver and in the dashboard for the front passenger.

Deployment

They are deployed simultaneously, unless the passenger's front airbag has been deactivated, in the event of a serious front impact applied to all or part of the front impact zone **A** in the longitudinal centreline of the vehicle on a horizontal plane directed from the front towards the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion their forward movement.



Deactivation

Only the passenger's front airbag can be deactivated:

- **With the ignition switched off**, insert the key into the passenger's airbag deactivation switch,
- turn it to the off **"OFF"** position,
- then remove the key, keeping the switch in the new position.



The airbag warning lamp in the instrument panel is on while the airbag is deactivated.

! To ensure the safety of your child, it is essential to deactivate the passenger's airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured if the airbag were to inflate.

Reactivation

In the **"OFF"** position, the passenger's airbag will not be deployed in the event of an impact.

As soon as the child seat is removed, turn the airbag switch to the **"ON"** position to re-activate the airbag and so ensure the safety of your passenger in the event of an impact.

Front airbag fault



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked.



If the two airbag warning lamps are on continuously, do not install a rear-facing child seat, contact a PEUGEOT dealer or a qualified workshop.

GENERAL POINTS RELATING TO CHILD SEATS

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please follow these precautions:

- all children under the age of 12 or less than one metre fifty tall must travel in approved child seats suited to their weight, on seats fitted with a seat belt or ISOFIX mountings,
- statistically, the safest seats in your vehicle for the transportation of children are the rear seats,
- a child weighing less than 9 kg must travel in the "rearward facing" position both in the front and in the rear,
- the passenger must not travel with a child on their lap.



CHILD SEAT IN THE FRONT

"Rearward facing"

Recommended on the rear seats up to the age of 2.

When a "rearward facing" child seat is installed on the front passenger seat, it is essential that the passenger airbag is deactivated. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.



"Forward facing"

Recommended on the rear seats over the age of 2.

When a "forward facing" child seat is installed on the front passenger seat, leave the passenger airbag activated.

i The rules for carrying children are specific to each country. Consult the current legislation in your country.

Please consult the list of seats approved in your country. The Isofix mountings, the rear seats, the passenger airbag and the deactivation of this airbag depend on the version sold.

Child safety



+ Refer to chapter 4, "Airbags" section.

i The child seats function and the passenger's airbag deactivation function are common to the entire PEUGEOT range.

If the passenger's airbag is not deactivated, the installation of a "rearward facing" child seat in the front is strictly prohibited.



Passenger airbag OFF

Label present on both sides of the passenger's sun visor

Child safety

ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forward facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger's airbag when a "rearward facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child Lock".

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds to the rear windows.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

CHILD LOCK



This prevents opening of the side doors from the inside.

Manual mode

A label indicates the location of the child lock.

- Open fully past the point of resistance.
- Tilt the lever, located on the rear section of the door.

Electric mode



With the ignition on, press this button. The LED comes on.


Warning: this system is independent of the central locking control.

Always remove the ignition key when leaving the vehicle, even for a short time.

It is advisable to check the activation of the child lock each time the ignition is switched on.

In the event of a serious impact the electric child lock is deactivated automatically.



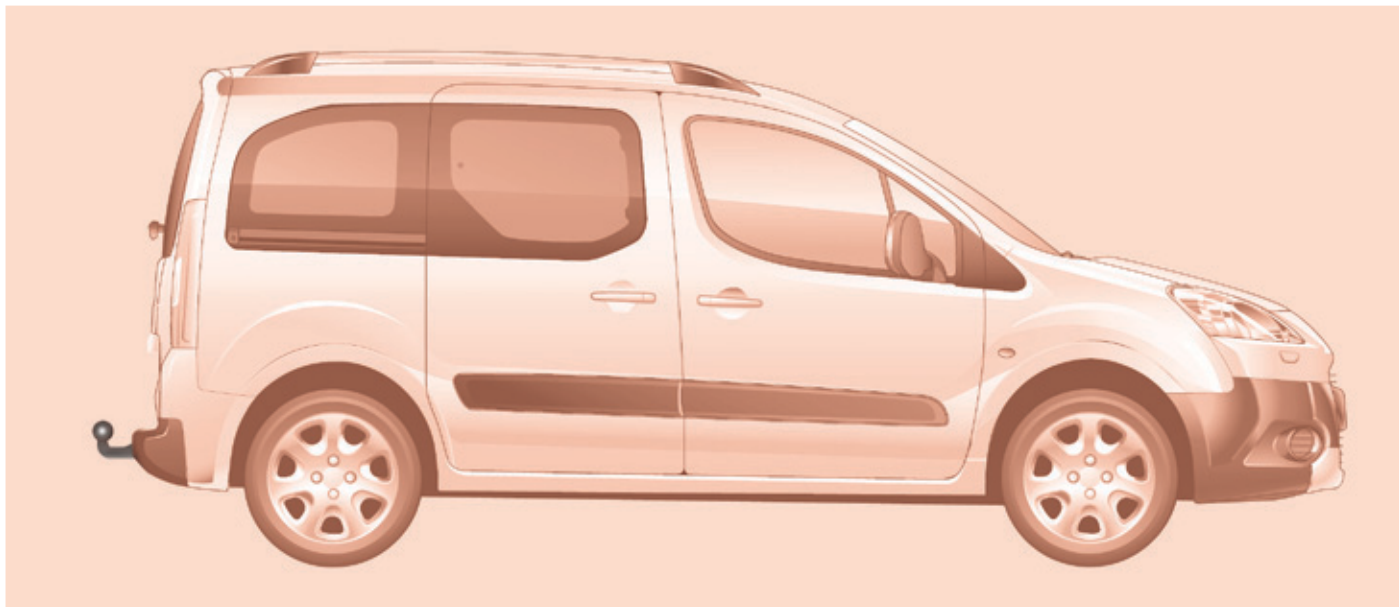

TOWING A TRAILER, CARAVAN, BOAT, ETC...

+ For more information about weights, refer to the administrative documents (registration document, ...) or to the "Weights" section of chapter 8.

Driving advice

A towed vehicle must free wheel: gearbox in neutral.

Distribution of loads

Distribute the load in the trailer so that the heaviest objects are as close as possible to the axle and the nose weight is close to the maximum authorised without, however, exceeding it.

Cooling

Towing a trailer on a slope increases the coolant temperature.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

You should therefore use a high gear to lower the engine speed and reduce your speed.

In all cases, pay attention to the coolant temperature.

Good Practice

In certain cases of particularly arduous use (towing the maximum load up a steep slope in high temperatures), the engine automatically limits its power. In this case, the air conditioning is automatically cut off to save engine power.



If the coolant temperature warning lamp comes on, stop the vehicle and switch off the engine as soon as possible.



See the "Levels" section of chapter 6.



Tyres

Check the tyre pressures of the towing vehicle (see the "Identification markings" section of chapter 8) and of the trailer, observing the recommended pressures.

Brakes

Towing increases the braking distance. Drive at a moderate speed, change down early and brake gradually.

Side wind

Sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

ABS/DSC

The ABS or DSC systems only control the vehicle, not the trailer or caravan.

Rear parking sensors

The parking sensors system does not function while the vehicle is towing.

Towbar

We recommend the use of genuine PEUGEOT towbars and their harnesses, which have been tested and approved from the design stage of your vehicle, and that you entrust the fitting of this equipment to a PEUGEOT dealer.

If this equipment is not fitted by a PEUGEOT dealer, it is imperative that it is fitted using the electrical pre-equipment installed at the rear of the vehicle and in accordance with the manufacturer's instructions.

In accordance with the general instructions a reminder of which has been given above, we draw your attention to the risk associated with fitting a towbar or electrical accessory not recommended by PEUGEOT. Fitting such equipment could result in the failure of your vehicle's electronic system. Please obtain information from the Manufacturer before fitting this type of equipment.

Equipment

OTHER ACCESSORIES

These accessories and parts, having been tested and approved for reliability and safety, are all adapted to your vehicle. A wide range of recommended accessories and genuine parts is available.

A further range is also available, structured around comfort, leisure and maintenance:

Anti-theft alarm, window etching, first aid kit, high visibility vest, front and rear parking sensors, warning triangle, security bolts for alloy wheels, ...

Seat covers compatible with airbags for the front seats, bench seat, rubber mats, carpet mats, snow chains, blinds, tailgate bicycle carrier, ...

To prevent the mat from becoming caught under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never fit one mat on top of another.

Audio equipment, hands-free kit, speakers, CD changer, satellite navigation system, USB box, Video kit, ...

Regardless of the audio and telematic equipment offered on the market, the technical constraints associated with the fitting of equipment of these product groups mean that the special features of the equipment and its compatibility with the capacities of your vehicle's standard equipment must be taken into account. Please ask a PEUGEOT dealer for more information before fitting such equipment.

Maximum weights on bars

- Transverse bars on longitudinal bars: 75 Kg (these bars are not compatible with the Zénith roof).


Installing radiocommunication transmitters

You are advised to contact a PEUGEOT dealer before installing accessory radiocommunication transmitters with external aerial on your vehicle.

The PEUGEOT dealer network will inform you of the specification (frequency band, maximum output power, aerial position, specific conditions of installation) of the transmitters which can be fitted, in accordance with the Motor Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

Front mud flaps, rear mud flaps, 15/17 inch alloy wheels, wheelarch trim, leather steering wheel, ...

Screenwash, interior and exterior cleaning and maintenance products, spare bulbs, ...

 The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. You are advised to contact a dealer to be shown the range of recommended equipment or accessories.

Depending on the country in which the vehicle is sold, it is compulsory to have a high visibility vest, warning triangle and spare bulbs available in the vehicle.

"Active Fleet Data" telematic unit

Connected directly to the heart of the vehicle (multiplexed network: "Full CAN"), the telematic unit, by means of a "ready to use" service, permits the sending in real time of information such as:

- distance travelled,
- distance remaining before the next service,
- warnings and faults (oil level, coolant level, oil temperature, coolant temperature, etc...).

This enables "Fleet" managers to optimise the monitoring and management of their professional vehicles.

Depending on country, contact a PEUGEOT dealer for more information.



OPENING THE BONNET

On the inside

Pull the lever below the dashboard towards you. The bonnet is released.



On the outside

Raise the bonnet slightly by reaching in a flat hand, palm down, to make access to the lever easier.

With this hand, push the safety catch to the left. Raise the bonnet.



Bonnet stay

Secure the stay in its location, identified by a sticker on the right-hand side of the vehicle, to hold the bonnet open.



Before closing the bonnet, put the stay back in its clip without using excessive force.

To close

Lower the bonnet and release it at the end of its travel. Check that the bonnet is secure.

Avoid opening the bonnet in strong winds.

Under the bonnet

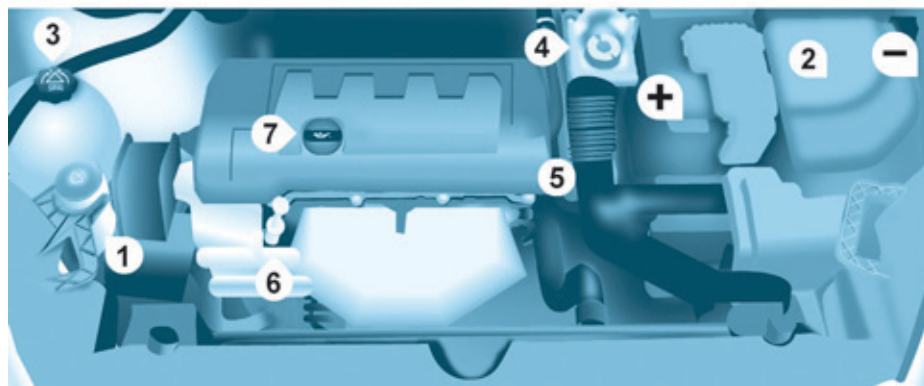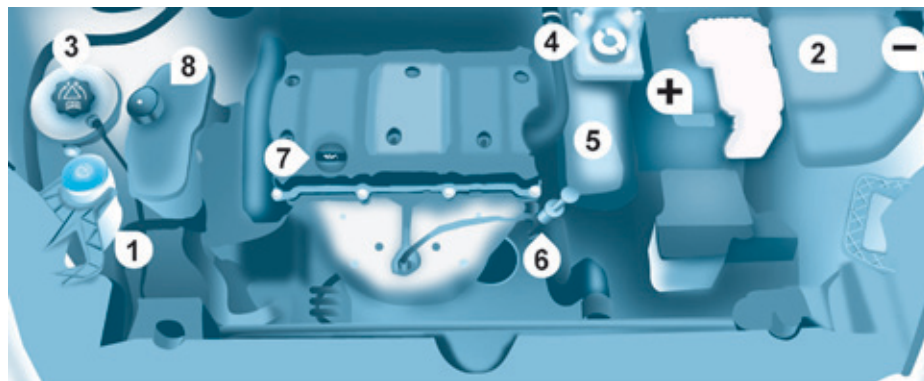


PETROL ENGINE

Take care when working under the bonnet.

1. Screenwash reservoir.
2. Fusebox.
3. Engine coolant header tank.
4. Brake and clutch fluid reservoir.
5. Air filter.
6. Engine oil dipstick.
7. Engine oil filler cap.
8. Power steering fluid reservoir.

i Battery connections:

- + Positive terminal.
- Negative point (earth).

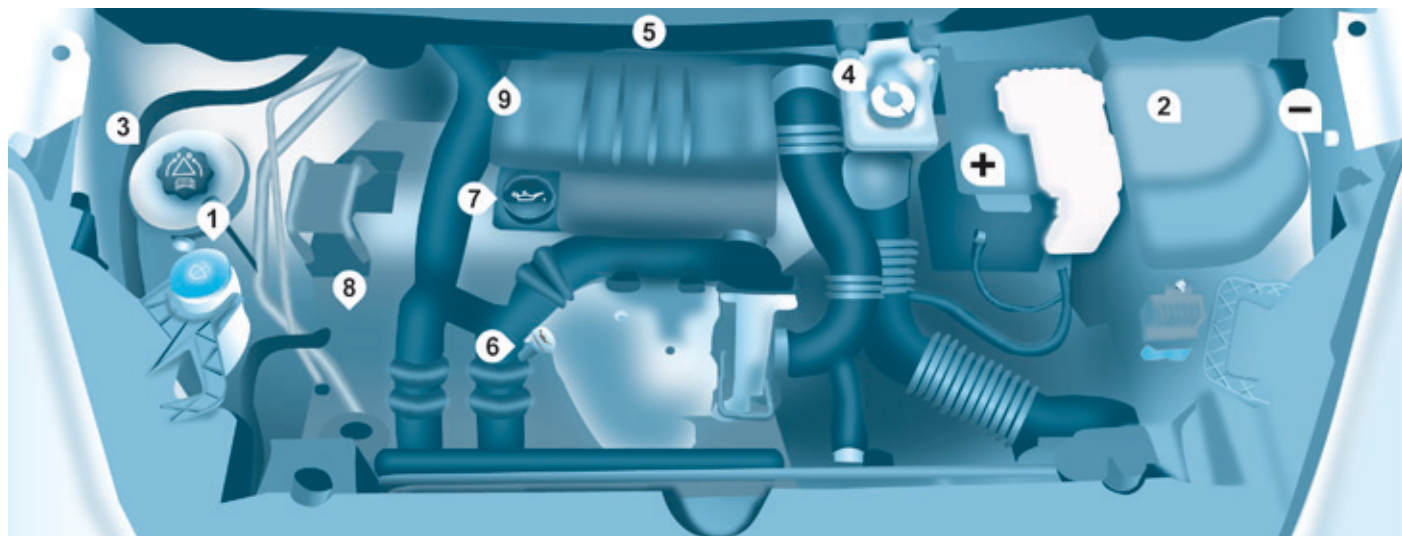

DIESEL ENGINE

Take care when working under the bonnet.

- | | | |
|--------------------------------|--------------------------------------|------------------------------------|
| 1. Screenwash reservoir. | 4. Brake and clutch fluid reservoir. | 7. Engine oil filler cap. |
| 2. Fusebox. | 5. Air filter. | 8. Power steering fluid reservoir. |
| 3. Engine coolant header tank. | 6. Engine oil dipstick. | 9. Priming pump. |

i Battery connections:

- + Positive terminal.
- Negative point (earth).

Levels

LEVELS

i These regular maintenance operations will keep your vehicle in good working order. Ask for advice from a PEUGEOT dealer or refer to the servicing and warranty booklet in the handbook pack.


! If you have to remove / refit the engine style cover, handle it with care to avoid damaging the fixing clips.

Oil level

It is recommended that the oil level be checked every 3 000 miles (5 000 km) and topped up if necessary between oil changes.

Check the level with the vehicle level, engine cold, using the dipstick.

Dipstick

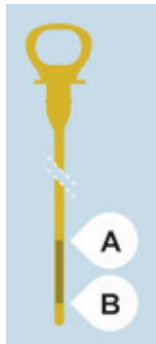

There are two marks on the dipstick:


A = maximum

If you fill past this mark, consult a PEUGEOT dealer or a qualified workshop.

B = minimum

Never allow the level to fall below this mark.

To maintain the reliability of engines and emission control systems, the use of additives in engine oil is prohibited.

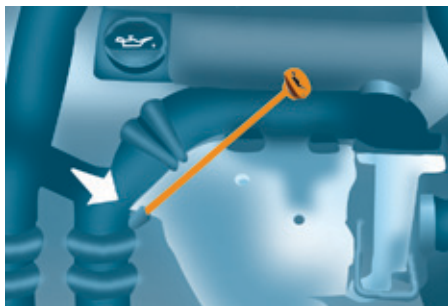

Oil change

This must be carried out at the intervals specified and the viscosity grade of the oil selected must fulfil the requirements in the manufacturer's servicing schedule. Ask for advice from a PEUGEOT dealer.

Remove the dipstick before filling.

Check the level after filling (never exceed the max mark).

Refit the oil filler cap before closing the bonnet.

Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.



Changing the brake fluid

The brake fluid must be changed at the intervals stated, according to the manufacturer's servicing schedule.

Use fluids recommended by the manufacturer, which meet the DOT4 standard.

The level must be between the MIN and MAX marks on the reservoir.

If fluid has to be added frequently, this indicates a fault which must be checked by a PEUGEOT dealer or a qualified workshop as soon as possible.

Warning lamps



Checks using the warning lamps in the instrument panel is described in chapter 2, refer to the "Instruments and controls" section.

Cooling system

Only use the fluid recommended by the manufacturer.

Otherwise, you risk seriously damaging your engine.

When the engine is warm, the temperature of the coolant is controlled by the engine fan. As this fan can operate with the ignition key removed and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.

Slacken the cap by 1/4 of a turn to release the pressure to prevent any risk of scalding. When the pressure has dropped, remove the cap and top up the level with coolant.

If fluid has to be added frequently, this indicates a fault which must be checked by a PEUGEOT dealer as soon as possible.

Topping up

The level must be between the MIN and MAX marks on the expansion bottle. If more than 1 litre of fluid is required to top up the level, have the system checked by a PEUGEOT dealer or a qualified workshop.

Power steering fluid level

The vehicle must be parked on level ground with the engine cold. Unscrew the cap integrated with the gauge and check the level which must be between the MIN and MAX marks.

Screenwash and headlamp wash level

For best quality cleaning and for your safety, we would advise that you use products of the PEUGEOT range.

For optimum cleaning and to avoid freezing, this fluid must not be topped up or replaced with plain water.

Capacity of the screenwash reservoir: approximately 3 litres.

If your vehicle is fitted with headlamp washers, the capacity of the reservoir is 6 litres.



Diesel additive level (Diesel with particle emission filter)

The minimum level of this additive is indicated by lighting of the service warning lamp, accompanied by an audible signal and a message in the screen.

When this occurs with the engine running it is due to the start of saturation of the particle emission filter (exceptionally prolonged urban type driving conditions: low speed, long traffic jams, ...).

In order to regenerate the filter, you are advised to drive at a speed higher than 40 mph (60 km/h) for at least five minutes as soon as possible, when traffic conditions permit (until the message disappears and the service warning lamp goes off).

During regeneration of the particle emission filter, the noise of a relay operating may be heard under the dashboard.

If the message is still displayed and if the service warning lamp remains on, consult a PEUGEOT dealer or a qualified workshop.

Topping up

This additive must be topped up by a PEUGEOT dealer or a qualified workshop without delay.

Waste products

Avoid prolonged contact of used oil with the skin.

Brake fluid is harmful to health and very corrosive.


Do not dispose of used oil, brake fluid or coolant into drains or into the ground but into the containers dedicated to this use at PEUGEOT dealer (France) or an authorised waste disposal site.

Checks

CHECKS

Battery

At the start of winter, have your battery checked by a PEUGEOT dealer or a qualified workshop.

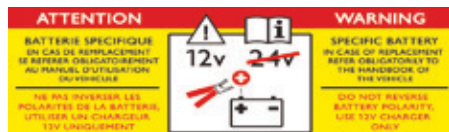

Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances. It may be necessary to check the thickness of the pads, even between services.

Unless there is a leak on the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc / drum wear

For information on checking the brake disc / drum wear, consult a PEUGEOT dealer.

Parking brake

Where the parking brake travel is too great or there is a reduction in the performance of the system, the parking brake should be adjusted, even between services.

Have the system checked by a PEUGEOT dealer or a qualified workshop.



Carbon filter and passenger compartment filter

An access flap allows replacement of the filters.

The carbon filter permits continuous and effective filtering of dust.

If the passenger compartment filter becomes blocked, this may reduce the performance of the air conditioning system and generate unpleasant odours.

We recommend the use of a combined passenger compartment filter. By means of its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanness of the passenger compartment (reduction of allergic symptoms, unpleasant odours and greasy deposits).

Refer to the servicing and warranty booklet for the replacement interval for these components.

Depending on the environment (dusty atmosphere...) and the use of the vehicle (urban driving...), change them twice as often if necessary.

Oil filter

Change the filter regularly in accordance with the servicing schedule.

Particle emission filter (Diesel)

Maintenance of the particle emission filter must be carried out by a PEUGEOT dealer.

On acceleration after the vehicle has been running for a prolonged period at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust. This water vapour does not have any adverse effect on vehicle handling or the environment.

Bleeding water from the Diesel filter



If this warning lamp comes on, bleed the filter. Otherwise bleed regularly each time the engine oil is changed.

To drain the water, unscrew the bleed screw located on the filter.

Operate until all of the water no longer flows in the transparent pipe, then tighten the bleed screw.

HDI engines use advanced technology. All work requires special training, which is assured by a PEUGEOT dealer.

Depending on country of sale.

Manual gearbox

Have the level checked in accordance with the manufacturer's servicing schedule.

i To check the main levels and certain components, in accordance with the manufacturer's servicing schedule, refer to the pages of the warranty and maintenance record which correspond to your vehicle's engine.

! Only use products recommended by PEUGEOT or products of equivalent quality and specification.

In order to optimise the operation of units as important as the braking system, PEUGEOT selects and offers specific products.

In order to avoid damaging the electrical units, high pressure washing to clean the engine compartment is strictly prohibited.

After washing the vehicle dampness, or in winter, ice may form on the brake discs and pads: braking efficiency may be reduced. Make some light brake applications to dry and de-ice the brakes.

Fuel



FILLING WITH FUEL

Low fuel level



When the minimum fuel tank level is reached, this warning light comes on.

You then have **approximately 8 litres** of fuel remaining. Fill up without delay to avoid running out of fuel.

Never risk driving until you run out of fuel as this may damage the emissions control and injection systems.

Filling

The fuel tank must be filled **with the engine off**.

- Open the fuel filler flap.
- Insert the key, then turn it a quarter turn.
- Remove the cap and hook it onto the clip located on the inside of the flap.

A label affixed to the inside of the flap reminds you of the type of fuel to be used.

You must fill with at least 5 litres of fuel for it to be registered by the fuel gauge. When the fuel filler cap is opened, there may be a slight air suction noise. This vacuum is entirely normal and is due to the sealing of the fuel circuit.

When filling the fuel tank, do not continue after the 3rd cut-off of the nozzle. This could cause malfunctions.

The capacity of the fuel tank is approximately 60 litres.

- After filling the fuel tank, lock the cap and close the flap.



When filling with fuel, a mechanical system prevents opening of the left-hand side door. When the fuel filler flap is open, ensure that no one tries to slide this door.

Once the flap has been closed, the sliding side door may jam, push the door to close it then open it.

Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 or E24 type petrol biofuels (containing 10 % or 24 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).

**SP95
E10**

SP98

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a PEUGEOT dealer or a qualified workshop.

The use of any other type of (bio) fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



DIESEL

FUEL CUT-OFF

In a serious collision, a mechanism automatically prevents fuel from reaching the engine.



The flashing of this warning lamp is accompanied by a message in the screen.

Check that there is no odour or leakage of fuel outside the vehicle and re-establish the fuel supply:

- switch off the ignition (STOP position),
- remove the key,
- put the key back in the ignition,
- switch on the ignition and start.

DIESEL PRIMING PUMP


If you should run out of fuel, it is necessary to prime the fuel circuit:

- fill the fuel tank with at least five litres of Diesel,
- squeeze and release the manual priming pump, under the bonnet under the protective cover,
- operate the starter until the engine starts.

 Refer to the "Under the bonnet" section of chapter 6.

Battery

BATTERY

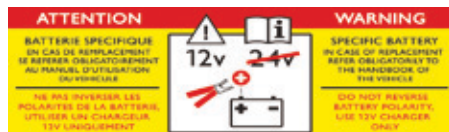

i The presence of this label indicates the use of a 12 V lead-acid battery with special technology and specification, for which the involvement of a PEUGEOT dealer or qualified workshop is required when replacing or disconnecting the battery. Failure to observe this recommendation may cause premature wear of the battery.

After refitting the battery, the Stop & Start system will only be active after several hours depending on the climatic conditions and the state of charge of the battery (up to about 8 hours).

The Stop & Start battery does not have to be disconnected for charging.


To charge the battery using a battery charger

- Disconnect the battery,
- Follow the instructions for use given by the battery charger manufacturer,
- Reconnect starting with the negative (-) terminal,
- Check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

To start the vehicle from another battery

- Connect the red cable to the positive (+) terminals of the two batteries,
- Connect one end of the green or black cable to the negative (-) terminal of the slave battery,
- Connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery,
- Operate the starter, let the engine run,
- Wait for the engine to return to idle, then disconnect the cables.

i It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.

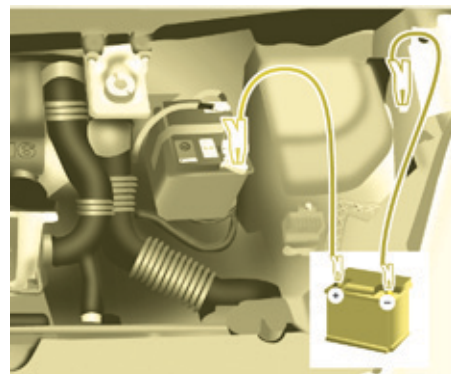

Before disconnecting the battery, you must wait for 2 minutes after switching off the ignition.

Never disconnect a terminal when the engine is running.

Never charge a battery without first disconnecting the terminals.

After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. If problems remain after doing this, please contact a PEUGEOT dealer or a qualified workshop.

After changing bulbs, wait approximately 3 minutes before reconnecting the battery.

ECONOMY MODE

After the engine has stopped, with the key in the ignition position, certain functions (windscreen wiper, electric windows, courtesy lamps, audio equipment, etc.) can only be used for a cumulative duration of thirty minutes, to prevent discharging of the battery.


Once the thirty minutes are over, the active functions are put on standby and the battery warning lamp flashes accompanied by a message in the screen.

To resume the use of these functions immediately, start the engine and let it run for a few minutes.

The time available will then be double the time for which the engine was left running. However, this time will always be between five and thirty minutes.

A flat battery will prevent the engine from starting.

Changing a wheel

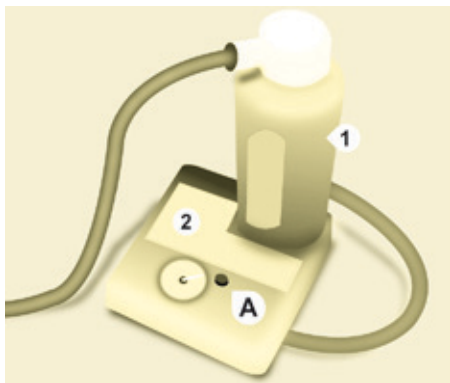

PUNCTURE REPAIR KIT

The kit is located in one of the two storage compartments located under the front seats.

Vehicles supplied with a temporary puncture repair kit do not have a spare wheel or tooling (jack, wheelbrace, ...).

The temporary tyre repair kit consists of a compressor and a bottle (containing a sealant).

Using the kit

1. Tick the deflated wheel on the speed limitation sticker then affix the sticker to the vehicle's steering wheel to remind you that a wheel is in temporary use.
2. Clip the bottle 1 on the compressor 2.
3. Connect the bottle 1 to the valve of the tyre to be repaired.
4. Take care to unwind the compressor pipe before connecting it to the bottle.
5. Connect the power lead to one of the vehicle's 12V sockets.
6. Switch on the compressor by pressing button A until the tyre pressure reaches 2.0 bars. If this pressure cannot be reached, the tyre cannot be repaired.
7. Remove and store the compressor.
8. Drive immediately, for a few miles (kilometres), at reduced speed, to fill the puncture.
9. Adjust the pressure using the compressor in accordance with the recommendation for the vehicle and check that the leak is filled correctly (no further loss of pressure).
10. Drive at reduced speed (50 mph [80 km/h]). The tyre must be examined and repaired by a specialist as soon as possible.

After use, the bottle can be stored in a plastic bag, supplied in the kit, to avoid staining your vehicle with traces of fluid.

! Warning: the bottle of gel contains ethylene-glycol, a product which is harmful if swallowed and which causes irritation to the eyes.

Keep it out of reach of children.

After use, do not discard the bottle into the environment, take it to a PEUGEOT dealer or to an specialised waste disposal site.


Replacement bottles of sealant are available from PEUGEOT dealers.



CHANGING A WHEEL

1. PARKING THE VEHICLE


- The occupants must get out of the vehicle and wait in a safe location.
- If possible, park the vehicle on level, stable and non-slippery ground.
- Apply the parking brake, switch off the ignition and engage first or reverse gear.

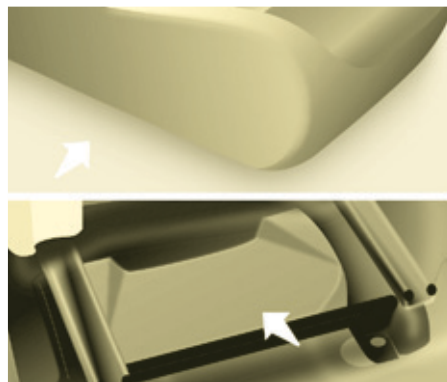

- If available, place a chock under the wheel diagonally opposite the one to be changed.

If the vehicle is fitted with a towbar, it is sometimes necessary to raise the vehicle slightly to make it easier to remove the spare wheel from its carrier.

On certain types of ground and/or if considerable loads are being transported, call a PEUGEOT dealer or a qualified workshop.

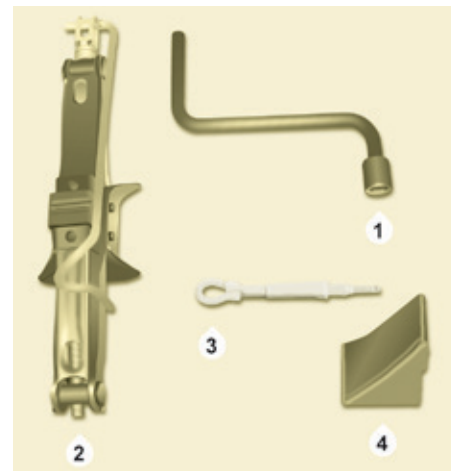


2. TOOLS


- The tools are stowed in a storage compartment located under the left hand front seat. If necessary, move the seat to access the storage compartment from the rear.
- Unscrew the nut then take out the jack and the wheelbrace.

1. Wheelbrace.
2. Jack.
3. Towing eye.
4. Chock.

The jack and the tool kit are specific to your vehicle. Do not use them for other purposes.

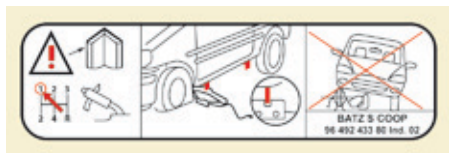

Changing a wheel

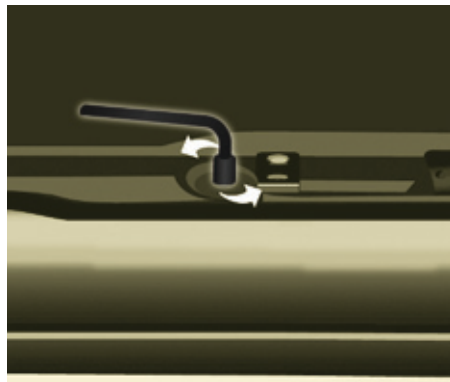



3. SPARE WHEEL

- Open the rear doors to gain access to the spare wheel.
- Unscrew the bolt using the wheelbrace until the carrier is lowered fully.
- Detach the carrier from the hook and place the spare wheel near the wheel to be changed.





4. OPERATING PROCEDURE

- Remove the wheel trim.
- Loosen the wheel bolts and start unscrewing them.
- Place the jack in contact with the locating point provided, the one which is closest to the wheel to be changed. Ensure that the jack is straight and that the base of the jack is fully in contact with the ground.
- Extend the jack to lift the wheel clear of the ground.
- Resume and complete the unscrewing of the wheel bolts.
- Remove the bolts and remove the wheel.

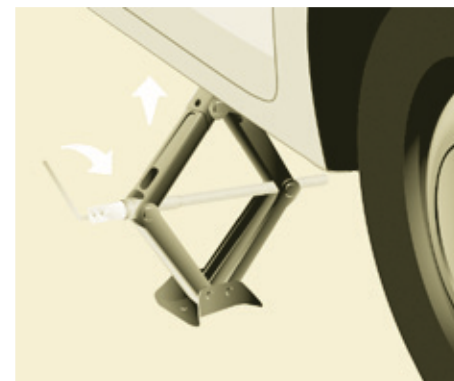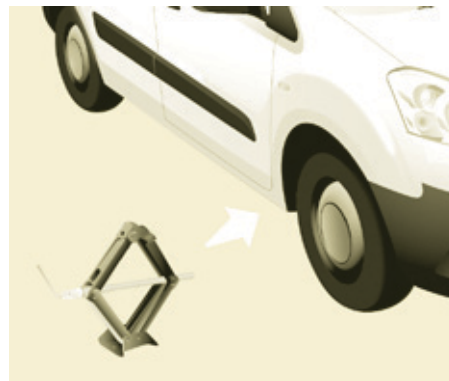

Do not extend the jack until you have started unscrewing the bolts on the wheel to be changed and have placed the chock under the wheel diagonally opposite.

Changing a wheel

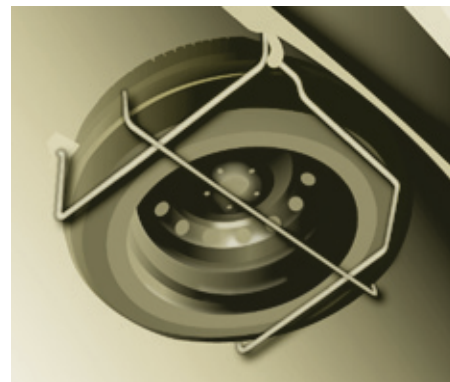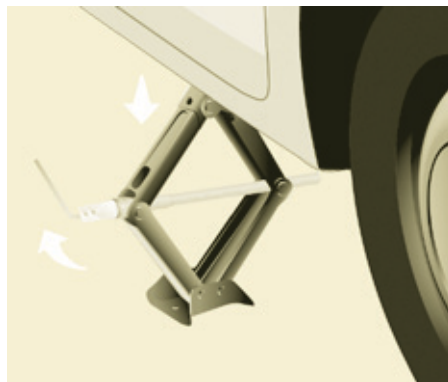

5. FITTING THE SPARE WHEEL

- Position the wheel on the hub and start tightening the bolts by hand.
- Carry out an initial tightening of the bolts using the wheelbrace.
- Lower the vehicle completely by folding the jack, then remove the jack.
- Tighten the bolts again using the wheelbrace, tighten them fully without forcing them.
- Place the wheel to be repaired in the carrier.
- Secure the carrier on the hook then raise the carrier using the bolt and the wheelbrace.

ⓘ Never go underneath a vehicle that is supported only by a jack (use a ramp). Never use a screwdriver in place of the wheelbrace.

6. REFITTING THE REPAIRED WHEEL

The wheel is refitted as described in step 5, not forgetting to refit the wheel trim.

+ Refer to the "Identification markings" section of chapter 8 to locate the tyre label.

+ Refer to the "Instruments and controls" section of chapter 2, "Tyre under-inflation detection" part, for recommendations after changing a wheel fitted with a tyre under-inflation detection sensor.


i The spare wheel is not designed to be used over long distances. Have the tightening of the bolts and the tyre pressure checked by a PEUGEOT dealer or a qualified workshop as soon as possible. Have the original wheel repaired and refitted by a PEUGEOT dealer or a qualified workshop as soon as possible.



REMOVABLE SNOW SCREEN

According to country, the removable snow screen is installed on the lower part of the front bumper to prevent the accumulation of snow at the radiator cooling fan.

i Do not forget to remove the snow screen when the exterior temperature is higher than 10°C (no risk of snowfall) and when towing.

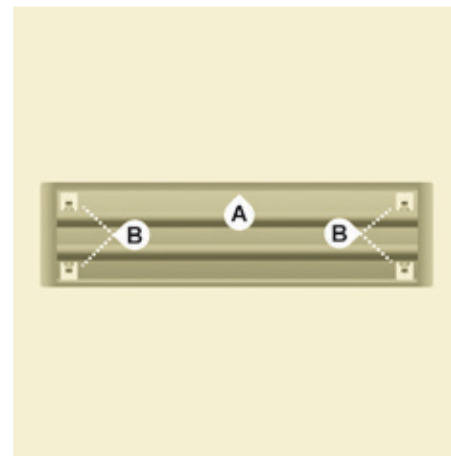

FITTING

- Offer up the snow screen facing its centring pin **A** on the front bumper.
- Put it in place by pressing at each clip **B** located in the four corners.

REMOVAL

- Pass a screwdriver into the hole located near each of the clips.
- Use the screwdriver as a lever to unclip the four clips **B** in turn.

Snow chains

SNOW CHAINS

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.

i The snow chains must be fitted only to the driving wheels. They must never be fitted to "space-saver" type spare wheels.

Use only the chains designed to be fitted to the type of wheel fitted to your vehicle:

Original tyre size	Maximum link size.
195/65 R15	9 mm
195/70 R15	
205/65 R15	
215/55 R16	
215/50 R17	


For more information on snow chains, contact a PEUGEOT dealer or a qualified workshop.

i Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.

Advice on installation

- ☞ If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
- ☞ Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
- ☞ Fit the chains following the instructions provided by the manufacturer.
- ☞ Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
- ☞ Stop your vehicle and check that the snow chains are correctly tightened.

i Avoid driving on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. It is recommended that before you leave, you practise fitting the snow chains on a level and dry surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.

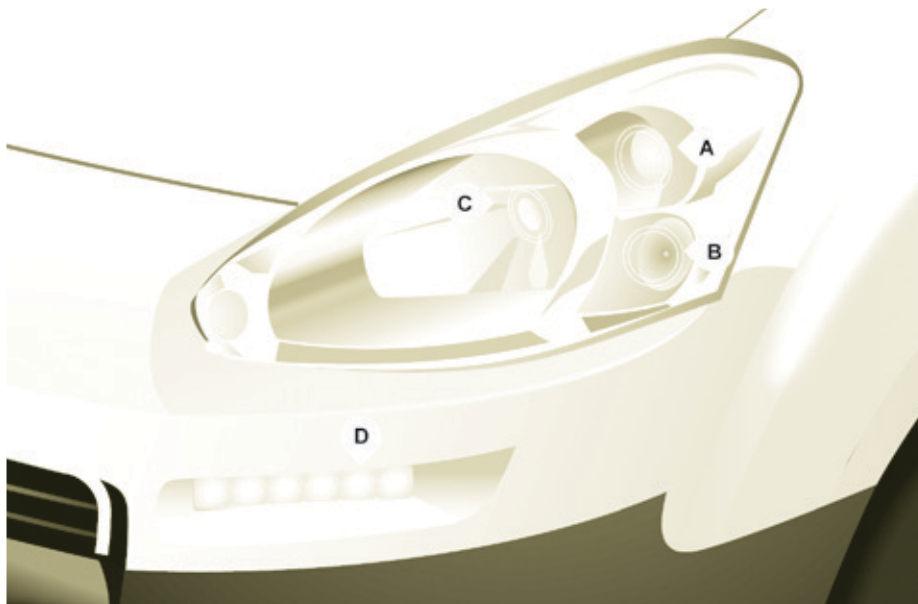

CHANGING A BULB

Open the bonnet. To access the bulbs, reach behind the headlamp unit. Carry out the operations in reverse order to refit each bulb and check that the bonnet is closed securely.

! Halogen bulbs must be changed with the headlamp off. Wait a few minutes (risk of serious burns). Do not touch the bulb directly with your fingers, use lint-free cloths. It is normal for condensation to form inside the headlamps. Regular use of the vehicle eliminates this misting.

The bulbs must be changed with the ignition off or with the battery disconnected. Wait approximately 3 minutes after changing the bulb before reconnecting the battery.


Check that the lamps operate correctly after each operation.

High pressure washing

! When using this type of washing on stubborn dirt, do not persist on the headlamps, the lamps and their edges to avoid damaging their coating and seals.

Types of bulb

Various types of bulb are fitted to your vehicle. To remove them:



Type A

All glass bulb: pull gently as it is fitted by pressure.



Type B

Bayonet bulb: press on the bulb then turn it anticlockwise.



Type C



Halogen bulb: release the retaining spring from its housing.



Type D

Light emitting diode (LED): for replacement of the daytime running lamps, contact a PEUGEOT dealer or a qualified workshop.

Changing a bulb

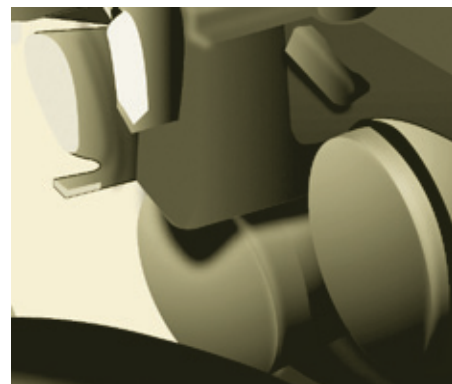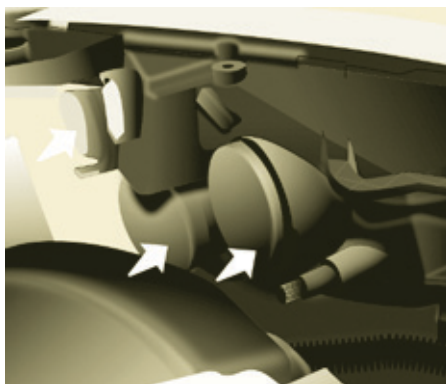

FRONT LAMPS

1. Dipped / Main beam headlamps

Type C, H4 - 55W

- Remove the centre cover by pulling the flexible rubber tab.
- Disconnect the electrical connector.
- Release the retaining tab.
- Change the bulb taking care to align the metal part with the grooves on the lamp.
- Reposition the retaining tab.
- Ensure that the cover is refitted correctly all round to assure correct sealing.

2. Sidelamps


Type A, W5W - 5W

- Remove the cover by pulling the flexible rubber tab.
- Remove the bulb holder fitted by pressure by pulling the connector.
- Change the bulb.
- Ensure that the cover is refitted correctly all round to assure correct sealing.

3. Direction indicators

Type B, PY21W - 21W (amber)

- Remove the cover by pulling the flexible rubber tab.
- Turn the bulb holder a quarter turn anticlockwise.
- Remove the bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.
- Ensure that the cover is refitted correctly all round to assure correct sealing.

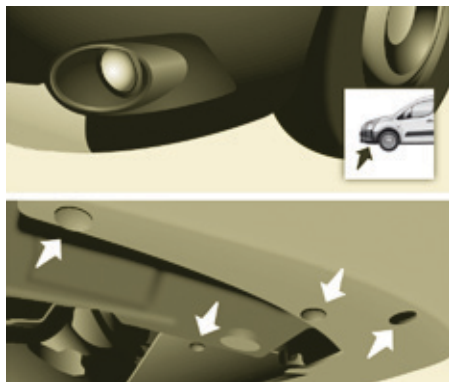

4. Foglamps

Type C, H1 - 55W

- Remove the three clips and the screw securing the wheelarch liner, located below the bumper.
- Move the wheelarch liner upwards.
- Remove the foglamp by removing the screw, which can be accessed via the hole provided for this purpose in the bumper, using a Torx® 30 screwdriver.
- Unclip the foglamp by squeezing the clip to release it.
- Remove the foglamp from the outside.
- Turn the yellow cover a 1/4 turn to open.
- Separate the clips which secure the base of bulb on each side to release the bulb.
- Remove the bulb by pulling, keeping it straight.
- Insert the new bulb, reposition the clips around the base of the bulb and carry out the operations in reverse order to put the lamp unit and the bumper back in position.



SIDE REPEATER

Type A, WY5W - 5W (amber)

- Push the repeater towards the rear and disengage it by pulling the front.
- Contact a PEUGEOT dealer to obtain a new repeater which is a sealed component.
- To refit, engage the repeater towards the rear and bring it towards the front.




Front / Rear

COURTESY LAMPS

Type A, 12V5W - 5W

- Unclip the lens by sliding a screwdriver in the slots on each side of the courtesy lamp.
- Pull the bulb out and change it.
- Clip the lens in its housing and ensure that it is secured correctly.

Changing a bulb

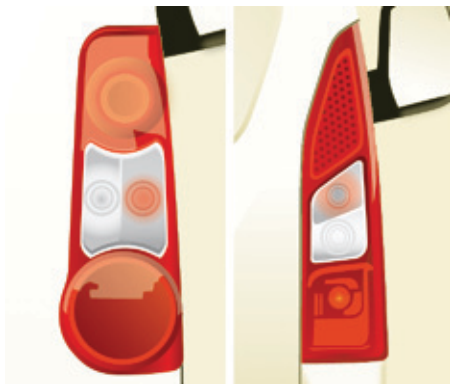

REAR LAMPS

For more information concerning the bulbs, refer to the "Types of bulb".

1. Brake lamps / sidelamps

Type B, P21/5W - 21/5W

2. Direction indicators

Type B, PY21W - 21W (amber)

3. Reversing lamps

Type B, P21W - 21W

4. Foglamps

Type B, P21W - 21W

- Identify the faulty bulb then open the rear doors to 180°.
Refer to the "Access" section of chapter 2.
- Remove the two fixing bolts using the screwdriver stored in the tool kit under the right-hand seat.
- Pull the lamp unit from the outside.
- Holding the lamp, disconnect the electrical connector.

- Move aside the 4 tabs then extract the bulb holder.
- Remove the faulty bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

When removing the lamp unit:

- with tailgate, pull the lamp unit towards the centre of the vehicle,
- with hinged doors, pull the lamp unit towards you.

High pressure washing



When using this type of washing on stubborn dirt, do not persist on the headlamps, the other lamps and their edges to avoid damaging their coating and seals.



When refitting, take care to reposition the tabs and the supply wire correctly to avoid trapping the wire.

After changing the rear direction indicator bulb, the reinitialisation time is above 2 minutes.




NUMBER PLATE LAMPS

Type A, W5W - 5W

With tailgate

- Disengage the plastic lens using a screwdriver.
- Change the bulb.
- Replace the plastic lens and press on it.

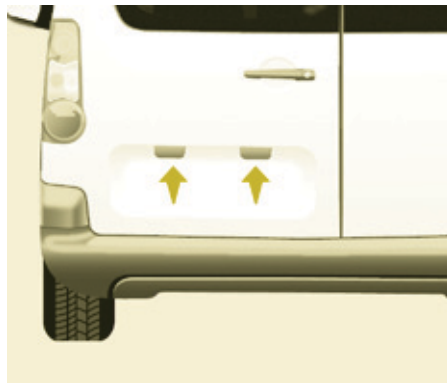

With hinged doors

- Unclip the interior trim.
- Disconnect the connector by moving aside its tab.
- Turn the bulb holder a quarter turn anticlockwise.
- Change the bulb.
- Put the bulb holder back in place and reconnect the connector.
- Put the trim back in place.



THIRD BRAKE LAMP

Type A, W16W - 16W

- Unscrew the two nuts.
- Push the pins.
- If necessary, disconnect the connector to remove the lamp.
- Change the bulb.

Changing a fuse

CHANGING A FUSE

The fuseboxes are located:

- in the lower dashboard on the left-hand side (behind the cover),
- under the bonnet (near the battery).

The information given concerns only those fuses which can be changed by the user using the tweezer, located behind the dashboard storage compartment on the right-hand side. For any other work, visit a PEUGEOT dealer or a qualified workshop.

i Motor trade technicians: for complete information on the fuses and relays, refer to the "Repair Manual" diagrams via the dealer network.


PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by the PEUGEOT network and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.



Removing and fitting a fuse

Before replacing a fuse, the cause of the incident must be identified and rectified.


- Use the tweezer.

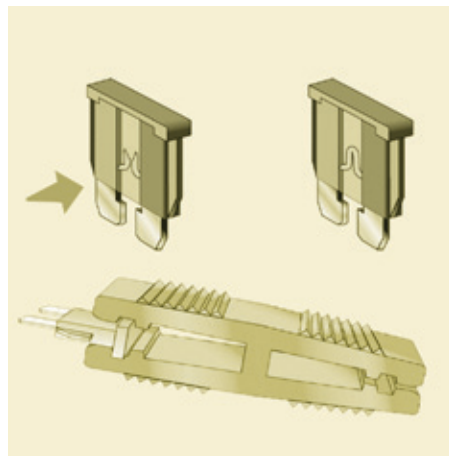

Always replace a failed fuse with a fuse of the same rating.

DASHBOARD FUSES


Tilt the cover to gain access to the fuses.

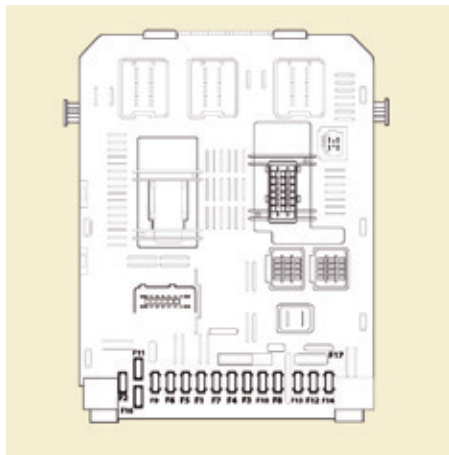

Fuses F	Amperes A	Allocation
1	15	Rear wiper
2	-	Spare
3	5	Airbag
4	10	Air conditioning, diagnostic socket, mirror control, headlamp beam
5	30	Electric windows
6	30	Locks
7	5	Rear courtesy lamp, front map reading lamp, roof console
8	20	Audio equipment, screen, tyre under-inflation detection, alarm and siren
9	30	Front and rear 12V socket
10	15	Central column
11	15	Low current ignition switch
12	15	Rain and sunshine sensor, airbag
13	5	Instrument panel
14	15	Parking sensors, digital air conditioning controls, hands-free phone kit
15	30	Locks
16	-	Spare
17	40	Rear screen/mirrors demist/defrost

Changing a fuse


PASSENGER COMPARTMENT FUSES

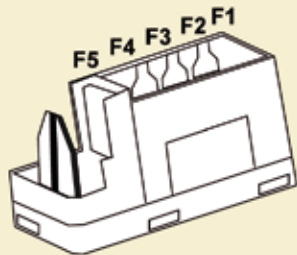

Fuses F	Amperes A	Allocation
1	-	Spare
2	20	Heated seats
3	-	Spare
4	15	Folding mirrors relay
5	15	Refrigeration equipment socket relay

FUSES UNDER THE BONNET

After opening the bonnet, unclip and tilt the corresponding box to gain access to the fuses.

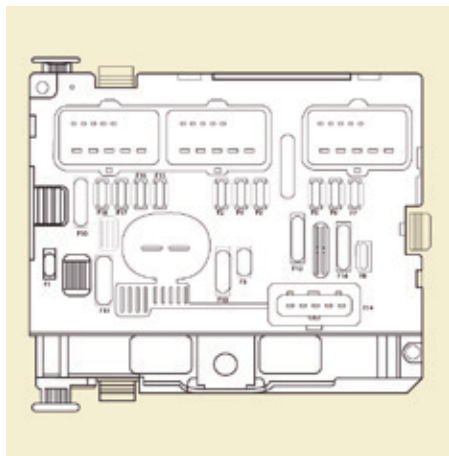

Fuses F	Amperes A	Allocation
1	20	Engine management
2	15	Horn
3	10	Front and rear wash-wipe pump
4	20	Headlamp wash pump
5	15	Engine components
6	10	Steering wheel angle sensor, DSC
7	10	Brake switch, clutch switch
8	25	Starter
9	10	Headlamp beam motor, parc management unit
10	30	Engine components
11	40	Spare
12	30	Wipers
13	40	Built-in systems interface
14	30	Pump
15	10	Right-hand main beam headlamp
16	10	Left-hand main beam headlamp
17	15	Right-hand dipped beam headlamp
18	15	Left-hand dipped beam headlamp

Changing a wiper blade



CHANGING A WIPER BLADE

Placing the windscreen wiper blades in the special position

- Less than a minute after switching off the ignition, press the wiper stalk downwards to position the wiper blades along the windscreen pillars (special position).


Changing a front wiper blade

- Lift the wiper arm.
- Unclip the blade and remove it.
- Fit the new blade.
- Push back the wiper arm.

To return the windscreen wipers to their normal position, switch on the ignition and operate the wiper stalk.

Changing the rear wiper blade

- Lift the wiper arm, then unclip the blade and remove it.
- Fit the new blade and push back the wiper arm.

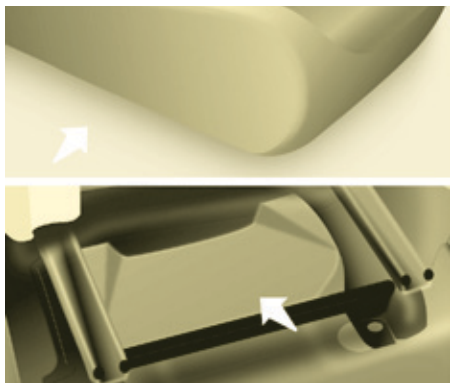


BEING TOWED

The towing eye is stored in the tool kit, located under the left-hand seat.

Without lifting (4 wheels on the road)

You should always use a towing bar.

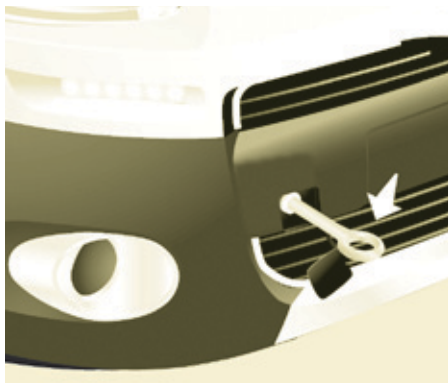

From the front


- Unclip the cover by pressing the bottom part.
- Fully screw in the removable towing eye.

From the rear

- Unclip the cover using a coin or the flat part of the towing eye,
- Fully screw in the removable towing eye.

Lifting (2 wheels on the road only)

It is preferable to raise the vehicle using professional lifting equipment.

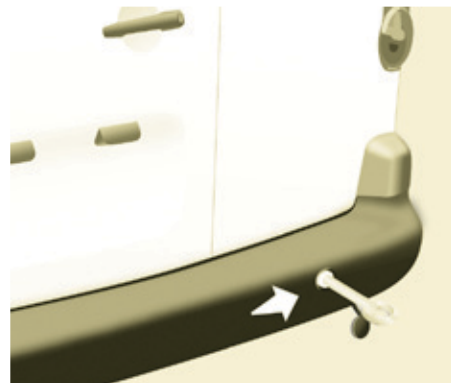

- i** When towing with the engine switched off, there is no braking or steering assistance.

Vehicles fitted with a manual gearbox (Diesel version)

In the case of vehicles fitted with a manual gearbox, the gear lever must be in the neutral position, failure to observe this special condition may result in damage to transmission and braking components and the absence of braking assistance when the engine is started again.


Dimensions



DIMENSIONS (MM)

L	Overall length		4380
H	Overall height		1801-1862
A	Wheelbase		2728
B	Front overhang		925
C	Rear overhang		727
D	Width over panels:	without mirrors	1810
		with mirrors	2112
E	Width of front tracks		1505-1507
F	Width of rear tracks		1554-1556
-	Length of the loading surface to the seat	Row 2	990
		Row 2, seat fully folded	1343
		With front passenger seat folded	3000

Dimensions

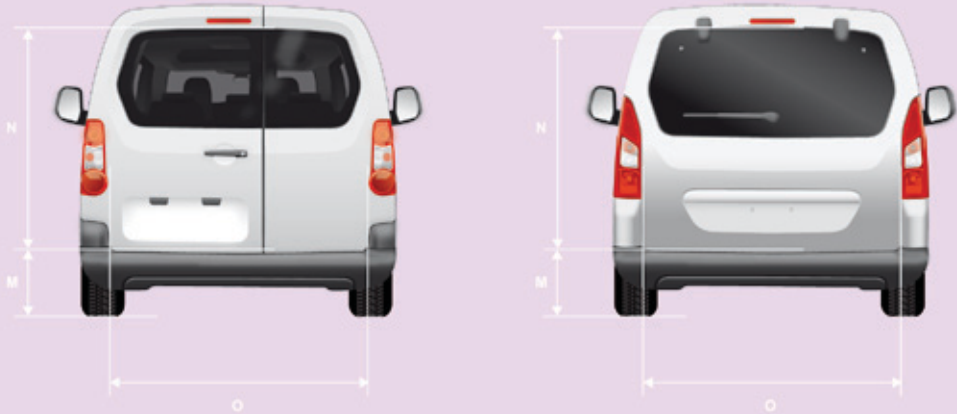

		REAR DOORS (mm)		
M	Max threshold with 205/65 R15 tyre and tailgate trim	582		
		Hinged doors		Tailgate
		Small	Large	
N	Useable opening height (under panel)	1118		
O	Width	495	543	1582



		SLIDING SIDE DOORS (mm)
P	Useable height	1009
Q	Useablewidth	640
-	Height under raised tailgate	1892

WEIGHTS AND TOWED LOADS (KG)

General points

For more information, refer to your registration certificate.

In each country, it is imperative that the towed loads authorised by local legislation are complied with. To find out your vehicle's towing capacities and its gross train weight, consult a PEUGEOT dealer.


The speed of a towing vehicle must not exceed 50 mph (80 km/h) (comply with the legislation in force in your country).

With load transfer, the braked trailer weight can be increased, on condition that the equivalent of this load is removed from the vehicle so that the GTW is not exceeded. Warning: towing with a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1000 metres; the towed load mentioned must be reduced by 10 % for each additional 1000 metres.

High ambient temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the ambient temperature is higher than 37 °C, limit the towed weight.

The kerb weight is equal to the weight without load + driver (75 kg) + fuel tank filled to 90%.

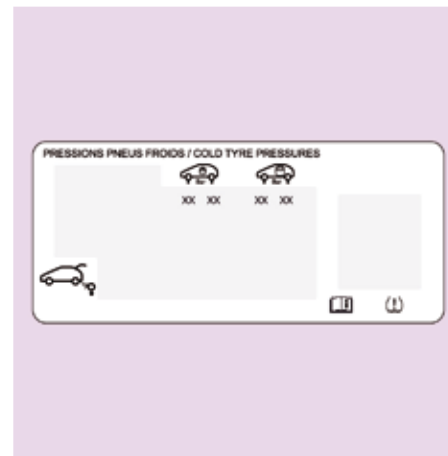

IDENTIFICATION MARKINGS

A. Manufacturer's plate.

B. Serial number.

This is engraved on the front right wheelarch.

C. Tyres and paint colour code.

The label **C**, on the front door gives:

- the wheel and tyre sizes,
- the brands of tyres recommended by the manufacturer,
- the tyre pressures (the tyre pressures must be checked when the tyres are cold, at least once a month),
- the paint colour code.



This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update the current handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.

The rear bodywork components of your vehicle have been designed to minimise spray.

Printed in the EU

11-13

Anglais



PEUGEOT

Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS

Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P. 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 171 284 850 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z

